

 
CONTENTS

SR. NO.	DESCRIPTION	PAGE NO.
01	MUFFLER ASSEMBLY.....	07
02	RADIATOR COOLANT ASSEMBLY.....	08
03	AIR CLEANER ASSEMBLY.....	10
04	OIL COOLER.....	11
05	ENGINE AND ASSEMBLY.....	12
06	PROPELLER SHAFT ASSEMBLY.....	13
07	CLUTCH HOUSING ASSEMBLY.....	15
08	4WD DRIVE GEAR.....	16
09	PTO VALVE ASSEMBLY.....	17
10	P.T.O DRIVE SHAFT.....	19
11	IPTO CLUTCH ASSY.....	20
12	SPEED CONTROL.....	21
13	DIFFERENTIAL CAGE ASSEMBLY.....	23
14	RANGE GEARS & PINION SHAFT ASSEMBLY.....	25
15	MID P.T.O GEARS.....	27
16	PTO SHAFT ASSEMBLY.....	28
17	REAR TRANSMISSION CASE.....	30
18	HST ASSEMBLY.....	31
19	4WD LINKAGE ASSEMBLY.....	32
20	FINAL DRIVE LH.....	34
21	FINAL DRIVE RH.....	36
22	HYDRAULIC BODY ASSEMBLY.....	38
23	DIRECTION CONTROL VALVE ASSEMBLY.....	45
24	DIRECTION CONTROL VALVE -2.....	47
25	HYDRAULIC PUMP & PIPE ASSEMBLY 1.....	48
26	HYDRAULIC PUMP & PIPE ASSEMBLY 2.....	50
27	PC-DC LEVER ASSEMBLY.....	52
28	FENDER & FOOTREST ASSEMBLY.....	54
29	HML PTO LEVER ASSEMBLY.....	56
30	PARKING BRAKE ASSEMBLY.....	58
31	FENDER BRACKET AND SEAT ASSEMBLY.....	59
32	ROPS ASSEMBLY.....	60
33	BONNET & FRONT MESH ASSEMBLY 1.....	62

34	BONNET & FRONT MESH ASSEMBLY 2.....	64
35	FUEL TANK ASSEMBLY.....	66
36	DASH BOARD ASSEMBLY.....	68
37	FUEL PUMP PIPE 1.....	70
38	FUEL PUMP PIPE 2.....	71
39	POWER STEERING ASSEMBLY.....	72
40	BRAKE PEDAL & LINKAGE.....	74
41	DIFF LOCK.....	76
42	CHASIS FRAME ASSEMBLY.....	77
43	FRONT DIFFERENTIAL CAGE ASSEMBLY.....	79
44	FRONT DIFFERENTIAL PINION SHAFT ASSEMBLY.....	80
45	FLANGE DIFFERENTIAL HOUSING ASSEMBLY LH.....	82
46	FLANGE DIFFERENTIAL HOUSING ASSEMBLY RH.....	83
47	VERTICAL SHAFT HOUSING ASSEMBLY LH.....	84
48	VERTICAL SHAFT HOUSING ASSEMBLY RH.....	86
49	TIE ROD ASSEMBLY 508.....	88
50	THREE POINT LINKAGE.....	89
51	HAND ACCELERATOR.....	91
52	FRONT & REAR WHEEL ASSEMBLY.....	93
53	FRONT & REAR WHEEL ASSEMBLY (AGRI-WIDE).....	94
54	FRONT & REAR WHEEL ASSEMBLY (TURF).....	95
55	FRONT & REAR WHEEL ASSEMBLY (FLOTATION).....	96
56	FRONT & REAR WHEEL ASSEMBLY (GARDEN GALAXY PRO).....	97
57	FRONT & REAR WHEEL ASSEMBLY (WIDER F-AGRI).....	98
58	BEACON LAMP ASSEMBLY.....	99
59	SWING DRAWBAR ASSEMBLY.....	100
60	DECALS & STICKERS.....	101
61	ELECTRICAL COMPONENT 1.....	108
62	ELECTRICAL COMPONENT 2.....	109
63	ELECTRICAL COMPONENT 3.....	110

ABBREVIATIONS


AR	AS REQUIRED
ASSY	ASSEMBLY
FT	FULL THREAD
HT	HALF THREAD
FIP	FUEL INJECTION PUMP
HYD	HYDRAULIC
L	LENGTH
LH	LEFT HAND SIDE
RH	RIGHT HAND SIDE
PTO	POWER TAKE OFF
DCV	DIRECTION CONTROL VALVE
PS	POWER STEERING
RM	RAW MATERIAL
RPM	REVOLUTION PER MINUTES
T	TEETH
4WD	FOUR WHEEL DRIVE
HML	HIGH MEDIUM LOW
PC-DC	POSITION CONTRL – DRAFT CONTROL
ROPS	ROLL OVER PROTECTIVE STRUCTURE
TCA	TRANSMISSION CONTROL ASSEMBLY
LED	LIGHT EMITING DIOD
ETS	ENERGIZED TO STOP
Lt.	LITRE
QRC	QUICK RELEASE COUPLING
N/A	NOT APPLICABLE

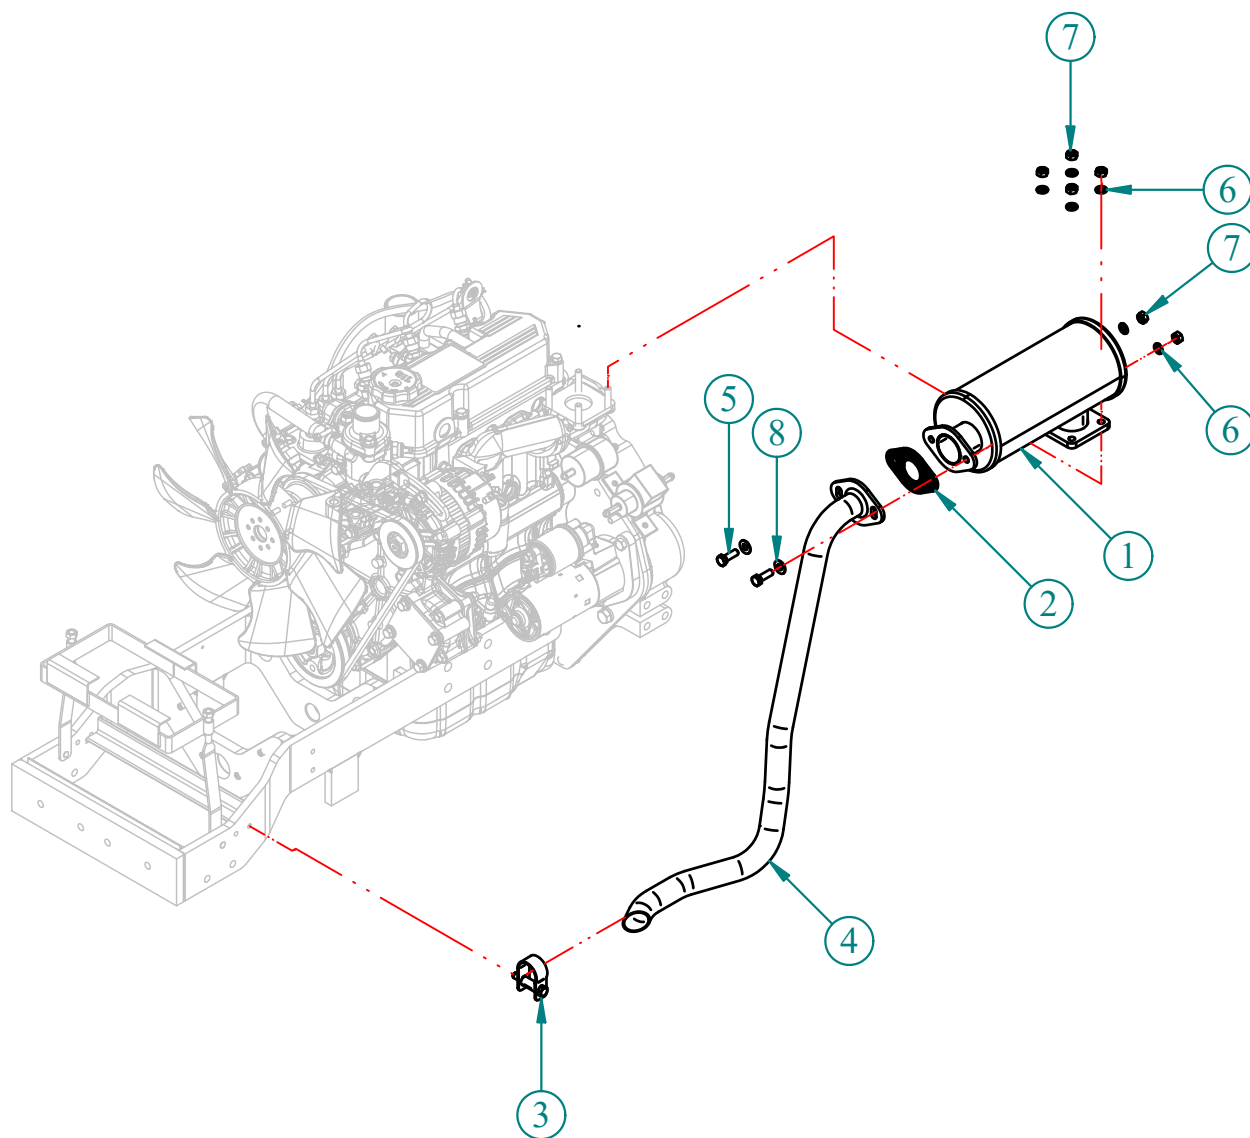

MUFFLER ASSEMBLY


MODEL :- HST
ASSEMBLY NO. :-11306669

Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11202476	SILENCER (263)	1	
2	11203024	GASKET,EXTENSION PIPE	1	
3	11205953	CLAMP - SILENCER EXTENSION PIPE	1	
4	11206457	EXTENSION SILENCER	1	
5	11500051	HEX. BOLT M8 X 25 (F.T.)	2	
6	11500052	SPRING WASHER - 8mm	6	
7	11500082	HEX NUT M8	6	
8	11501068	PLAIN WASHER Ø8.5XØ19X1.5	2	

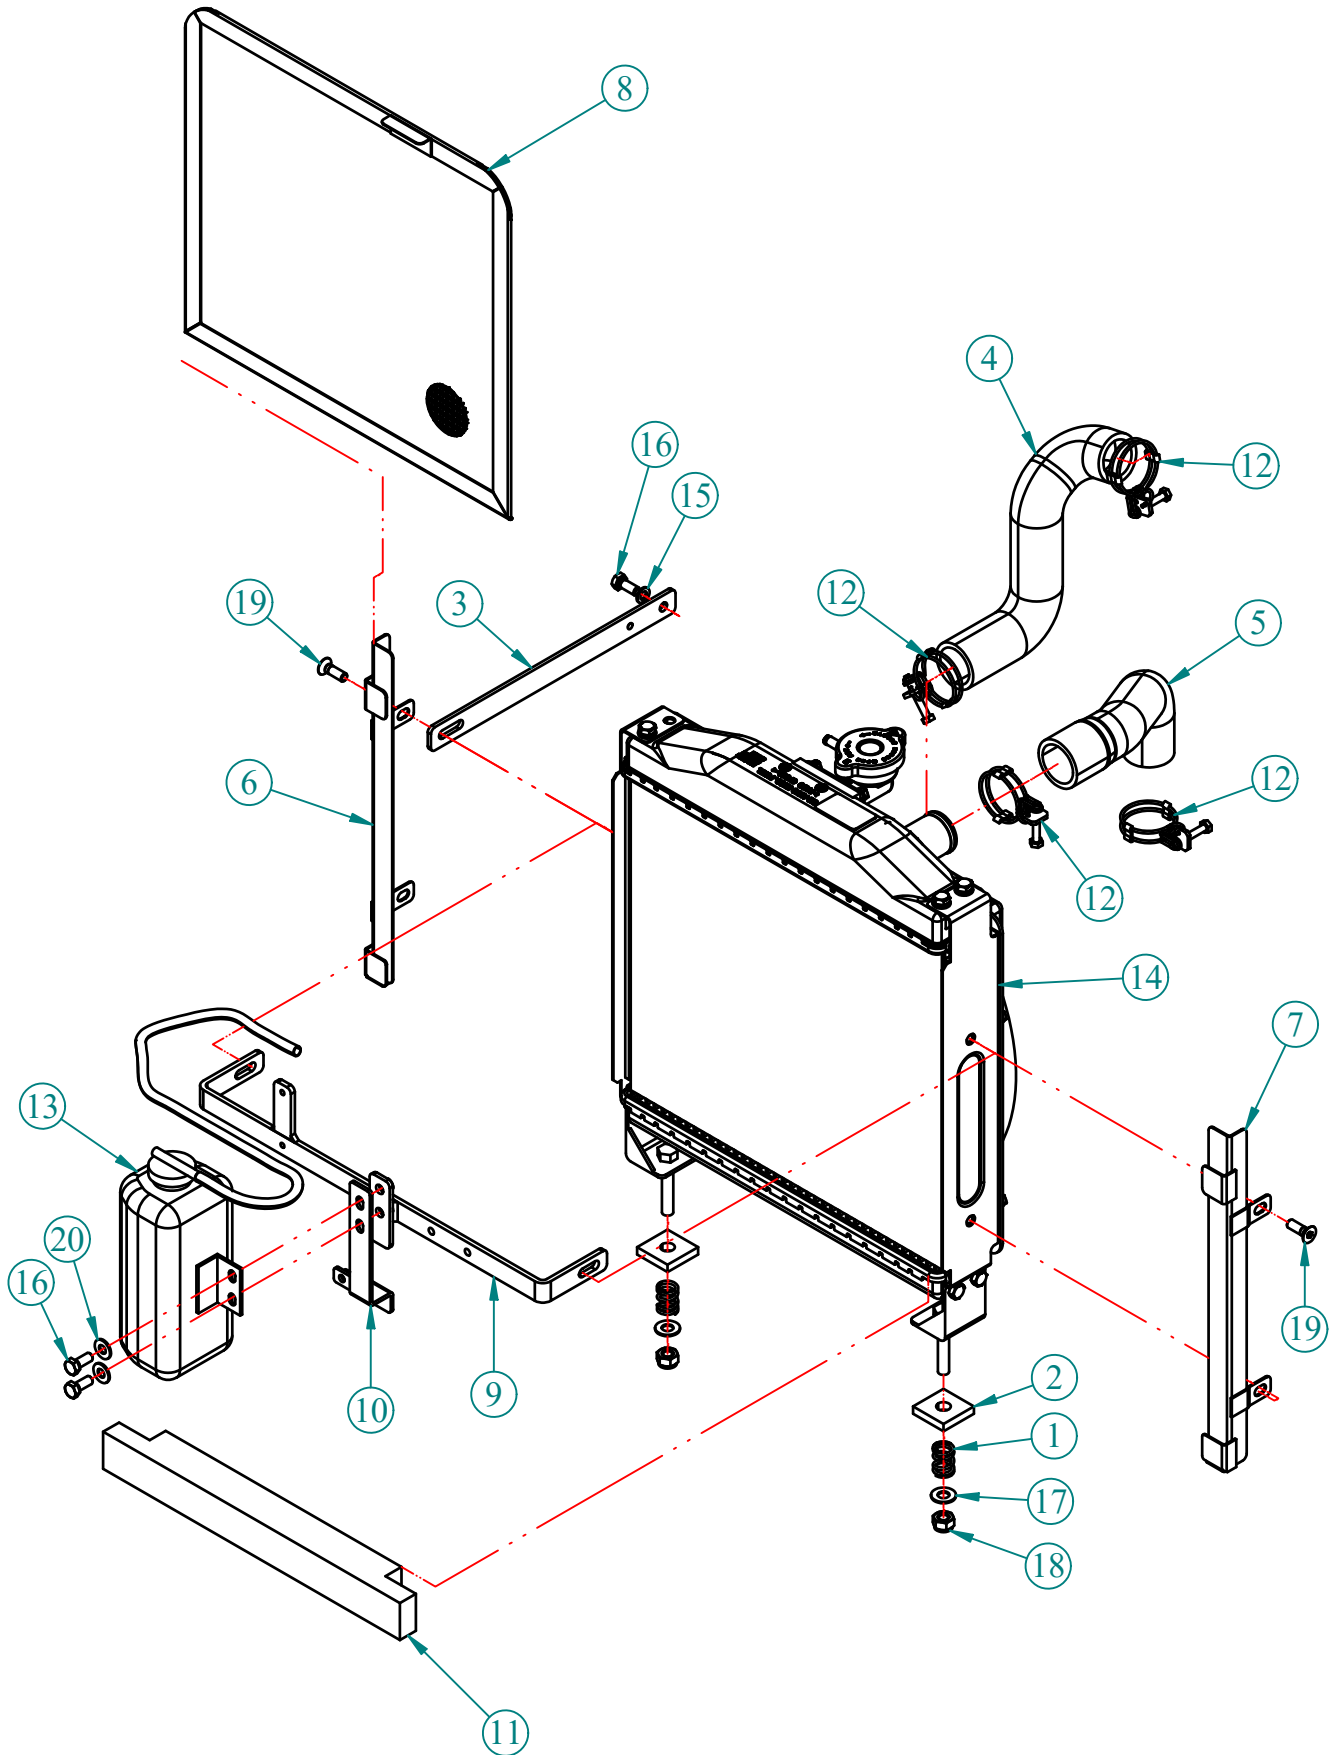 

RADIATOR COOLANT ASSEMBLY
MODEL :- HST
ASSEMBLY NO. :-11308117


Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11201642	SPRING, RADIATOR	2	
2	11201643	DAMPER, RADIATOR	2	
3	11202436	SUPPORT, RADIATOR	1	
4	11202438	HOSE PIPE SUCTION, RADIATOR (263)	1	
5	11202439	HOSE PIPE DELIVERY, RADIATOR (263)	1	
6	11205114	GUARD SUPPORT RH	1	
7	11205115	GUARD SUPPORT LH	1	
8	11205122	THREADED GUARD (S.M.-2L)	1	
9	11205339	BRACKET, COOLANT RECOVERY TANK	1	
10	11206467	BRACKET OIL COOLER MTG. (TOP)	1	
11	11206807	FOAM FRONT SEALING	1	
12	11206995	Wire Clamp Ø41-Ø48	4	
13	11402046	COOLANT RECOVERY TANK ASSEMBLY	1	
14	11402454	RADIATOR ASSEMBLY (2.0 Lt)	1	
15	11500052	SPRING WASHER - 8mm	1	
16	11500067	HEX. BOLT M8X20 (F.T)	3	
17	11500078	PLAIN WASHER Ø10.5xØ22x1.5	2	
18	11500676	NYLOCK NUT M10	2	
19	11500766	CSK HEAD SCREW WITH HEX. SOCKET M8x25	2	
20	11501068	PLAIN WASHER Ø8.5XØ19X1.5	2	

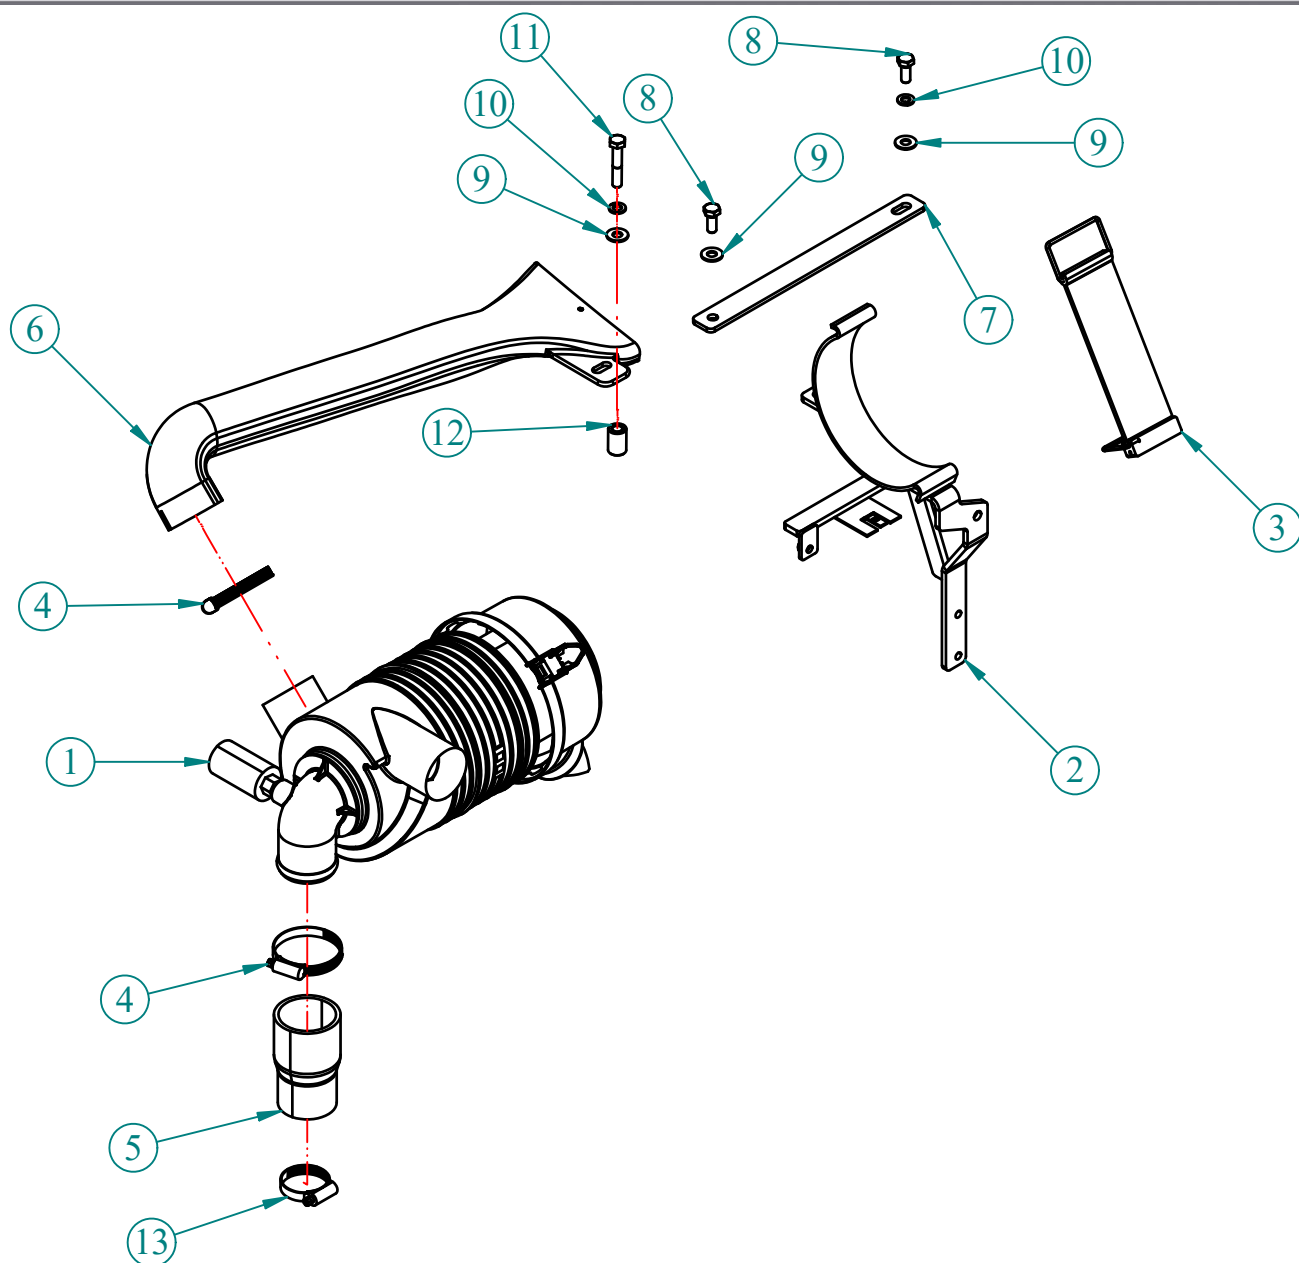 

AIR CLEANER ASSEMBLY

MODEL :- HST
ASSEMBLY NO. :-11305546

Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11403022	DRY AIR CLEANER ASSY. (273)	1	
2	11205338	BRACKET, AIR CLEANER	1	
3	11205524	AIR CLEANER STRAP	1	
4	11200022	CLAMP FOR AIR CLEANER	2	
5	11202437	HOSE PIPE, AIR INTAKE (273)	1	
6	11205363	DUCT AIR CLEANER INLET	1	
7	11205429	AIR CLEANER SUPPORT	1	
8	11500067	HEX. BOLT M8X20 (F.T)	2	
9	11501068	PLAIN WASHER Ø8.5XØ19X1.5	3	
10	11500052	SPRING WASHER - 8mm	2	
11	11505248	HEX.BOLT M8x45(8.8)	1	
12	11205430	SPACER (Ø9xØ16x24)	1	
13	11201787	CLAMP, HOSE PIPE (2A-50)	1	

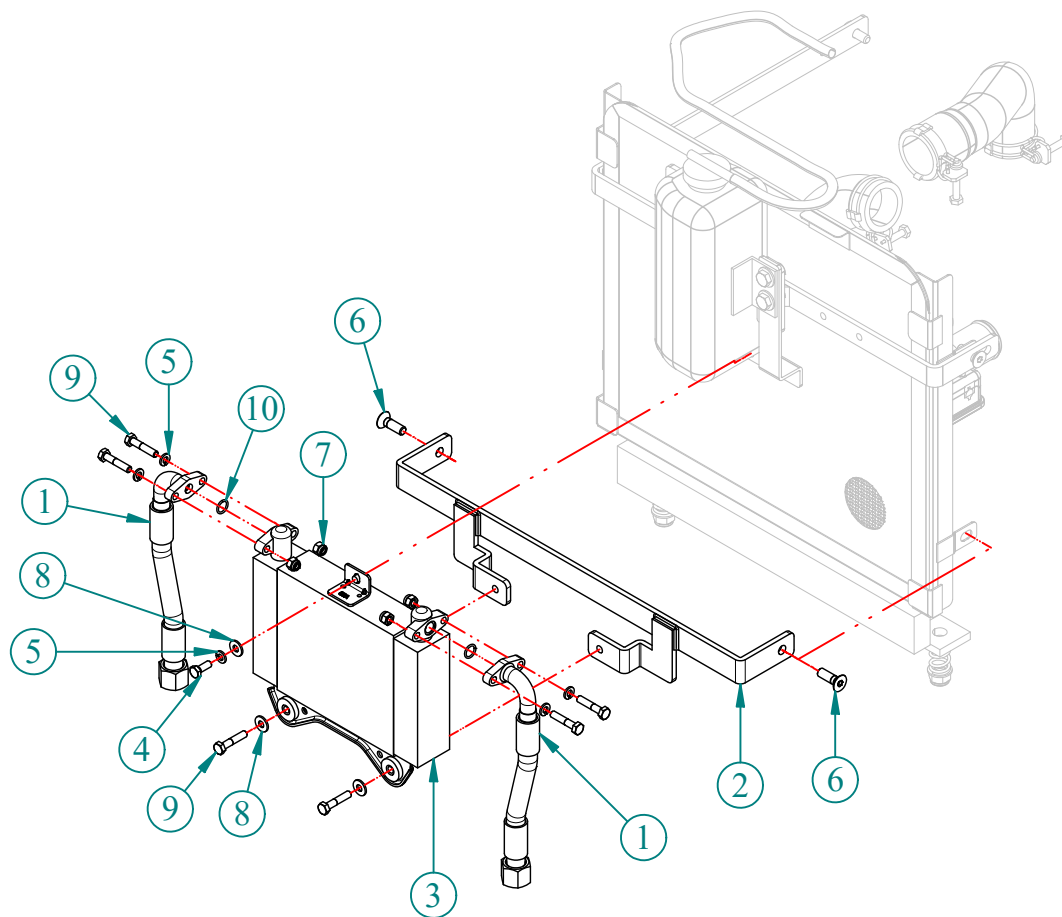 


OIL COOLER

MODEL :- HST

ASSEMBLY NO. :-11306674


Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11206468	FLEXIBLE PIPE OIL COOLER	2	
2	11208637	BRACKET OIL COOLER MTG.	1	
3	11404744	OIL COOLER ASSEMBLY	1	
4	11500071	HEX. BOLT M6x15 (F.T.)8.8	1	
5	11500073	SPRING WASHER - 6 mm	5	
6	11500766	CSK HEAD SCREW WITH HEX. SOCKET M8x25	2	
7	11500947	NYLOCK NUT M6	4	
8	11501015	PLAIN WASHER Ø6.5xØ15x1.5	3	
9	11501058	HEX. BOLT M6 X 12 (F.T.)	6	
10	11506472	O - RING 10.5 X 1.5	2	

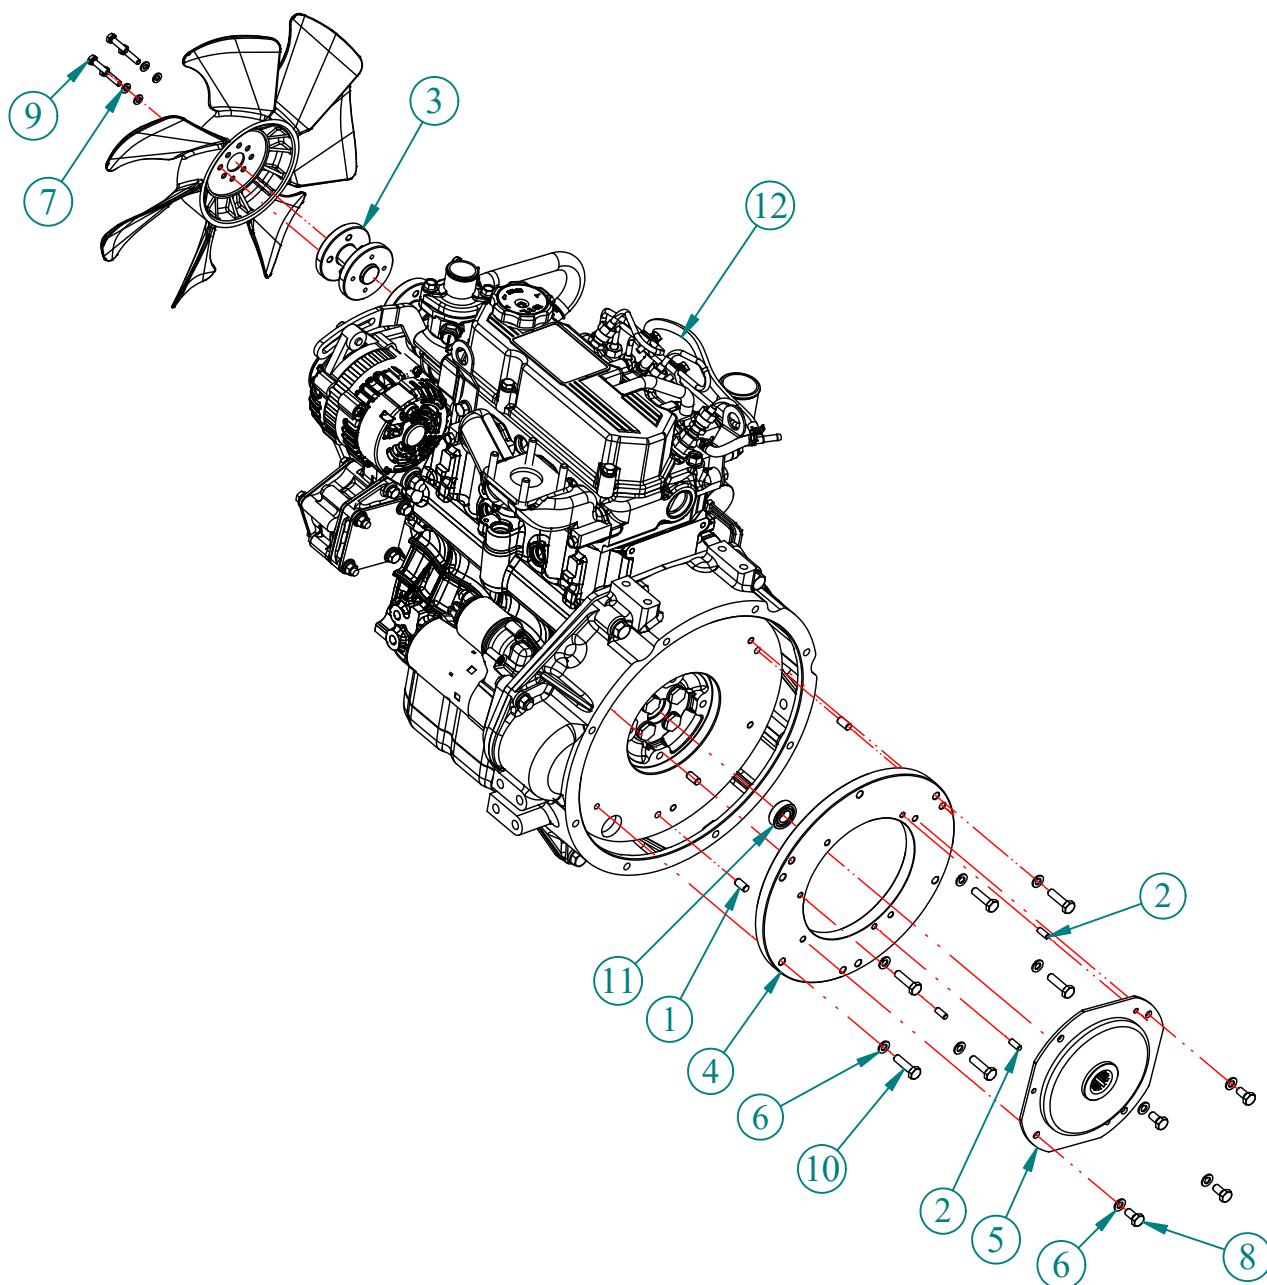 

ENGINE & ASSEMBLY

MODEL :- HST
ASSEMBLY NO. :-11306670


Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11200119	PIN, DOWEL Ø8 X 16	3	
2	11200199	PIN DOWEL (6X16)	3	
3	11202763	DISTANCE, FAN RADIATOR	1	
4	11206458	ADAPTER PLATE	1	
5	11404960	HST DAMPER	1	
6	11500052	SPRING WASHER - 8mm	10	
7	11500073	SPRING WASHER - 6 mm	4	
8	11500076	HEX BOLT M8 x 16	4	
9	11500195	HEX. BOLT M6x25 (F.T.)8.8	4	
10	11504702	HEX BOLT M8 X 30 (F.T.)	6	
11	11505249	BALL BEARING 6002 ZZ	1	
12	31404562	ENGINE S3L2-18.2/2500-3 CYL (EU STAGE-V)	1	

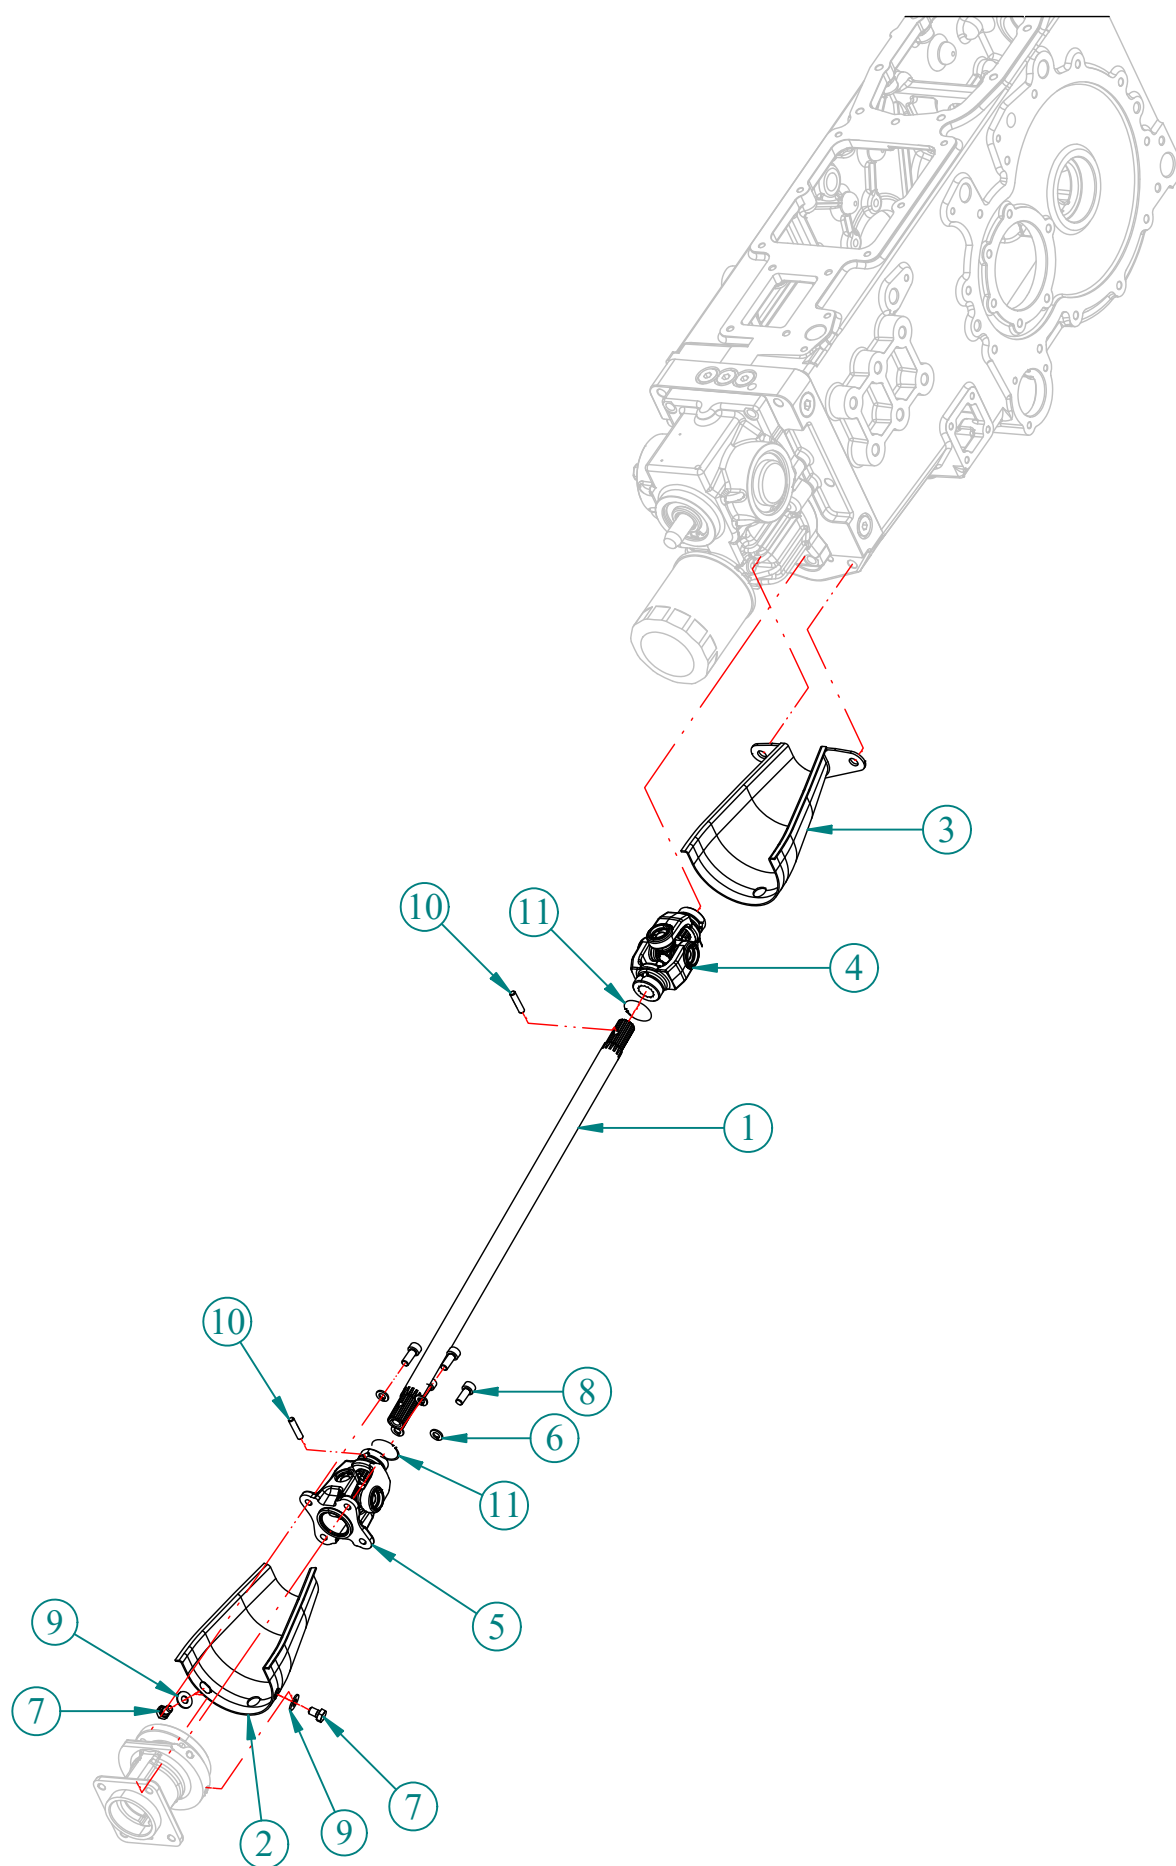 

PROPELLER SHAFT ASSEMBLY

MODEL :- HST
ASSEMBLY NO. :-11306672

Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11206461	SHAFT,PROPLER	1	
2	11206462	UNIVERSAL JOINT COVER FRONT	1	
3	11206463	UNIVERSAL JOINT COVER REAR	1	
4	11404893	UNIVERSAL JOINT ASSY.(YOKE WITH YOKE)	1	
5	11404894	UNIVERSAL JOINT ASSY.(CROSS HOLDER WITH	1	
6	11500052	SPRING WASHER - 8mm	4	
7	11500489	HEX BOLT M8 X 12 (F.T.)	2	
8	11500599	ALLEN BOLT M8x20 (F.T)	4	
9	11501068	PLAIN WASHER Ø8.5XØ19X1.5	2	
10	11504969	DOWEL PIN UNIVERSAL JOINT	2	
11	11504970	SNAP RING FOR SHAFT DIA 32	2	

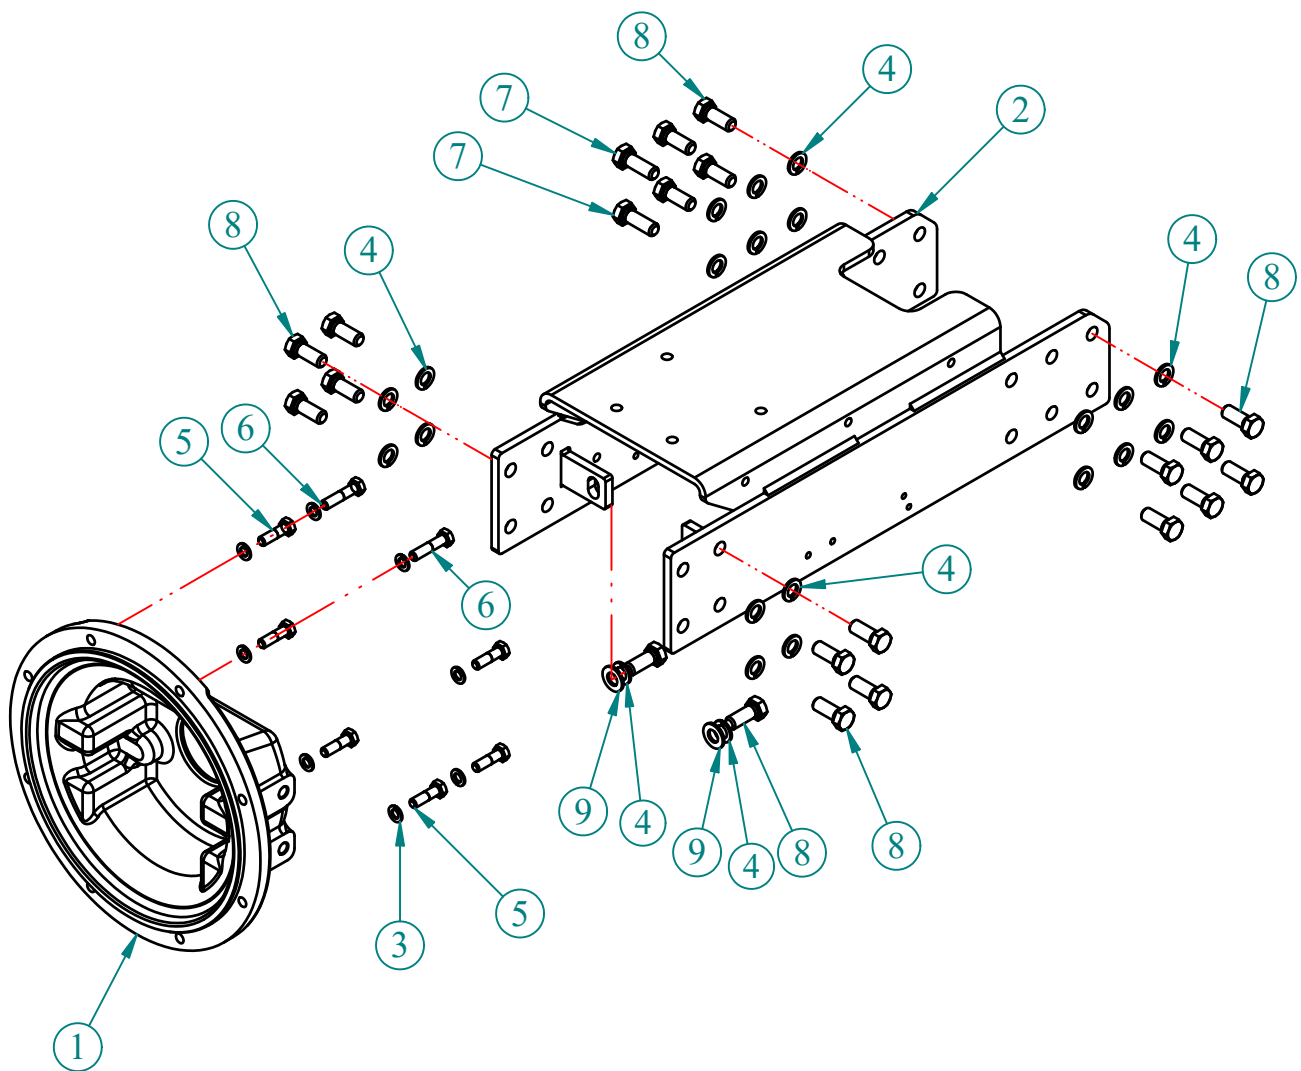 


CLUTCH HOUSING ASSEMBLY

MODEL :- HST

ASSEMBLY NO. :-11306671

Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11206459	CLUTCH HOUSING	1	
2	11206460	STEERING FRAME ASSLY	1	
3	11500062	SPRING WASHER - 10mm	8	
4	11501826	SPRING WASHER - 14mm	22	
5	11503270	HEX BOLT M10x35x1.25P [10.9]	6	
6	11505035	HEX.BOLT 10x45x1.25P(H.T)	2	
7	11506551	HEX BOLT M14X40 (10.9)	2	
8	11506838	HEX BOLT M14x35 (10.9)	20	
9	21503329	PLAIN WASHER Ø14.5 X Ø28 X 2.5	2	

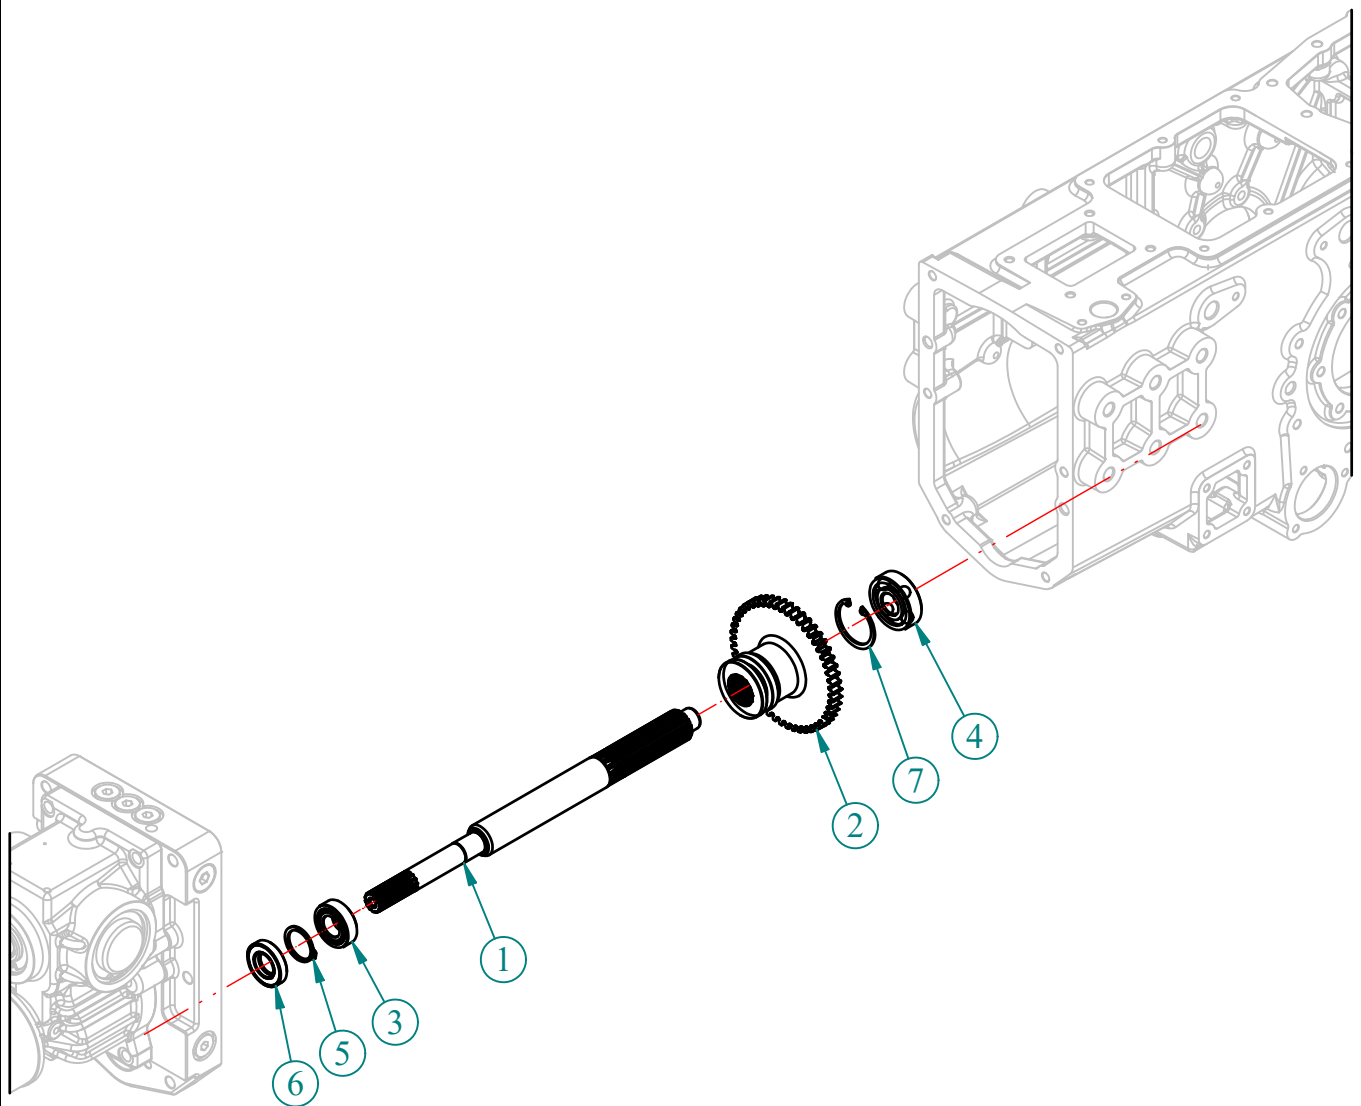 


4WD DRIVE GEAR

MODEL :- HST


ASSEMBLY NO. :-11306681

Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11206515	DRIVE SHAFT 4WD	1	
2	11206516	GEAR,4WD (50-T)	1	
3	11501825	BALL BEARING 6004-ZZ	1	
4	11502518	BALL BEARING 6304	1	
5	11503052	CIRCLIP, EXTERNAL Ø30X2	1	
6	11506514	OIL SEAL_ 20x42x8	1	
7	11508629	CIRCLIP, INTERNAL (Ø45X1.75)	1	

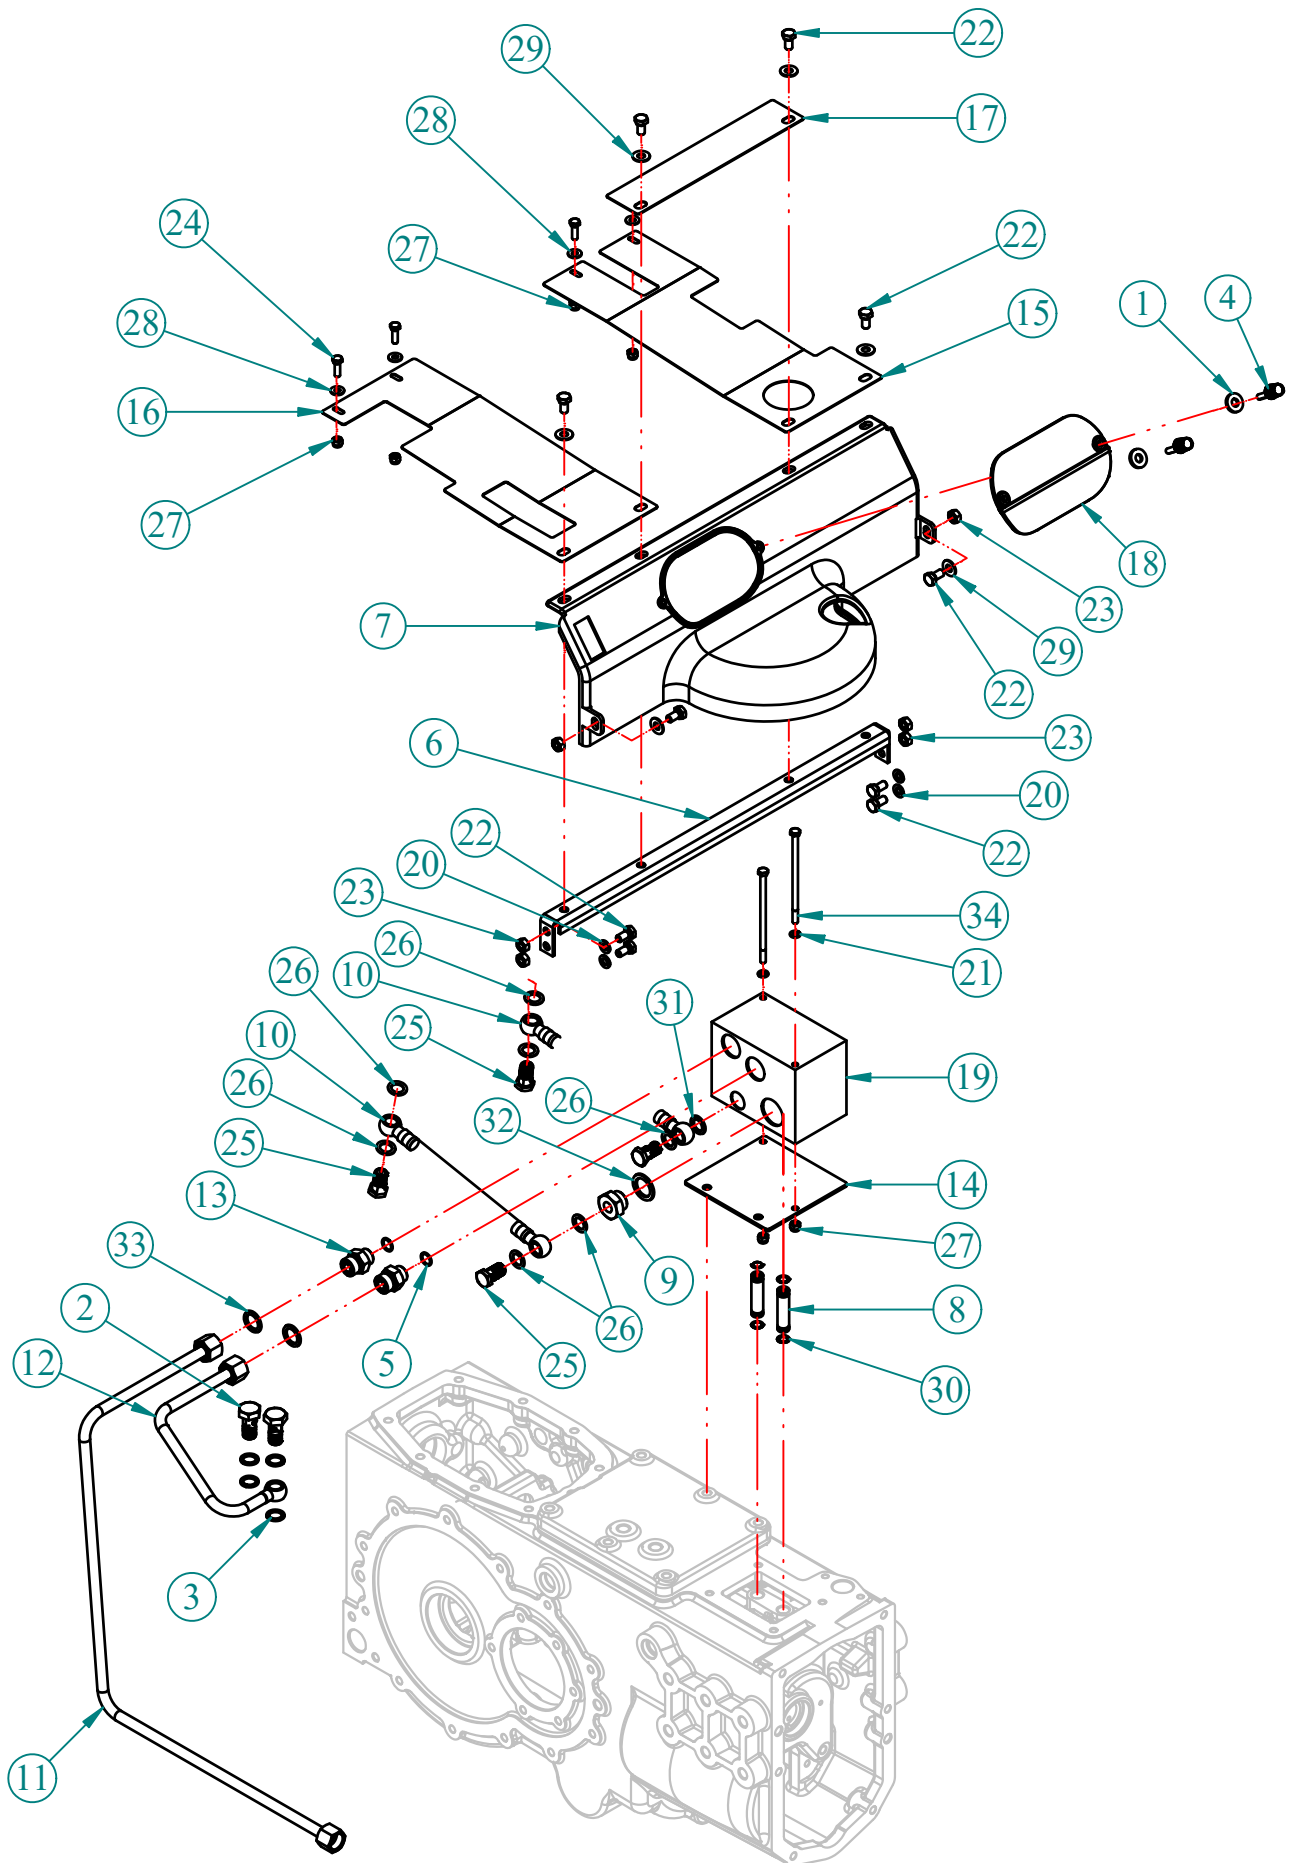 

PTO VALVE ASSEMBLY
MODEL :- HST
ASSEMBLY NO. :-11306697


Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11201535	RUBBER WAHSER Ø9xØ22x3.5	2	
2	11205286	BANJO BOLT 9/16" - 18 UNF 2A L-30	2	
3	11205317	COPPER WASHER Ø14.5XØ20X1.5	4	
4	11205321	KNOB M6X25	2	
5	11205329	O-RING 12.42X1.78	2	
6	11206618	SUPPORT COVER IPTO VALVE	1	
7	11206619	COVER,IPTO VALVE	1	
8	11206620	PIPE , PTO	2	
9	11206623	NIPPLE M22	1	
10	11206625	PIPE IPTO T1 T2	2	
11	11206627	PIPE IPTO INLET	1	
12	11206628	PIPE IPTO VALVE TO IPTO CLUTCH	1	
13	11207707	NIPPLE M18 13/16"UN	2	
14	11207712	EXTEND PLATE IPTO VALVE	1	
15	11207726	COVER HYDRAULIC LH	1	
16	11207727	COVER HYDRAULIC RH	1	
17	11207728	COVER HYDRAULIC FRONT	1	
18	11208642	COVER WINDOW IPTO	1	
19	11404943	PTO VALVE ASSEMBLY	1	
20	11500052	SPRING WASHER - 8mm	4	
21	11500073	SPRING WASHER - 6 mm	2	
22	11500076	HEX BOLT M8 x 16	10	
23	11500082	HEX NUT M8	6	
24	11500426	HEX. BOLT M6x20 (F.T)8.8	4	
25	11500461	BANJO BOLT M14	4	
26	11500462	COPPER WASHER Ø14xØ21x1.5	7	
27	11500947	NYLOCK NUT M6	6	
28	11501015	PLAIN WASHER Ø6.5xØ15x1.5	4	
29	11501068	PLAIN WASHER Ø8.5XØ19X1.5	6	
30	11506621	O RING Ø9.8X1.9	4	
31	11506831	DOWTY SEAL M14	1	
32	11506832	DOWTY SEAL M22	1	
33	11506833	DOWTY SEAL M18	2	
34	11506834	HEX BOLT M6 X120 (8.8)	2	

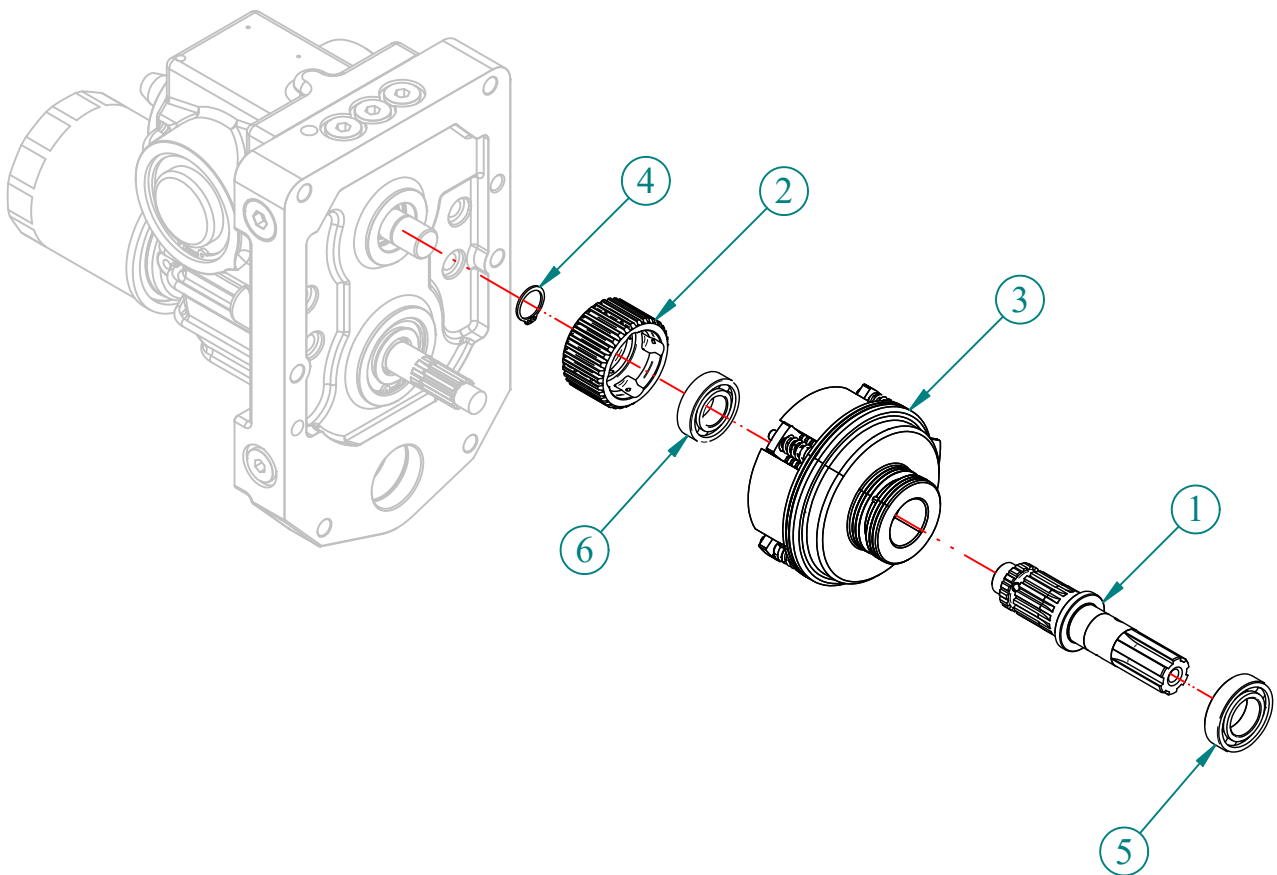 

P.T.O DRIVE SHAFT

MODEL :- HST
ASSEMBLY NO. :-11306683


Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11205131	PTO DRIVE SHAFT	1	
2	11206525	HUB , IPTO	1	
3	11404745	IPTO CLUTCH ASSY	1	
4	11501064	CIRCLIP EXTERNAL Ø20X1.2	1	
5	11506526	BALL BEARING 6005	1	
6	21504519	BALL BEARING 6004	1	

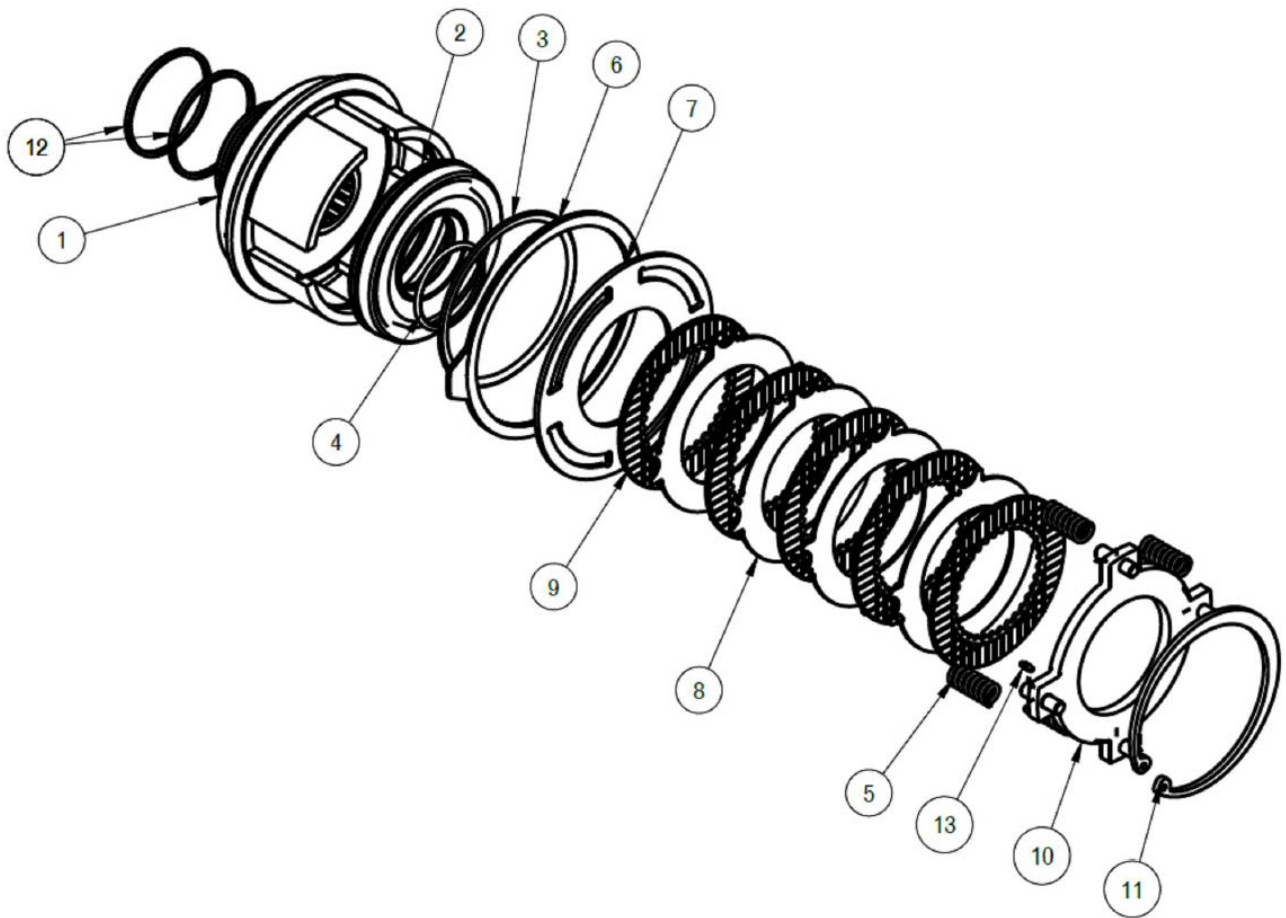 

IPTO CLUTCH ASSY


ASSEMBLY NO. :- 11308562

Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11408611	HOUSING -IPTO	1	
2	11408612	PISTON -IPTO	1	
3	11408613	PISTON RING OD-IPTO	1	
4	11408614	PISTON RING ID-IPTO	1	
5	11408615	SPRING-IPTO	4	
6	11408616	BRAKE DISC-IPTO	1	
7	11408617	BRAKE PLATE -IPTO	1	
8	11408618	INTERMEDIATE PLATE-IPTO	4	
9	11408619	FRICTION DISC-IPTO	5	
10	11408620	PRESSURE PLATE ASSEMBLY-IPTO	1	
11	11408621	CIRCLIP-IPTO	1	
12	11408622	SEAL RING-IPTO	2	
13	11408623	RUBBER SEPARATOR-IPTO	8	

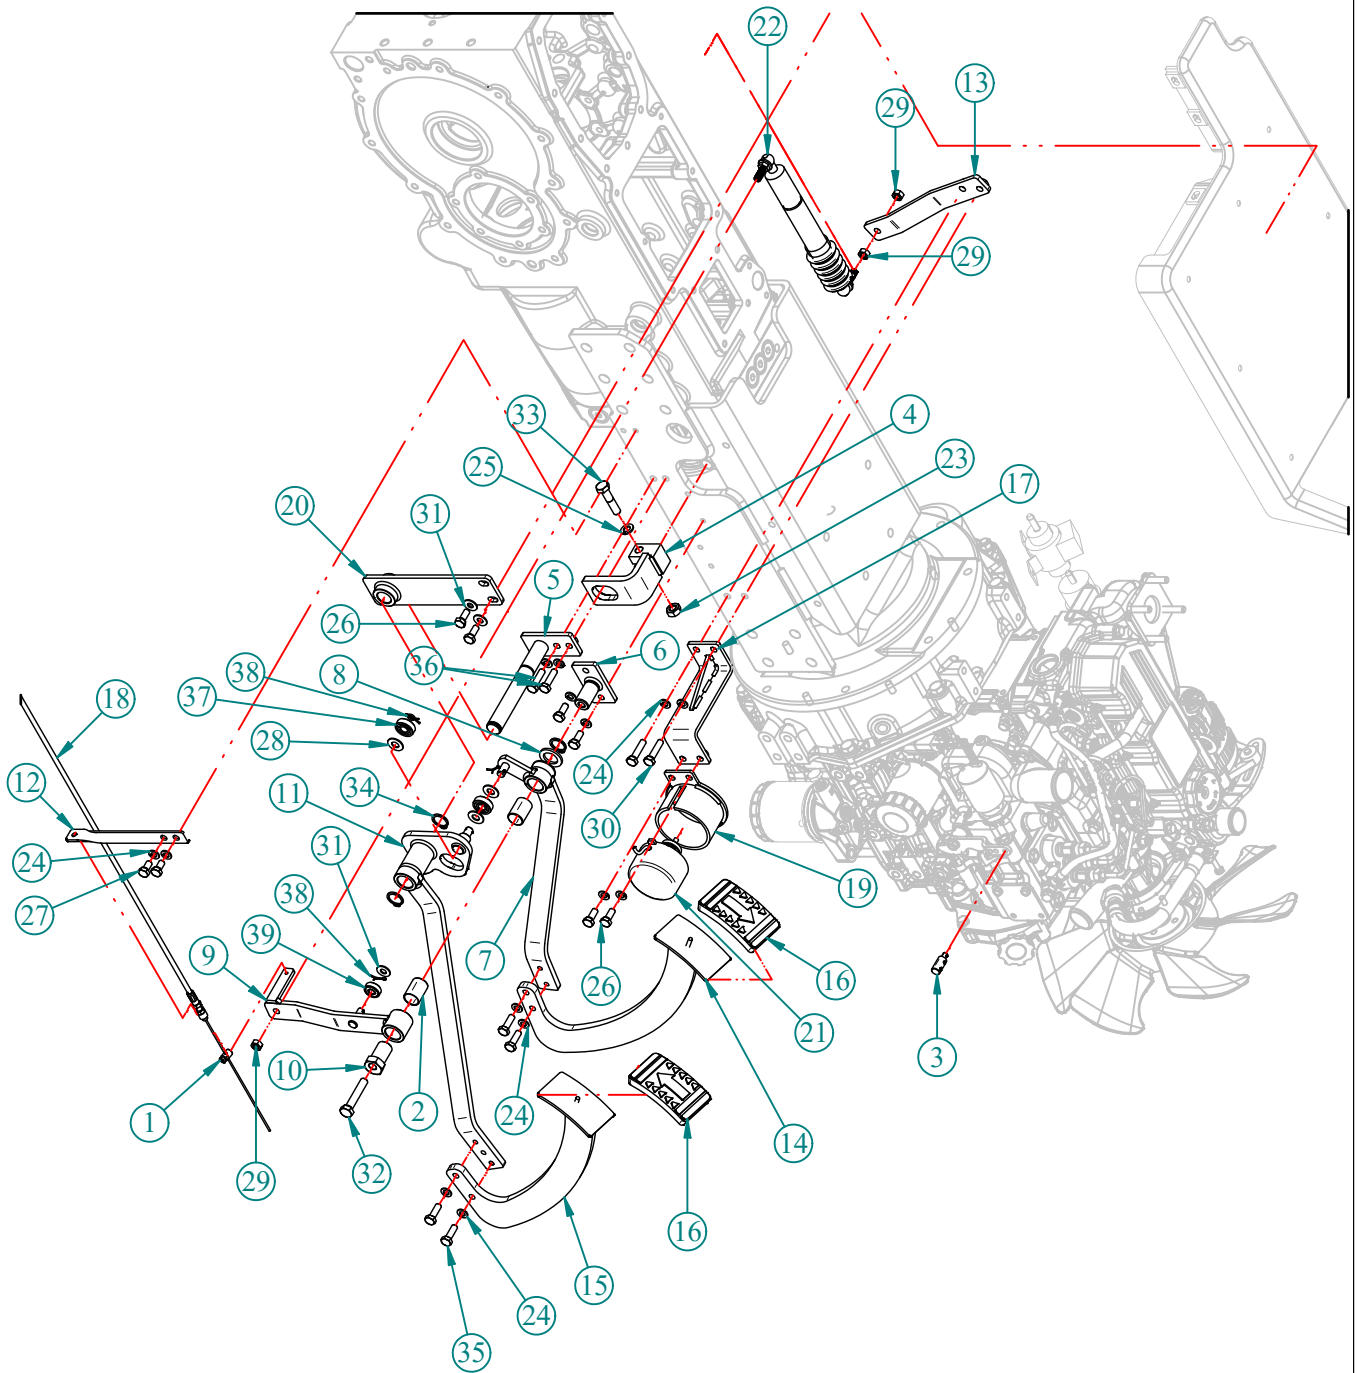 


SPEED CONTROL
MODEL :- HST
ASSEMBLY NO. :-11306675

Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11200337	ACCELERATOR CABLE END SCREW (MINDIL)	2	
2	11203195	BUSH, LEVER IGUS (Ø20 x Ø22 x 30)	2	
3	11206085	PIN - ACCELERATOR CABLE	1	
4	11206473	HST,HOLDER	1	
5	11206474	PIN , REVERSE	1	
6	11206475	PIN , FORWARD	1	
7	11206476	ARM , FORWARD	1	
8	11206477	PLAIN WASHER(Ø20.5XØ32X3)	1	
9	11206480	ARM ,CAM	1	
10	11206482	PIN,NEUTRAL	1	
11	11206483	ARM, REVERSE	1	
12	11206484	MOUNTING, FOOT ACCELERATOR CABLE	1	
13	11206487	MOUNTING, GAS SPRING	1	
14	11206488	PEDAL ,FORWARD	1	
15	11206489	PEDAL , REVERSE	1	
16	11206490	PAD _SPEED CONTROL	2	
17	11206491	BRACKET -CRUISE CONTROL	1	
18	11206492	CABLE FOOT ACCELERATOR	1	
19	11206712	COVER,CRUISE CONTROL	1	
20	11208650	SUPPORT, PIN REVERSE	1	
21	11406101	CRUISE CONTROL SOLENOID	1	
22	11406427	GAS, SPRING	1	
23	11500024	HEX NUT M10	1	
24	11500052	SPRING WASHER - 8mm	14	
25	11500062	SPRING WASHER - 10mm	1	
26	11500067	HEX. BOLT M8X20 (F.T)	6	
27	11500076	HEX BOLT M8 x 16	2	
28	11500078	PLAIN WASHER Ø10.5xØ22x1.5	3	
29	11500082	HEX NUT M8	3	
30	11500396	HEX BOLT M8x35 (F.T.)	2	
31	11501068	PLAIN WASHER Ø8.5XØ19X1.5	3	
32	11501140	HEX BOLT M10x55 (F.T.) [8.8]	1	
33	11503277	HEX BOLT M10x45 (H.T.)	1	
34	11503297	CIRCLIP,EXTERNAL Ø20x1.75	3	
35	11504701	HEX BOLT M8x25 (F.T.) [10.9]	4	
36	11504702	HEX BOLT M8 X 30 (F.T.)	2	
37	11506478	BALL BEARING_ 60002rs	2	
38	11506479	SPLIT PIN Ø2 X 16	3	
39	11506481	BALL BEARING_ 6082rs	1	

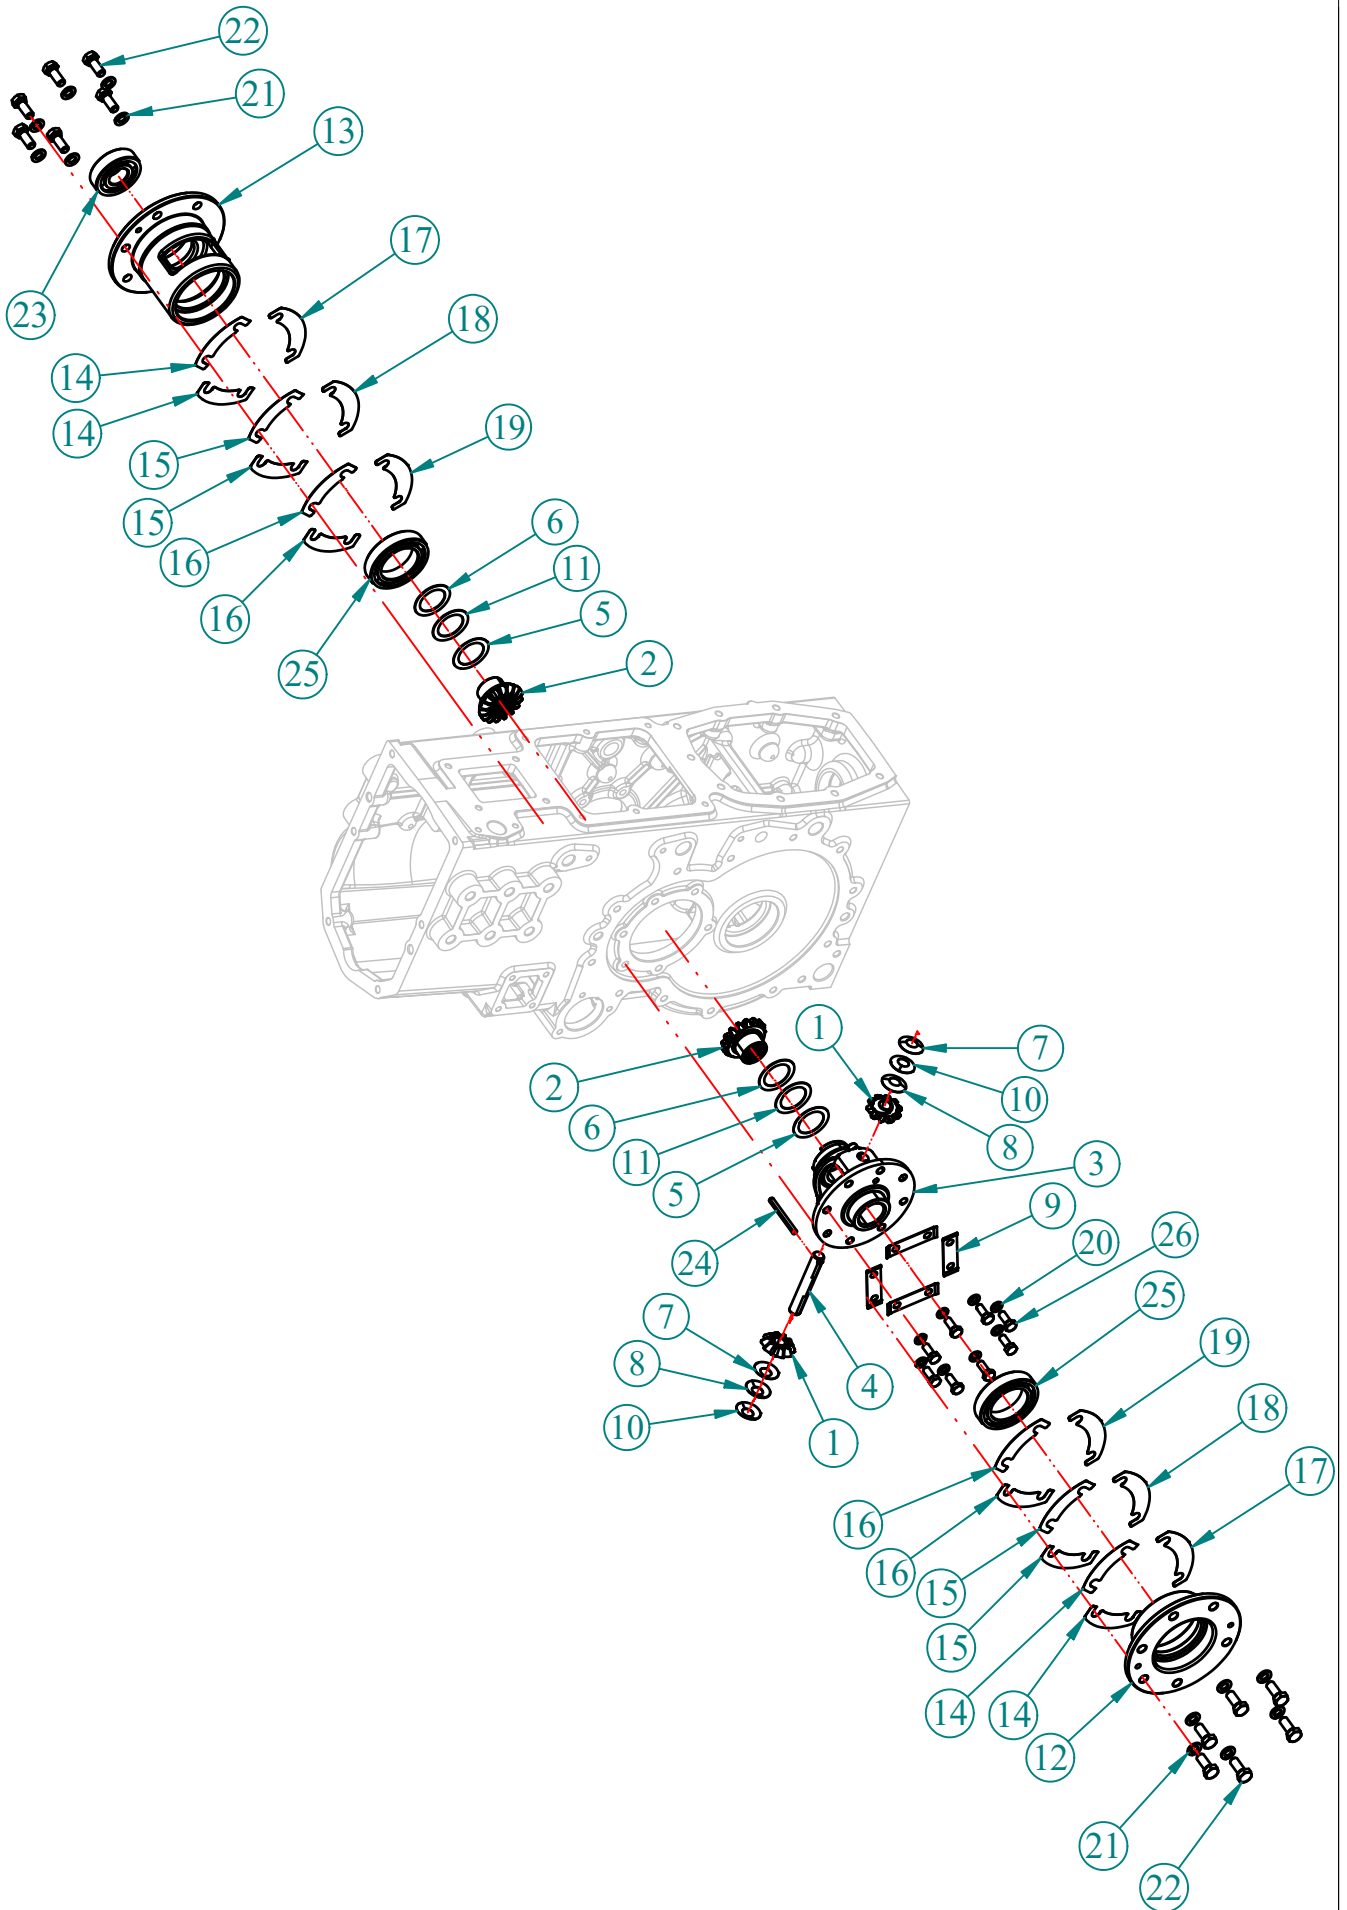 


DIFFERENTIAL CAGE ASSEMBLY
MODEL :- HST
ASSEMBLY NO. :-11306688

Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11202393	BEVEL GEAR 10T	2	
2	11202394	BEVEL GEAR 16 T	2	
3	11202411	CAGE - DIFFERENTIAL	1	
4	11202412	SHAFT, BEVEL GEAR 10T	1	
5	11202413	SHIM, BEVEL GEAR 16T (0.8)	2	AR
6	11202414	SHIM, BEVEL GEAR 16T (1.2)	2	AR
7	11202415	SHIM, BEVEL GEAR 10T (0.80)	2	AR
8	11202416	SHIM, BEVEL GEAR 10T (1.2)	2	AR
9	11202462	LOCK WASHER , CROWN WHEEL	4	
10	11205065	SHIM, BEVEL GEAR 10T (1.0)	2	
11	11205066	SHIM, BEVEL GEAR 16T (1.0)	2	
12	11206564	BEARING FLANGE LH	1	
13	11206565	BEARING FLANGE RH	1	
14	11206812	SHIM, FLANGE BEARING (0.15) (52.5°)	4	AR
15	11206813	SHIM, FLANGE BEARING (0.20) (52.5°)	4	AR
16	11206814	SHIM, FLANGE BEARING (0.50) (52.5°)	4	AR
17	11206815	SHIM, FLANGE BEARING (0.15) (75°)	2	AR
18	11206816	SHIM, FLANGE BEARING (0.20) (75°)	2	AR
19	11206817	SHIM, FLANGE BEARING (0.50) (75°)	2	AR
20	11500052	SPRING WASHER - 8mm	8	
21	11500062	SPRING WASHER - 10mm	12	
22	11500156	HEX. BOLT M10X25 (F.T.)	12	
23	11501466	BALL BEARING 6305	1	
24	11502409	SLOTTED SPRING PIN Ø6 x 60	1	
25	11502519	BALL BEARING 6010	2	
26	11505602	HEX. BOLT M8X20 (F.T) 10.9 GRADE	8	

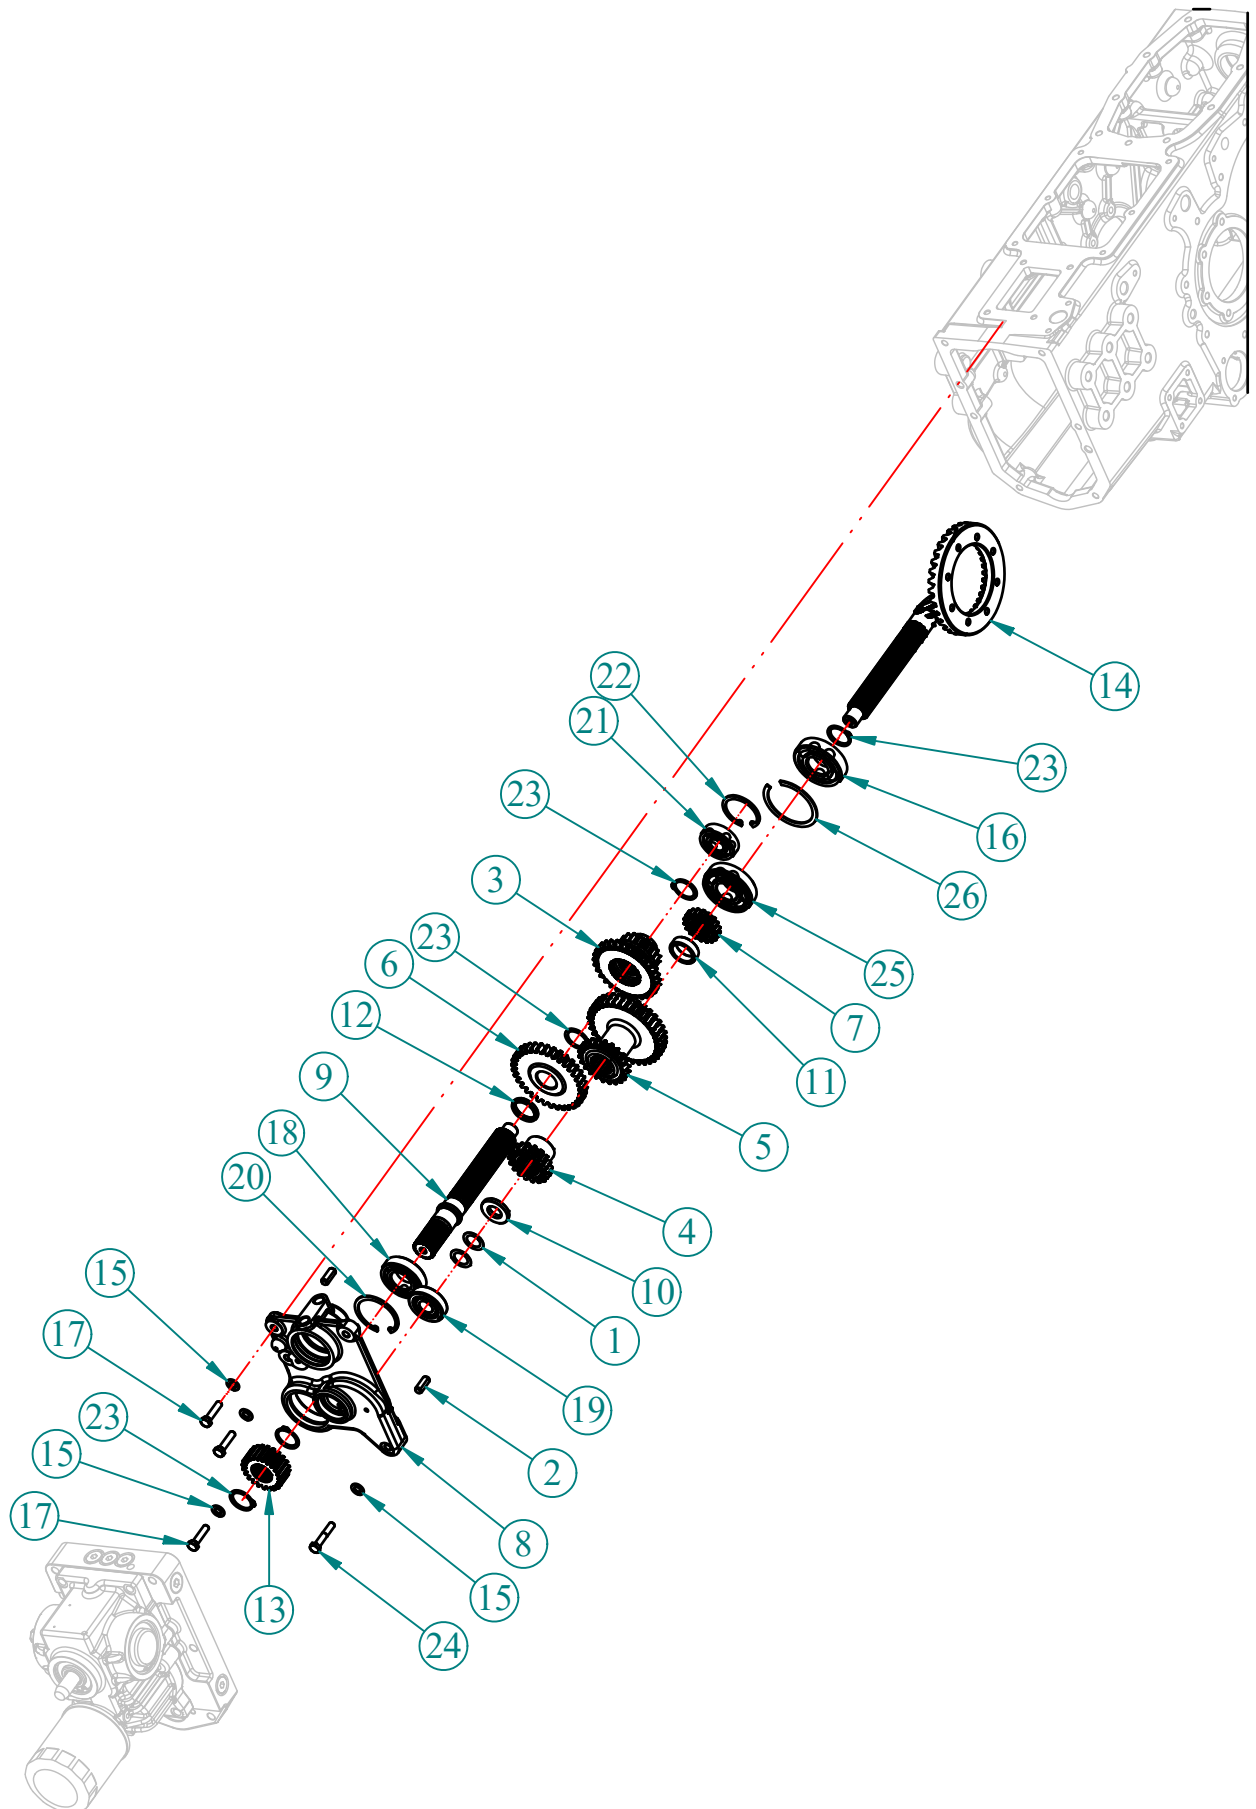 

RANGE GEARS & PINION SHAFT ASSEMBLY
MODEL :- HST
ASSEMBLY NO. :-11306682

Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11201128	SHIM Ø20.5 X Ø30 X 0.5	2	AR
2	11201843	PIN DOWEL Ø10X25	2	
3	11205737	GEAR M-L (30T-17T)	1	
4	11205738	GEAR COUNTER (18T)	1	
5	11205739	GEAR COUNTER (22T - 35T)	1	
6	11205826	GEAR H (34T)	1	
7	11206517	GEAR 18-T (4WD)	1	
8	11206518	BEARING HOUSING	1	
9	11206520	MAIN SHAFT	1	
10	11206521	DISTANCE Ø20 X Ø40 X 5.5	1	
11	11206824	DISTANCE Ø30 X Ø38 X 12.25	1	
12	11208311	DISTANCE (Ø38 X Ø30.5 X 4.85)	1	
13	11208317	GEAR -22 T (INTERNAL SPLINE-14)	1	
14	11306522	CROWN-PINION SET 6X35	1	
15	11500062	SPRING WASHER - 10mm	4	
16	11500129	BALL BEARING - 6306	1	
17	11500396	HEX BOLT M8x35 (F.T.)	3	
18	11501118	BALL BEARING 6206	1	
19	11501121	TAPPER ROLLER BEARING 30304	1	
20	11501126	CIRCLIP, INTERNAL Ø62X2	1	
21	11502518	BALL BEARING 6304	1	
22	11502530	CIRCLIP, INTERNAL Ø52X2.50	1	
23	11503052	CIRCLIP, EXTERNAL Ø30X2	5	
24	11505248	HEX.BOLT M8x45(8.8)	1	
25	11506524	BALL BEARING 6306N	1	
26	11506844	BEARING LOCK FOR 6306N	1	

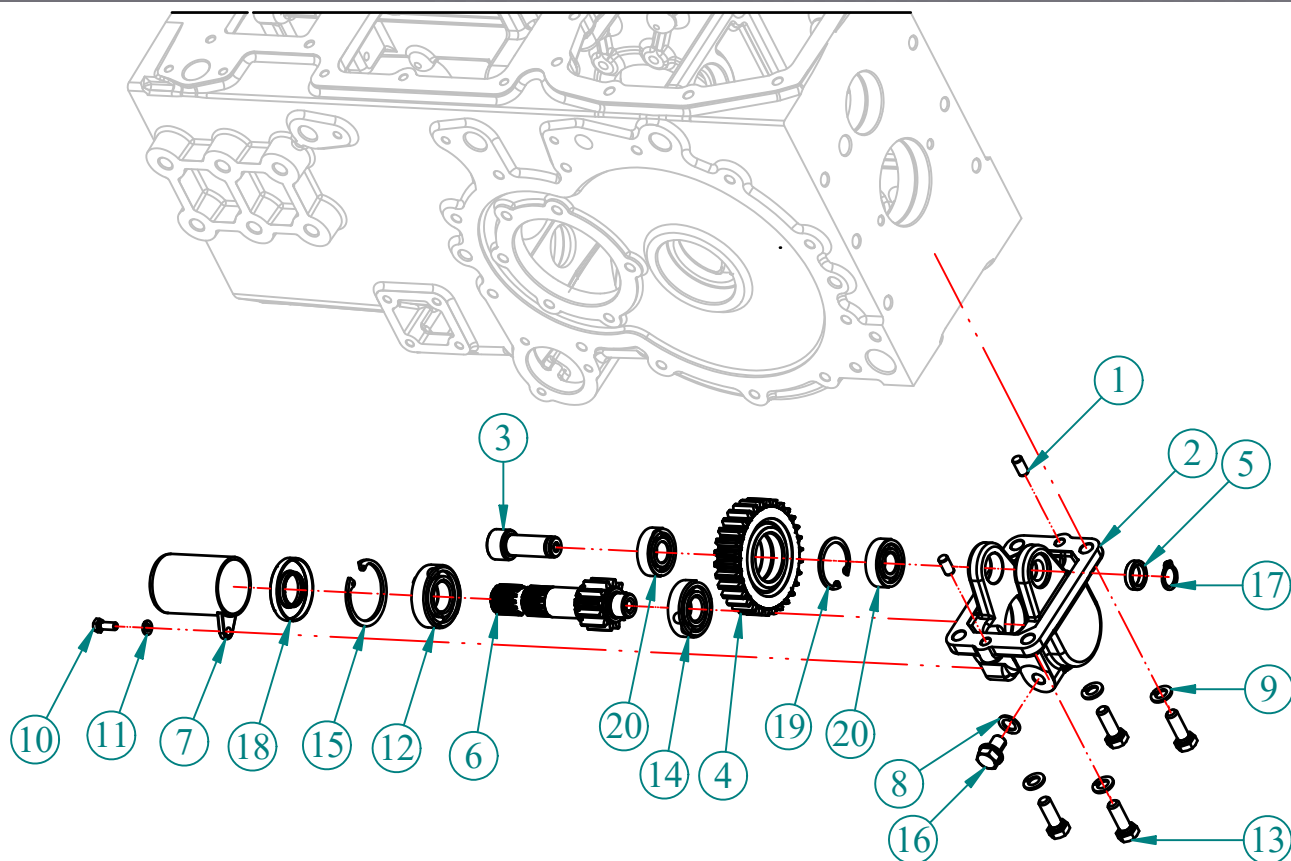 


MID P.T.O GEARS

MODEL :- HST


ASSEMBLY NO. :-11306685

Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11200119	PIN, DOWEL Ø8 X 16	2	
2	11206537	HOUSING MID PTO	1	
3	11206538	MID PTO GEAR SHAFT	1	
4	11206539	MID PTO GEAR 30T	1	
5	11206541	SPACER Ø17 X Ø24 X 5.75	1	
6	11206544	SHAFT MID PTO 12-T	1	
7	11206714	MID PTO COVER	1	
8	11500007	COPPER WASHER Ø12xØ19x1.5	1	
9	11500062	SPRING WASHER - 10mm	4	
10	11500071	HEX. BOLT M6x15 (F.T.)8.8	1	
11	11500073	SPRING WASHER - 6 mm	1	
12	11500164	BALL BEARING 6205	1	
13	11500232	HEX. BOLT M10 X 30 (F.T.)	4	
14	11501119	BALL BEARING 6204	1	
15	11502530	CIRCLIP, INTERNAL Ø52X2.50	1	
16	11504997	DRAIN PLUG (M12x1.5x16)	1	
17	11506540	CIRCLIP Ø17X1.5	1	
18	11506543	OIL SEAL Ø25xØ52x7	1	
19	11508310	INTERNAL CIRCLIP (Ø40 X 2)	1	
20	21504521	BALL BEARING 6203 ZZ	2	

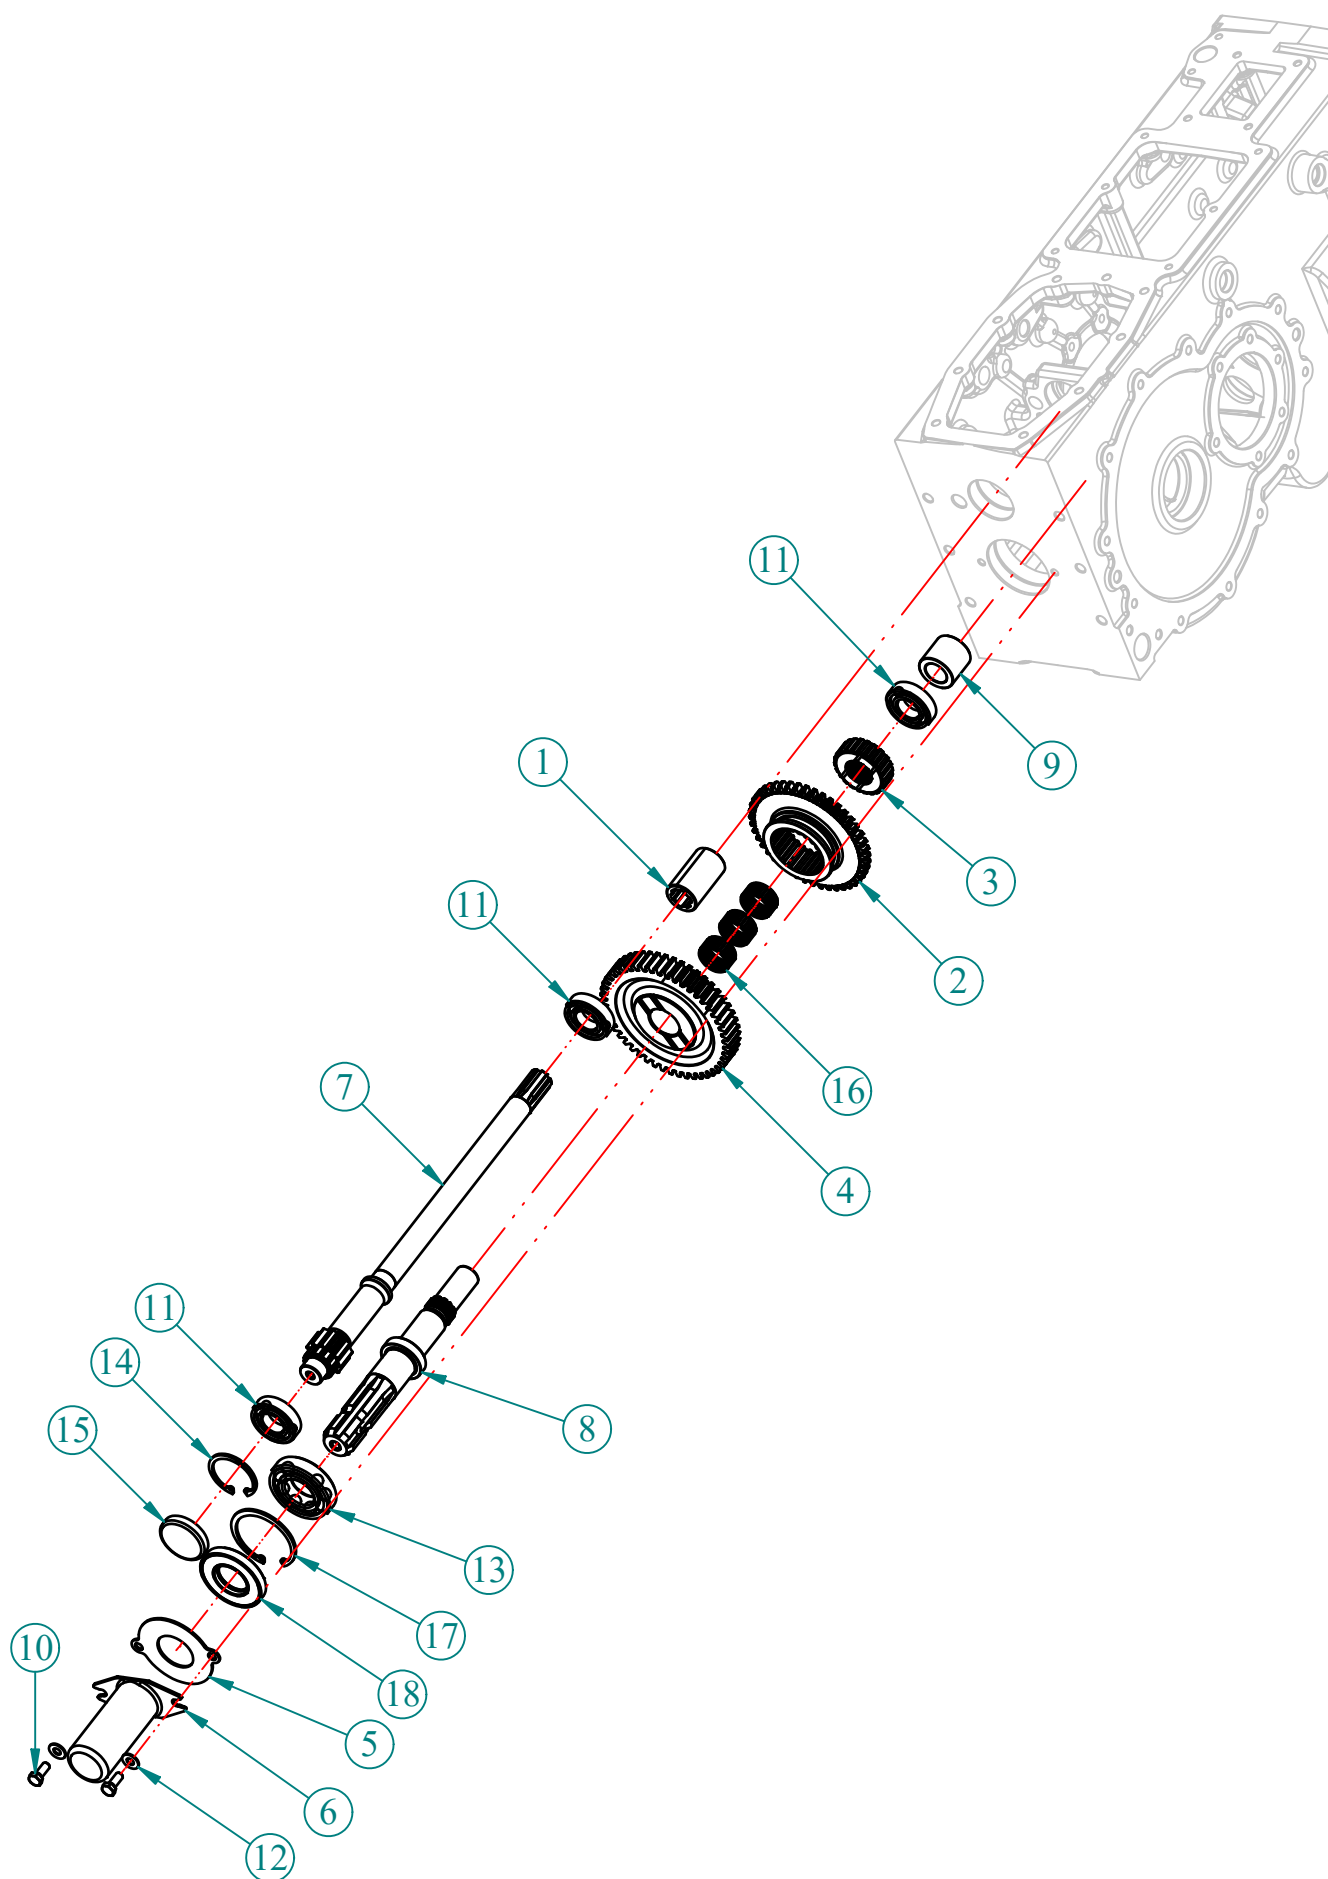 

P.T.O SHAFT
MODEL :- HST
ASSEMBLY NO. :-11306684


Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11201335	COLLAR	1	
2	11206530	GEAR PTO 44T	1	
3	11206531	PTO HUB SLEEV	1	
4	11206532	GEAR PTO 49T (11X49)	1	
5	11206535	COVER- PTO OIL SEAL	1	
6	11206642	COVER, PTO SHAFT	1	
7	11208428	GEAR PTO SHAFT 11T (11 X 49)	1	
8	11208429	SHAFT , PTO	1	
9	11208430	SPACER ,Ø25XØ40X36.3	1	
10	11500067	HEX. BOLT M8X20 (F.T)	2	
11	11500164	BALL BEARING 6205	3	
12	11501068	PLAIN WASHER Ø8.5XØ19X1.5	2	
13	11501463	BALL BEARING 6207	1	
14	11502530	CIRCLIP, INTERNAL Ø52X2.50	1	
15	11506528	SEAL RUBBER COATED Ø52	1	
16	11506533	NEEDLE BEARING Ø30xØ35x17	3	
17	21503308	CIRCLIP INTERNAL Ø72X2.5	1	
18	21503357	OIL SEAL Ø35XØ72X10	1	

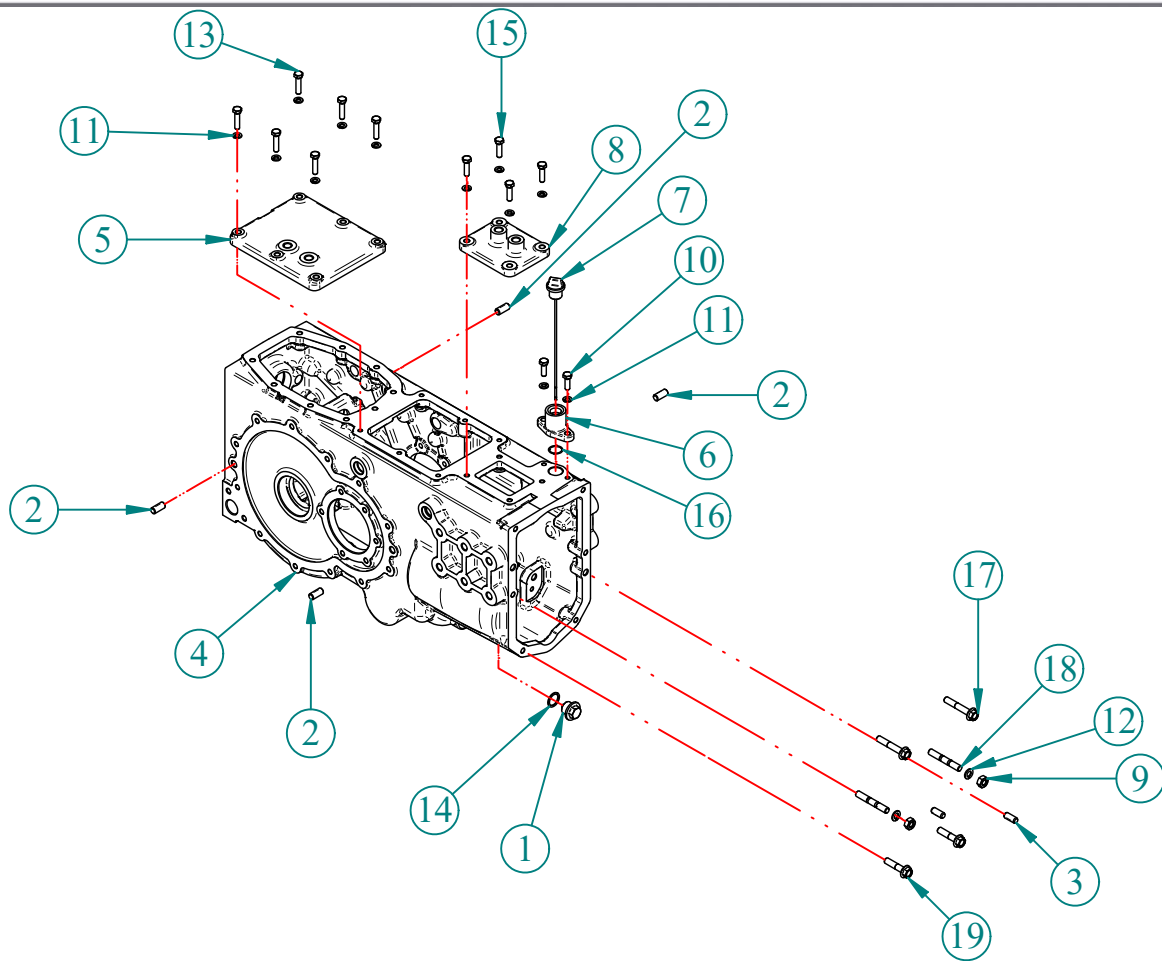 

REAR TRANSMISSION CASE

MODEL :- HST
ASSEMBLY NO. :-11306687


Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11200121	DRAIN PLUG MAGNETIC	1	
2	11201458	PIN, DOWEL Ø11X25	4	
3	11201843	PIN DOWEL Ø10X25	2	
4	11206556	TRACTOR HOUSING TRANSMISSION HST	1	
5	11206557	IPTO VALVE MOUNTING PLATE	1	
6	11206559	FLANGE DIPSTICK	1	
7	11206560	DIPSTICK	1	
8	11206561	IPTO VALVE PLATE	1	
9	11500024	HEX NUT M10	2	
10	11500051	HEX. BOLT M8 X 25 (F.T.)	2	
11	11500052	SPRING WASHER - 8mm	12	
12	11500062	SPRING WASHER - 10mm	2	
13	11500396	HEX BOLT M8x35 (F.T.)	6	
14	11500430	COPPER WASHER Ø21XØ26X1.5	1	
15	11500580	HEX BOLT M8x30 (F.T.) [8.8]	4	
16	11504885	O RING Ø20.35 X 1.78	1	
17	11506835	FLANGE BOLT M10X60 (H.T.) [8.8]	2	
18	11506836	STUD M10x70 (8.8)	2	
19	11506837	FLANGE BOLT M10X45 (H.T.) [8.8]	2	

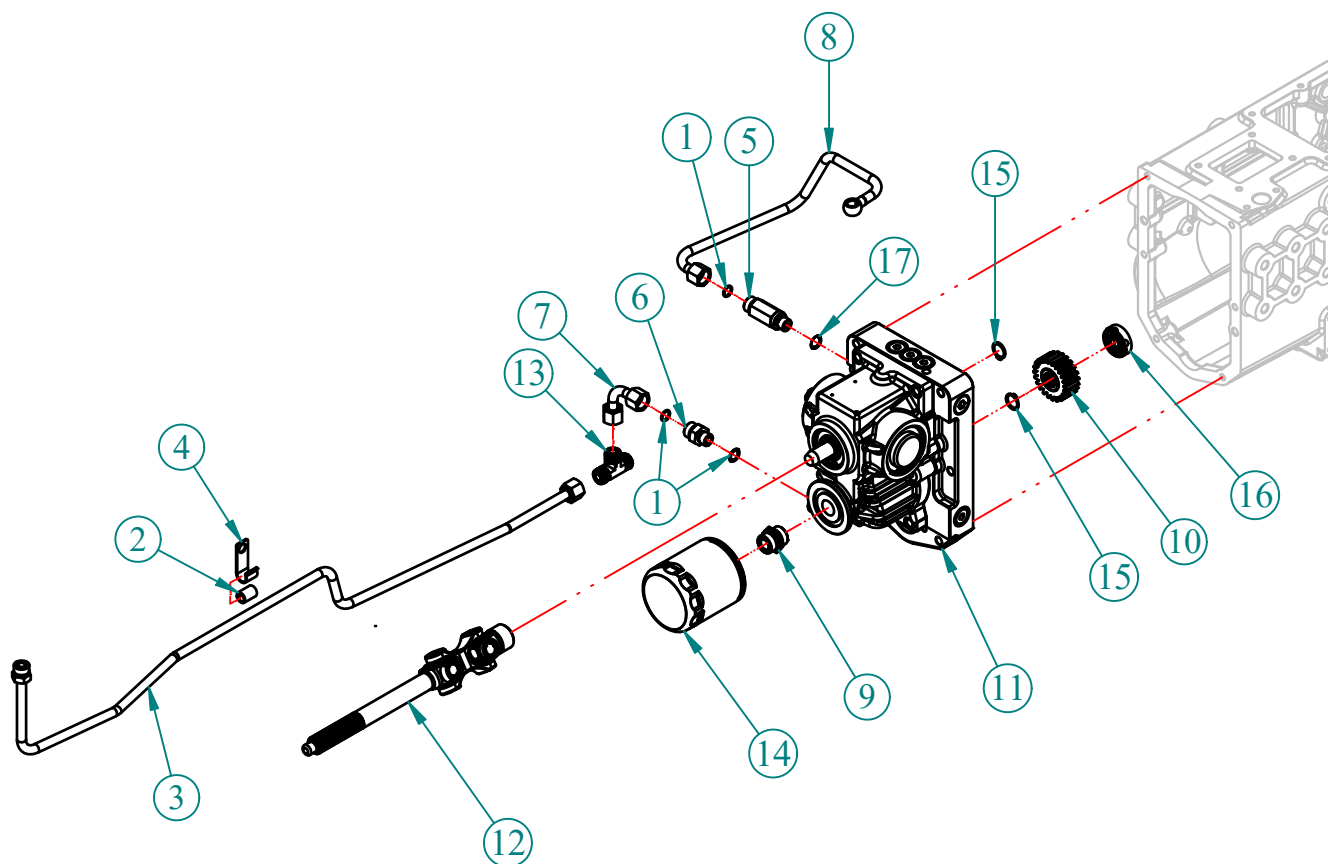 

HST


MODEL :- HST
ASSEMBLY NO. :-11306680

Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11205329	O-RING 12.42X1.78	2	
2	11205523	RUBBER PROTECTION - PIPE Ø12	1	
3	11206469	PIPE OIL COOLER OUTLET	1	
4	11206471	CLAMP OIL COOLER OUTLET PIPE	1	
5	11206507	NIPPLE , 13/16 UN, 1/4 (LONG)	1	
6	11206508	NIPPLE , 13/16 UN, 3/8	1	
7	11206511	PIPE HST UNIT INLET	1	
8	11206512	PIPE HST UNIT OUTLET	1	
9	11207299	NIPPLE 3/4 - 14 BSP	1	
10	11208318	GEAR -23 T (INTERNAL SPLINE-10)	1	
11	11404717	HST ASSY (25cc)	1	
12	11406505	TELESCOPIC SHAFT	1	
13	11406513	08 MFS EQUAL TEE	1	
14	11406839	HST OIL FILTER	1	
15	11501064	CIRCLIP EXTERNAL Ø20X1.2	2	
16	11501166	BALL BEARING 6302	1	
17	11506509	O-RING_Ø13.8x2.4_(P14)	2	

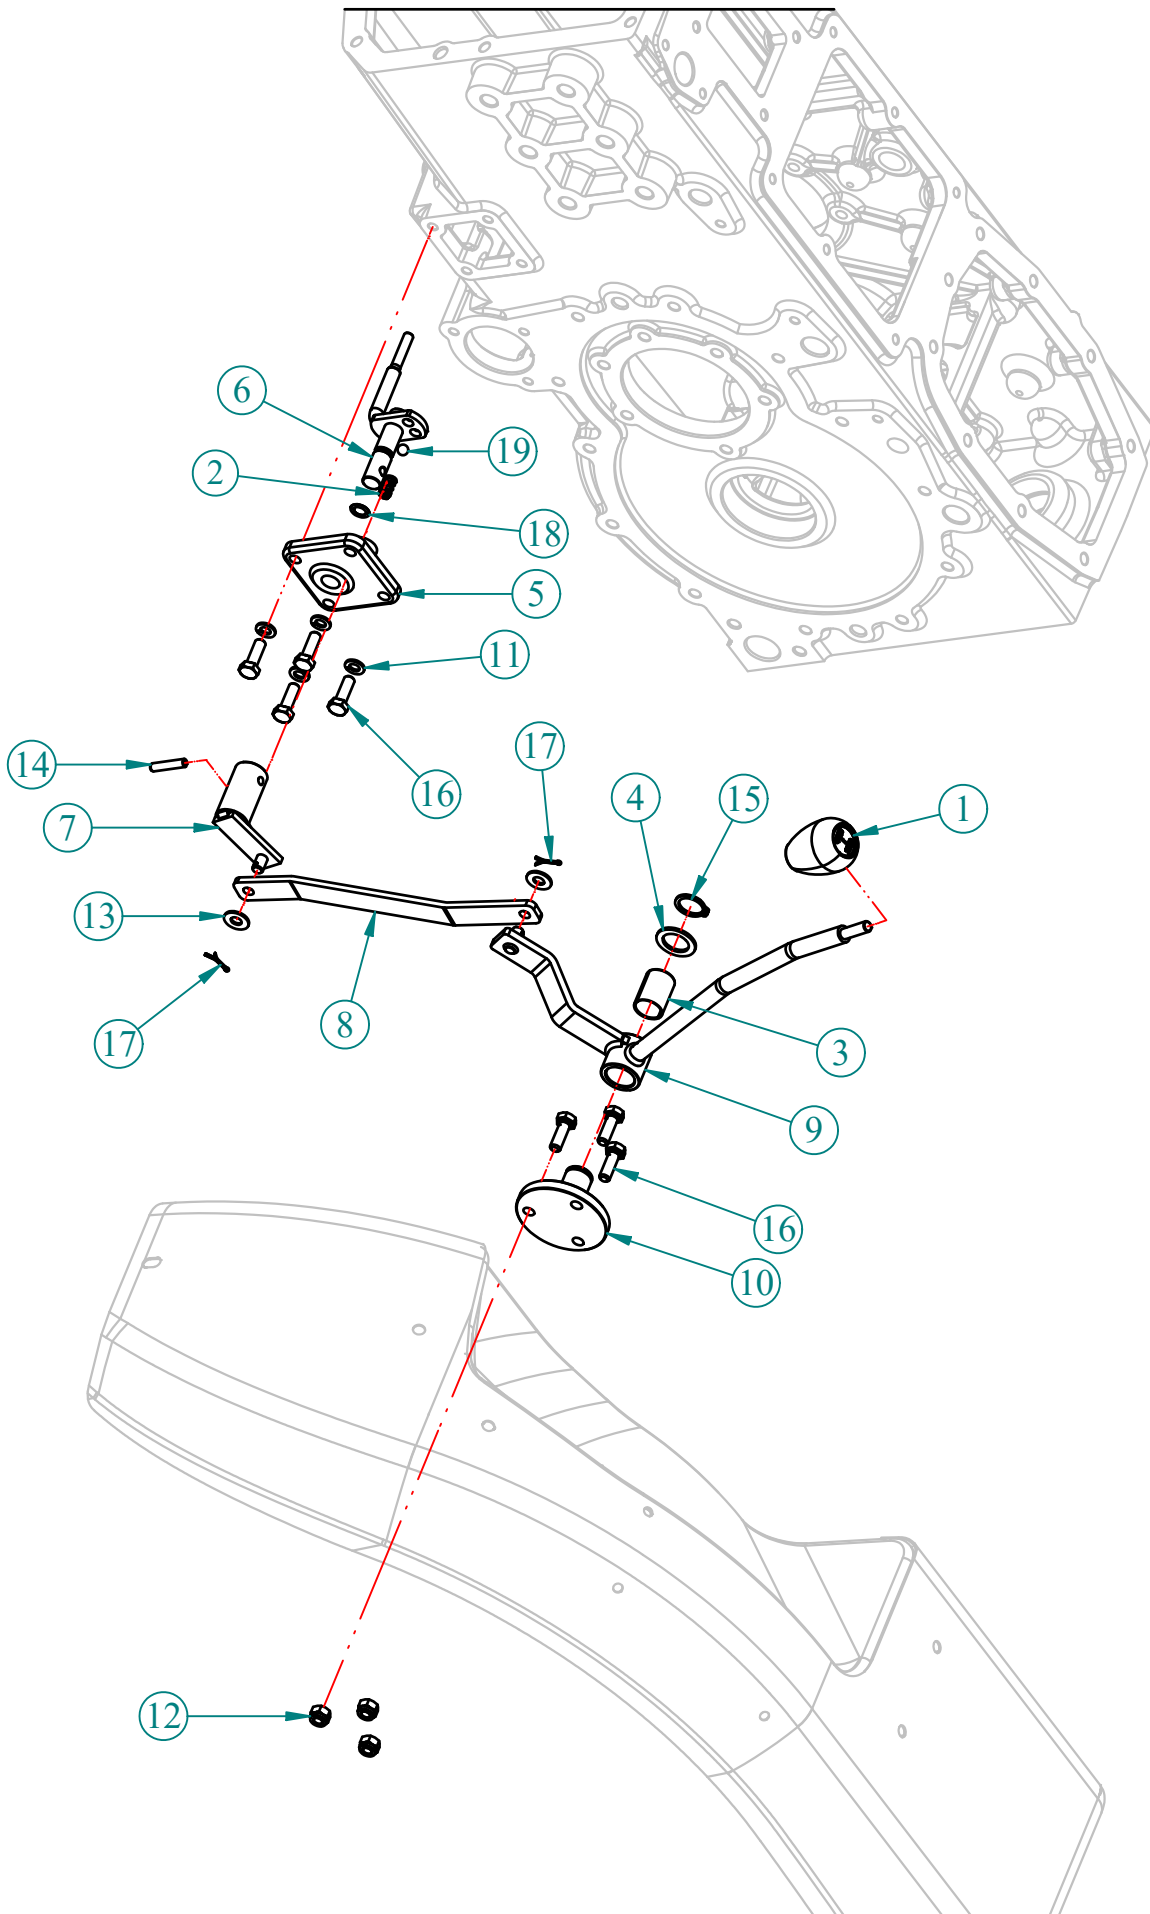 


4WD LINKAGE ASSEMBLY
MODEL :- HST
ASSEMBLY NO. :-11306692

Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11201186	KNOB, 4WD LEVER	1	
2	11203109	SPRING L-15.6	1	
3	11203195	BUSH, LEVER IGUS (Ø20 x Ø22 x 30)	1	
4	11203206	PLAIN WASHER Ø20.3xØ30x2	1	
5	11206590	FLANGE 4WD	1	
6	11206593	ARM , 4WD	1	
7	11206595	LINK ARM 4WD	1	
8	11206596	LINK 4WD/DCV-2	1	
9	11206597	LEVER , 4WD	1	
10	11206598	LEVER_GUIDE , 4WD	1	
11	11500052	SPRING WASHER - 8mm	4	
12	11500520	NYLOCK HEX NUT M8	3	
13	11501068	PLAIN WASHER Ø8.5XØ19X1.5	2	
14	11502531	SLOTTED SPRING PIN Ø6X30	1	
15	11503297	CIRCLIP,EXTERNAL Ø20x1.75	1	
16	11504701	HEX BOLT M8x25 (F.T.) [10.9]	7	
17	11506479	SPLIT PIN Ø2 X 16	2	
18	11506579	O RING Ø9.8X 2.4	1	
19	11506591	BALL _5/16"	1	

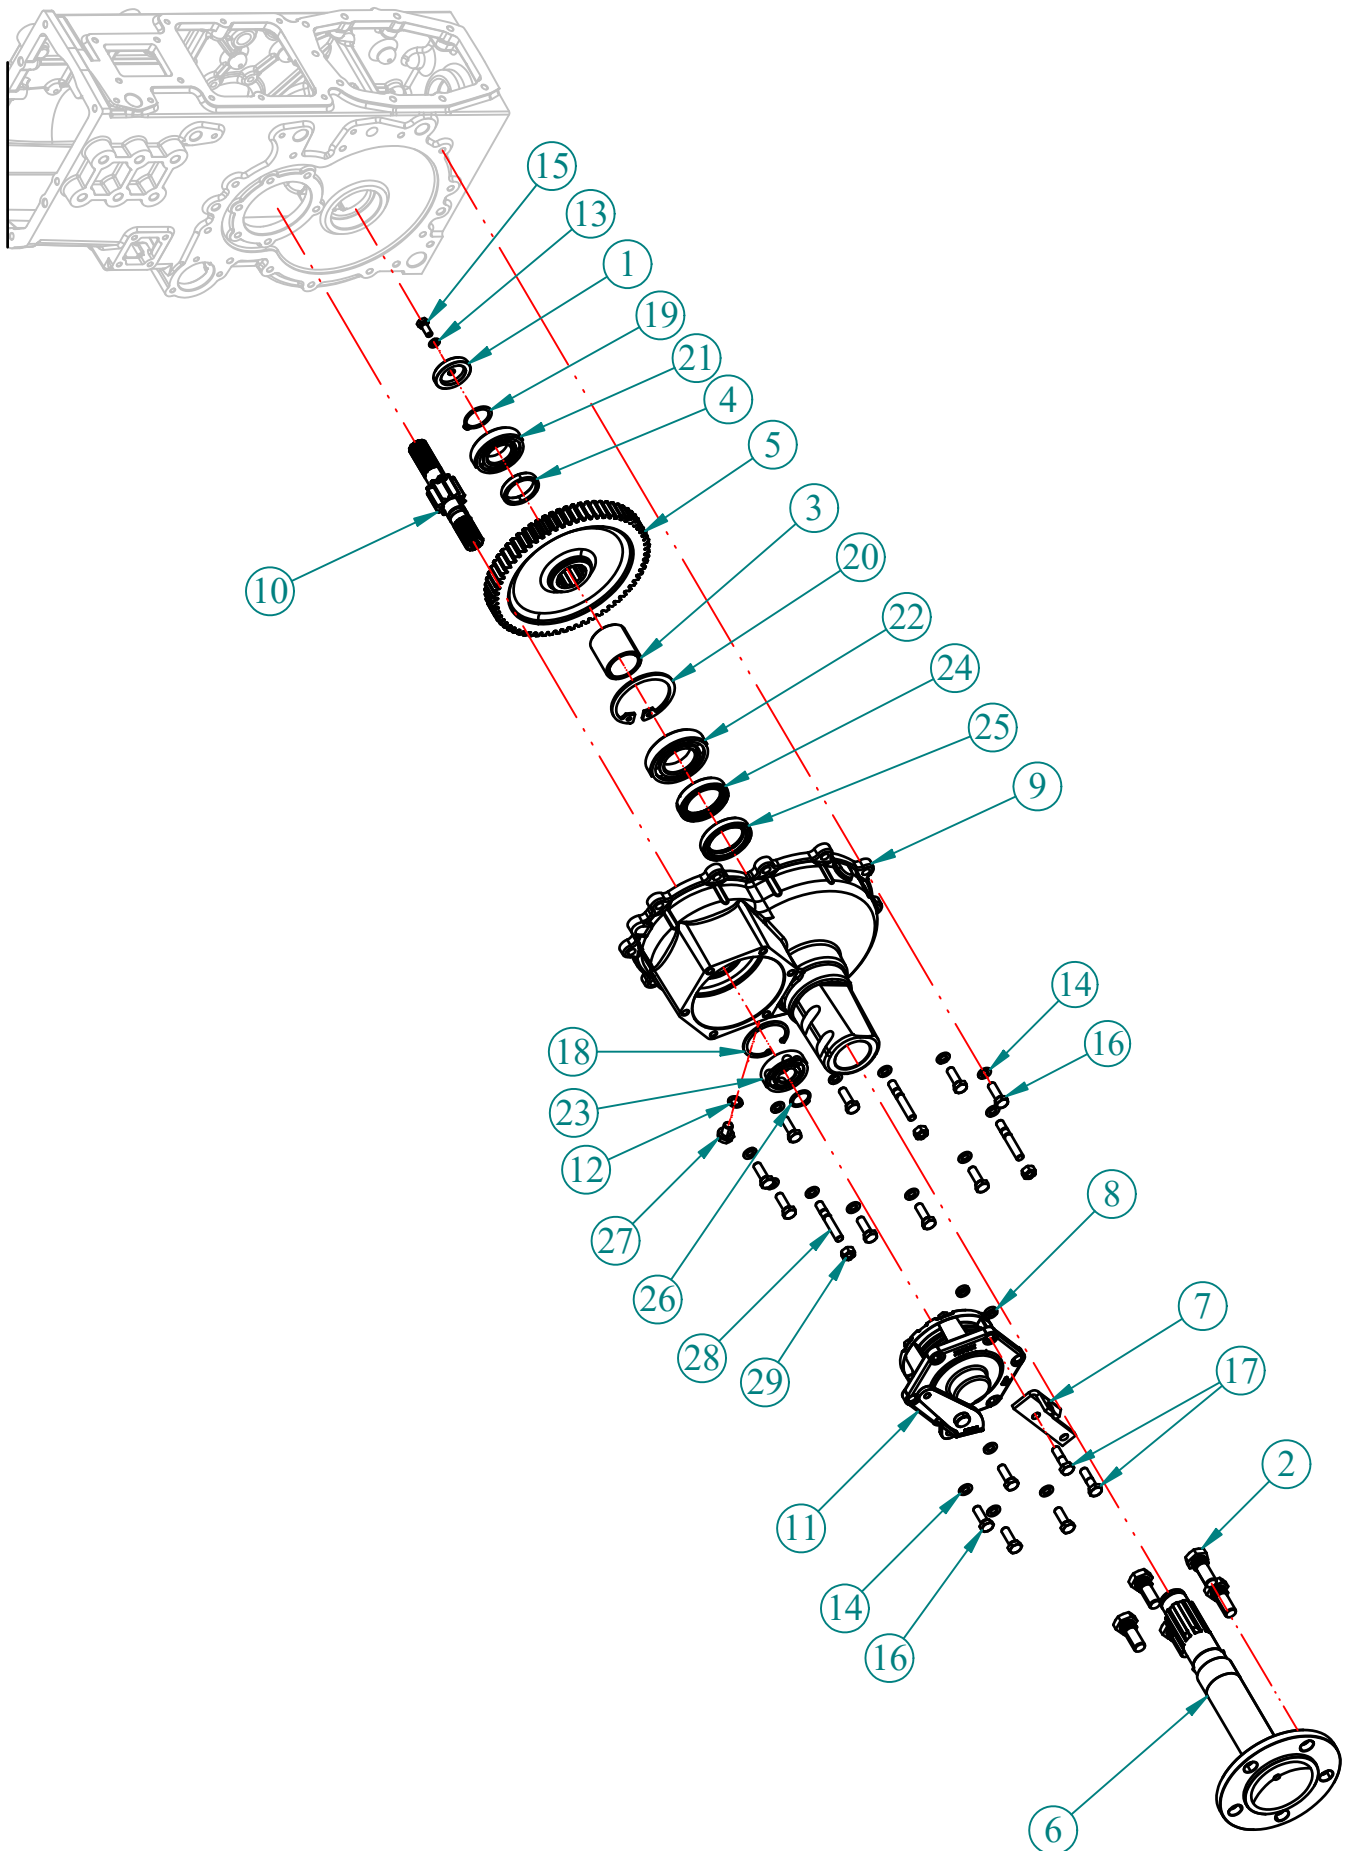 


FINAL DRIVE LH
MODEL :- HST
ASSEMBLY NO. :-11306689

Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11201367	DISTANCE, REAR AXLE	1	
2	11202777	BOLT, REAR AXLE	5	
3	11203116	DISTANCE, (Ø42.1XØ50.8X53)	1	
4	11203117	DISTANCE, (Ø42.1xØ51x10)	1	
5	11204669	GEAR, BULL (67-T)	1	
6	11204946	SHAFT, REAR AXLE (352)	1	
7	11205400	BRACKET - BRAKE CABLE LH	1	
8	11205502	WASHER, BRACKET BRAKE CABLE	2	
9	11206566	CASE, REAR AXLE HST LH	1	
10	11206568	BULL SHAFT -3.25 (10-T)	1	
11	11405496	WET BRAKE LH	1	
12	11500007	COPPER WASHER Ø12xØ19x1.5	1	
13	11500052	SPRING WASHER - 8mm	1	
14	11500062	SPRING WASHER - 10mm	16	
15	11500067	HEX. BOLT M8X20 (F.T)	1	
16	11500232	HEX. BOLT M10 X 30 (F.T.)	13	
17	11500979	HEX BOLT M10x35 (H.T.) [10.9]	2	
18	11501126	CIRCLIP, INTERNAL Ø62X2	1	
19	11501456	CIRCLIP, EXTERNAL (Ø35X1.5)	1	
20	11501457	CIRCLIP, INTERNAL Ø85X3	1	
21	11501463	BALL BEARING 6207	1	
22	11501464	BALL BEARING 6209	1	
23	11501466	BALL BEARING 6305	1	
24	11501471	OIL SEAL (Ø70 X Ø50 X 12)	1	
25	11503198	OIL SEAL (Ø70 x Ø50 x 10)	1	
26	11503273	CIRCLIP EXTERNAL Ø25X2	1	
27	11504997	DRAIN PLUG (M12x1.5x16)	1	
28	11508580	STUD M10 X 50	3	
29	31506845	HEX NUT M10 [Class 10]	3	

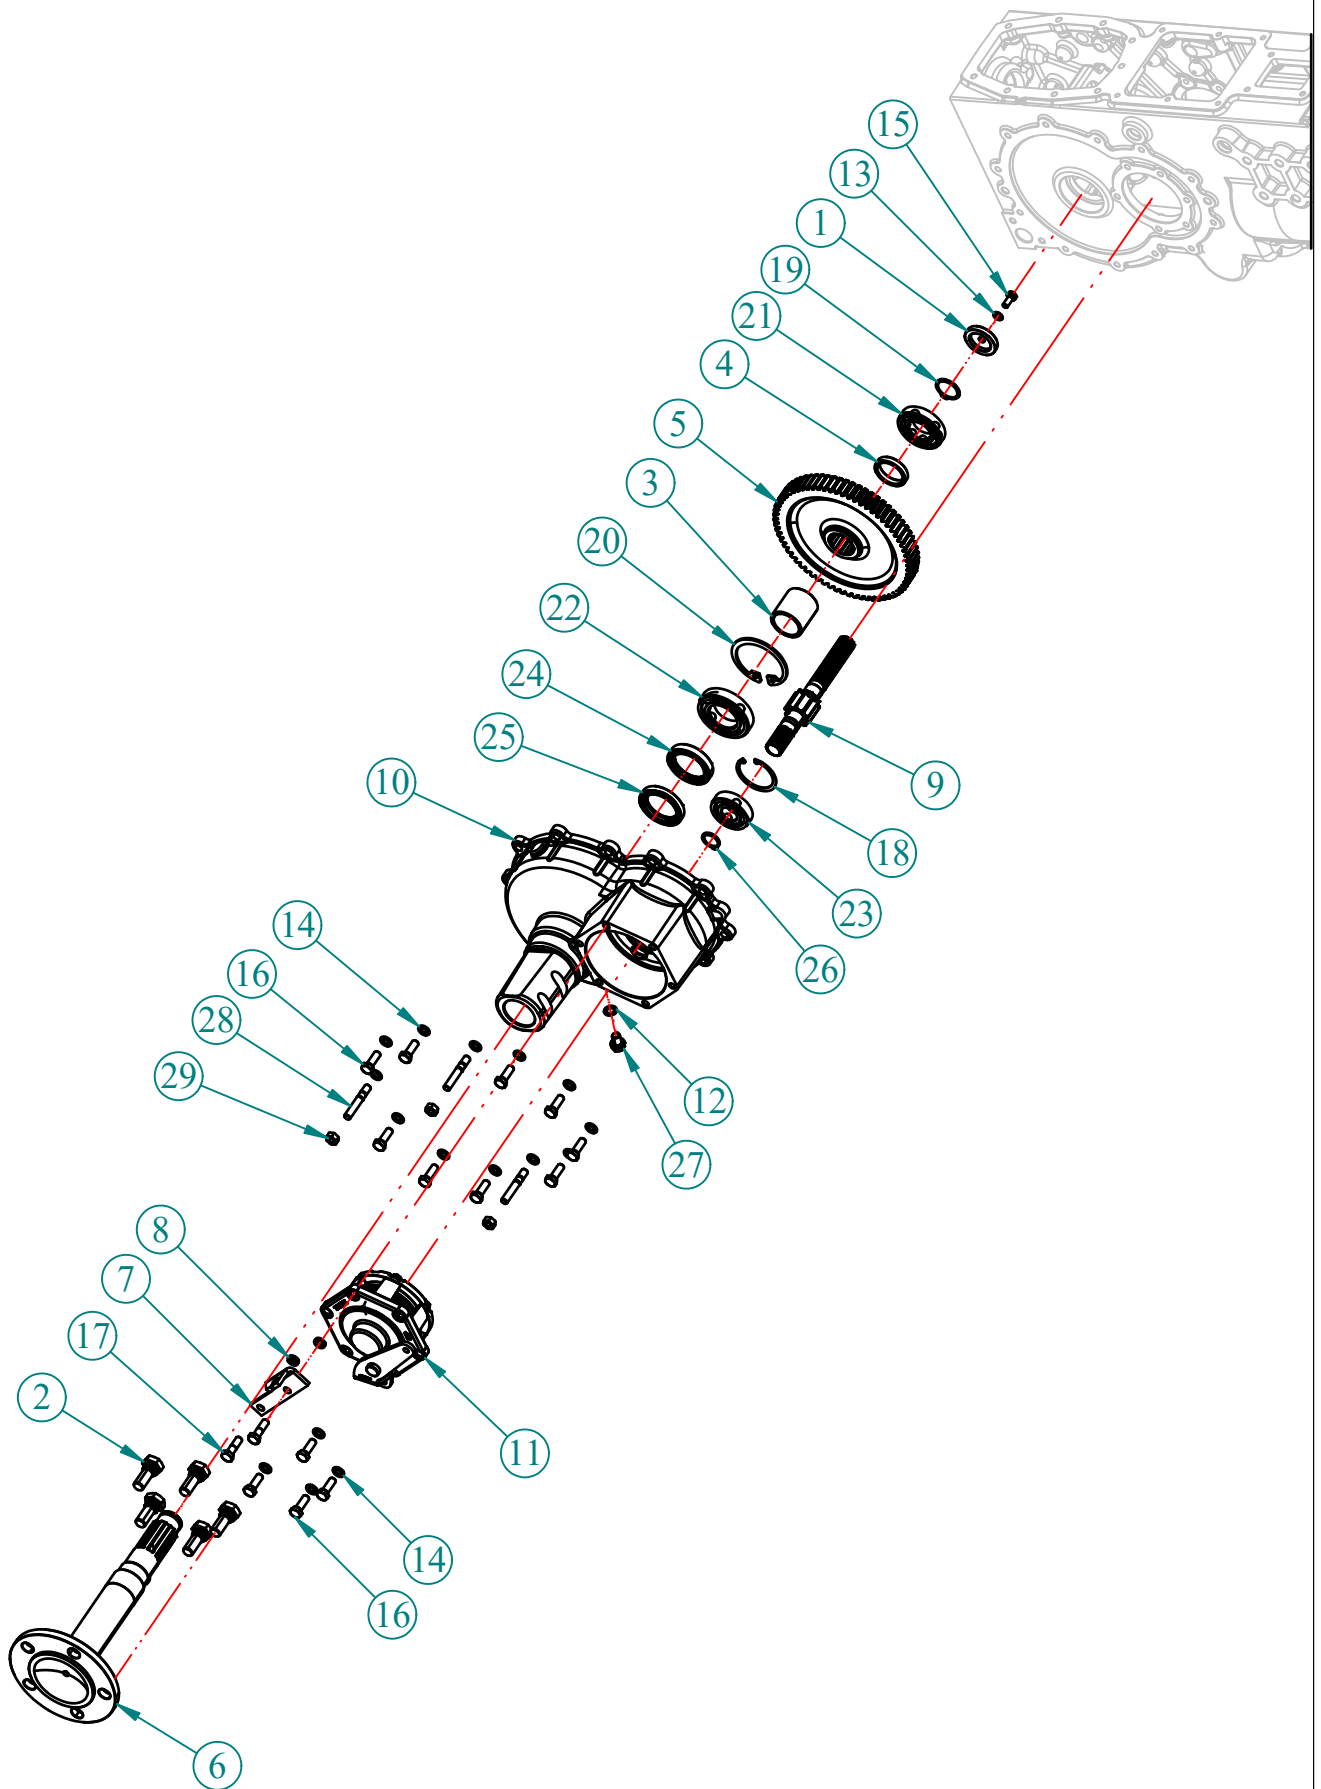 

FINAL DRIVE RH
MODEL :- HST
ASSEMBLY NO. :-11306690


Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11201367	DISTANCE, REAR AXLE	1	
2	11202777	BOLT, REAR AXLE	5	
3	11203116	DISTANCE, (Ø42.1XØ50.8X53)	1	
4	11203117	DISTANCE, (Ø42.1xØ51x10)	1	
5	11204669	GEAR, BULL (67-T)	1	
6	11204946	SHAFT, REAR AXLE (352)	1	
7	11205401	BRACKET - BRAKE CABLE RH	1	
8	11205502	WASHER, BRACKET BRAKE CABLE	2	
9	11206569	BULL SHAFT -3.25 (10-T)	1	
10	11206825	CASE, REAR AXLE HST RH	1	
11	11405495	WET BRAKE RH	1	
12	11500007	COPPER WASHER Ø12xØ19x1.5	1	
13	11500052	SPRING WASHER - 8mm	1	
14	11500062	SPRING WASHER - 10mm	16	
15	11500067	HEX. BOLT M8X20 (F.T)	1	
16	11500232	HEX. BOLT M10 X 30 (F.T.)	13	
17	11500979	HEX BOLT M10x35 (H.T.) [10.9]	2	
18	11501126	CIRCLIP, INTERNAL Ø62X2	1	
19	11501456	CIRCLIP, EXTERNAL (Ø35X1.5)	1	
20	11501457	CIRCLIP, INTERNAL Ø85X3	1	
21	11501463	BALL BEARING 6207	1	
22	11501464	BALL BEARING 6209	1	
23	11501466	BALL BEARING 6305	1	
24	11501471	OIL SEAL (Ø70 X Ø50 X 12)	1	
25	11503198	OIL SEAL (Ø70 x Ø50 x 10)	1	
26	11503273	CIRCLIP EXTERNAL Ø25X2	1	
27	11504997	DRAIN PLUG (M12x1.5x16)	1	
28	11508580	STUD M10 X 50	3	
29	31506845	HEX NUT M10 [Class 10]	3	

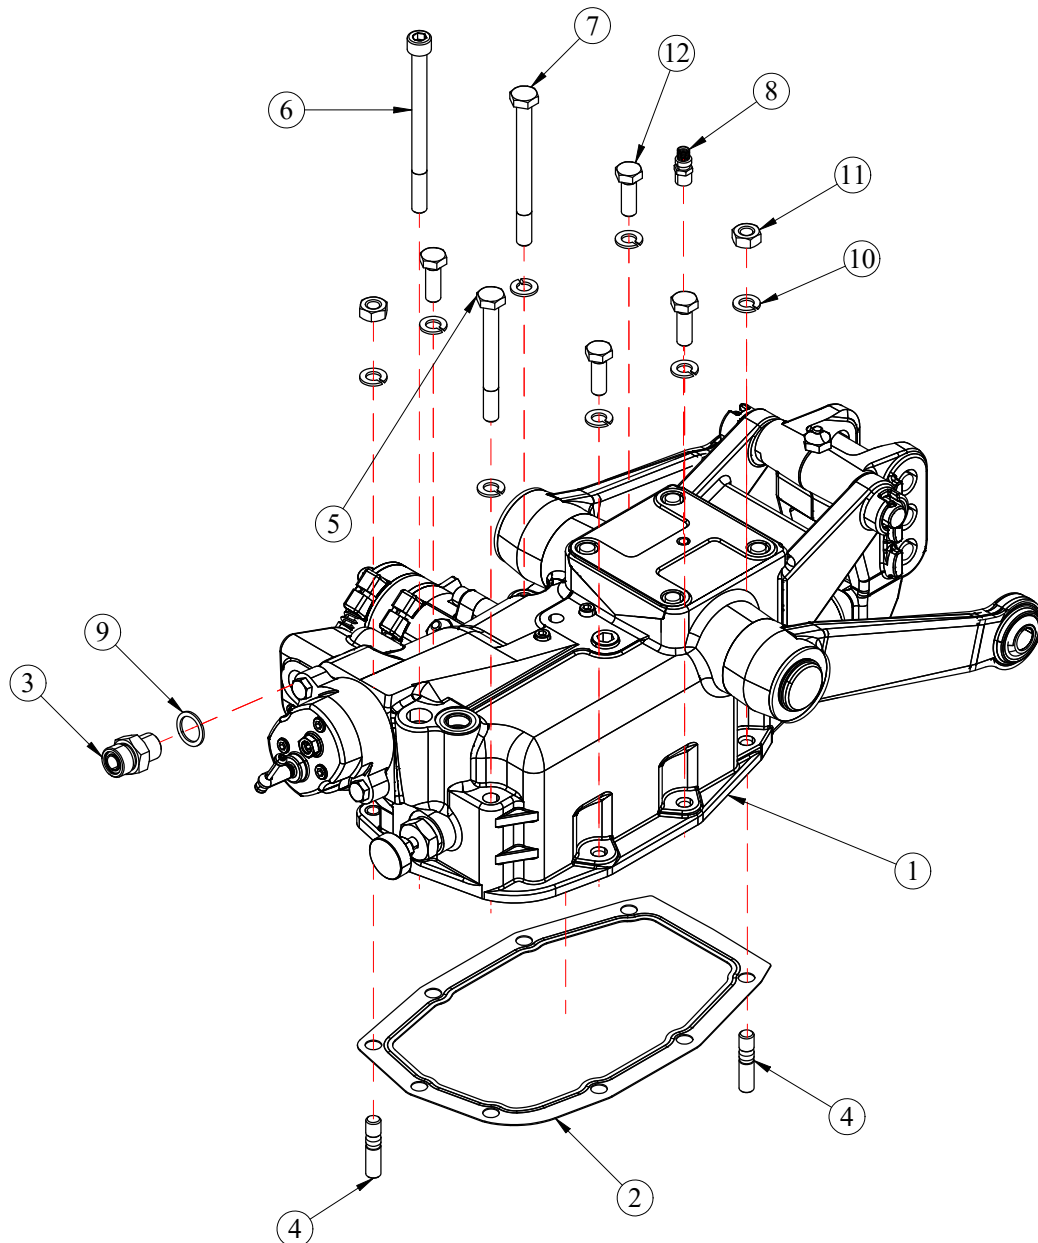 

HYDRAULIC BODY ASSEMBLY

ASSEMBLY NO. :- 11305578


SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11402484	HYDRAULIC ASSY. (MITA)	1	
2	11202407	GASKET, HYD. UNIT	1	
3	11205328	NIPPLE M18 x 13/16" UN	1	
4	11501571	STUD M10 X 30	2	
5	11502535	HEX. BOLT (M10X95 10.9)	1	
6	11502537	ALLEN BOLT M10 (M10X130-10.9)	1	
7	11502536	HEX. BOLT M10 (M10X115-10.9)	1	
8	11203294	AIR BREATHER BOLT 1/8"-27 NTPF	1	
9	11502338	COPPER WASHER Ø18XØ24X1.5	1	
10	11500062	SPRING WASHER - 10mm	8	
11	11500024	HEX NUT M10	2	
12	11500232	HEX. BOLT M10 X 30 (F.T.)	4	

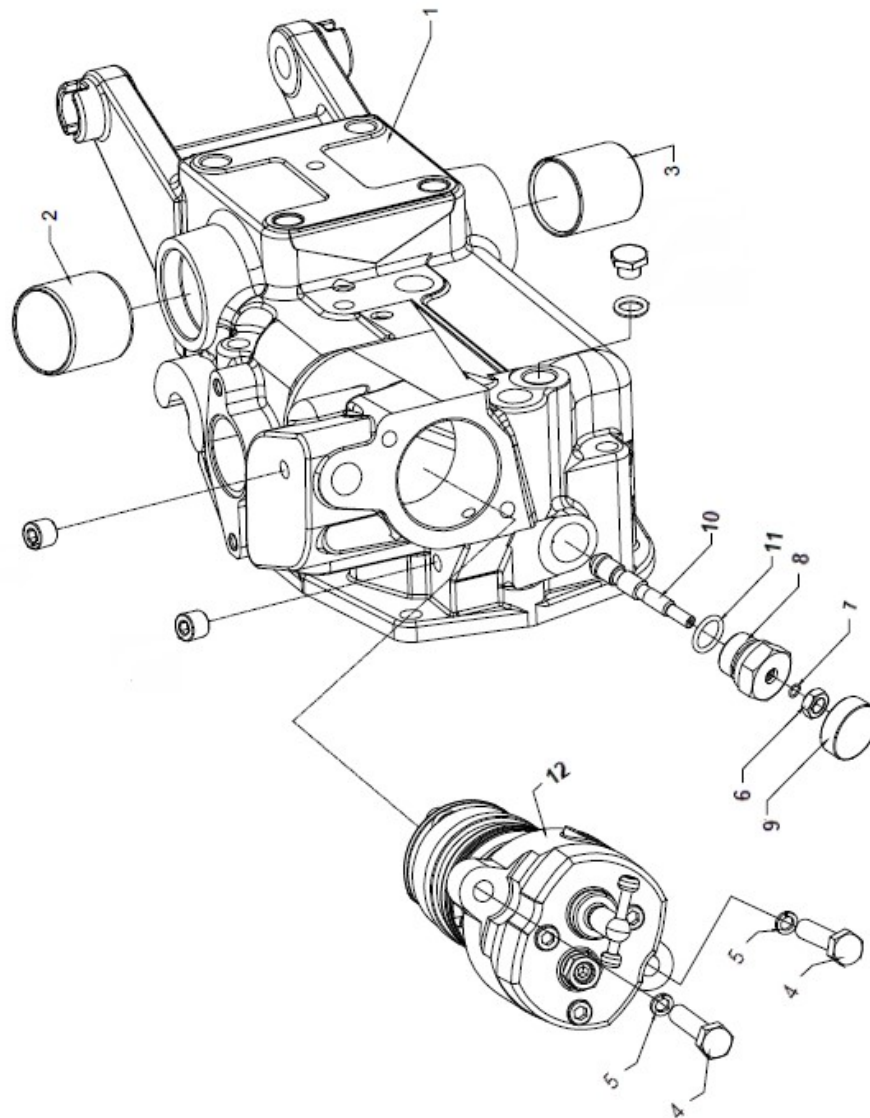 

HOUSING ASSEMBLY

ASSEMBLY NO.:-11305578A


SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11409064	HOUSING ASSY POS, 1-2-3-4	1	NOT FOR SALE
2	11405802	BRONZINA DU 44/40*40 BUSH	1	
3	11405803	BRONZINA BUSH	1	
4	11405804	SCREW M8x35 DIN 931-8G	2	
5	11405886	GROWER D=8.1 DIN7980-ZINC	2	
6	11405806	LOCK NUT	1	
7	11405807	O-RING D7.8 T1.78	1	
8	11405808	PLUG	1	
9	11405809	PRE-SELECTOR KNOB	1	
10	11405810	PRE-SELECTOR	1	
11	11405811	O-RING	1	
12	11405812	CONTROL VALVE ASSEMBLY	1	

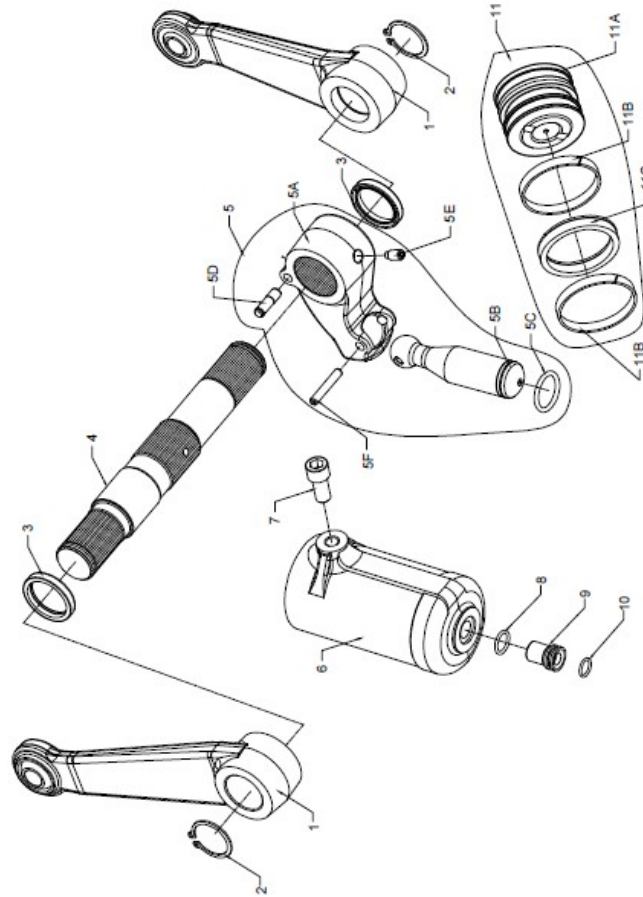 

CYLINDER ASSEMBLY

ASSEMBLY NO.:-11305578B

SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11405813	ARM	2	
2	11405814	CIRCLIP E34 UNI 7435 90	2	
3	11405815	ARM SEAL 35/45x7	2	
4	11405816	MAIN SHAFT	1	
5	11405817	KIT CRANK	1	
5A	11405819	CRANK	1	
5B	11405820	CON ROD	1	
5C	11405821	O RING	1	
5D	11405834	PIN	1	
5E	11405835	GRUB SCREW M8x16	1	
5F	11405836	ELASTIC PIN 6x40	1	
6	11405818	CYLINDER	1	
7	11405837	ALLEN BOLT M12x25	1	
8	11405838	O RING	1	
9	11405839	PLUG	1	
10	11405840	O RING	1	
11	11405841	KIT PISTON	1	
11A	11405842	PISTON	1	
11B	11405843	PISTON GUIDE RING	2	
11C	11405844	PISTON SEAL B2555216/1/D	1	

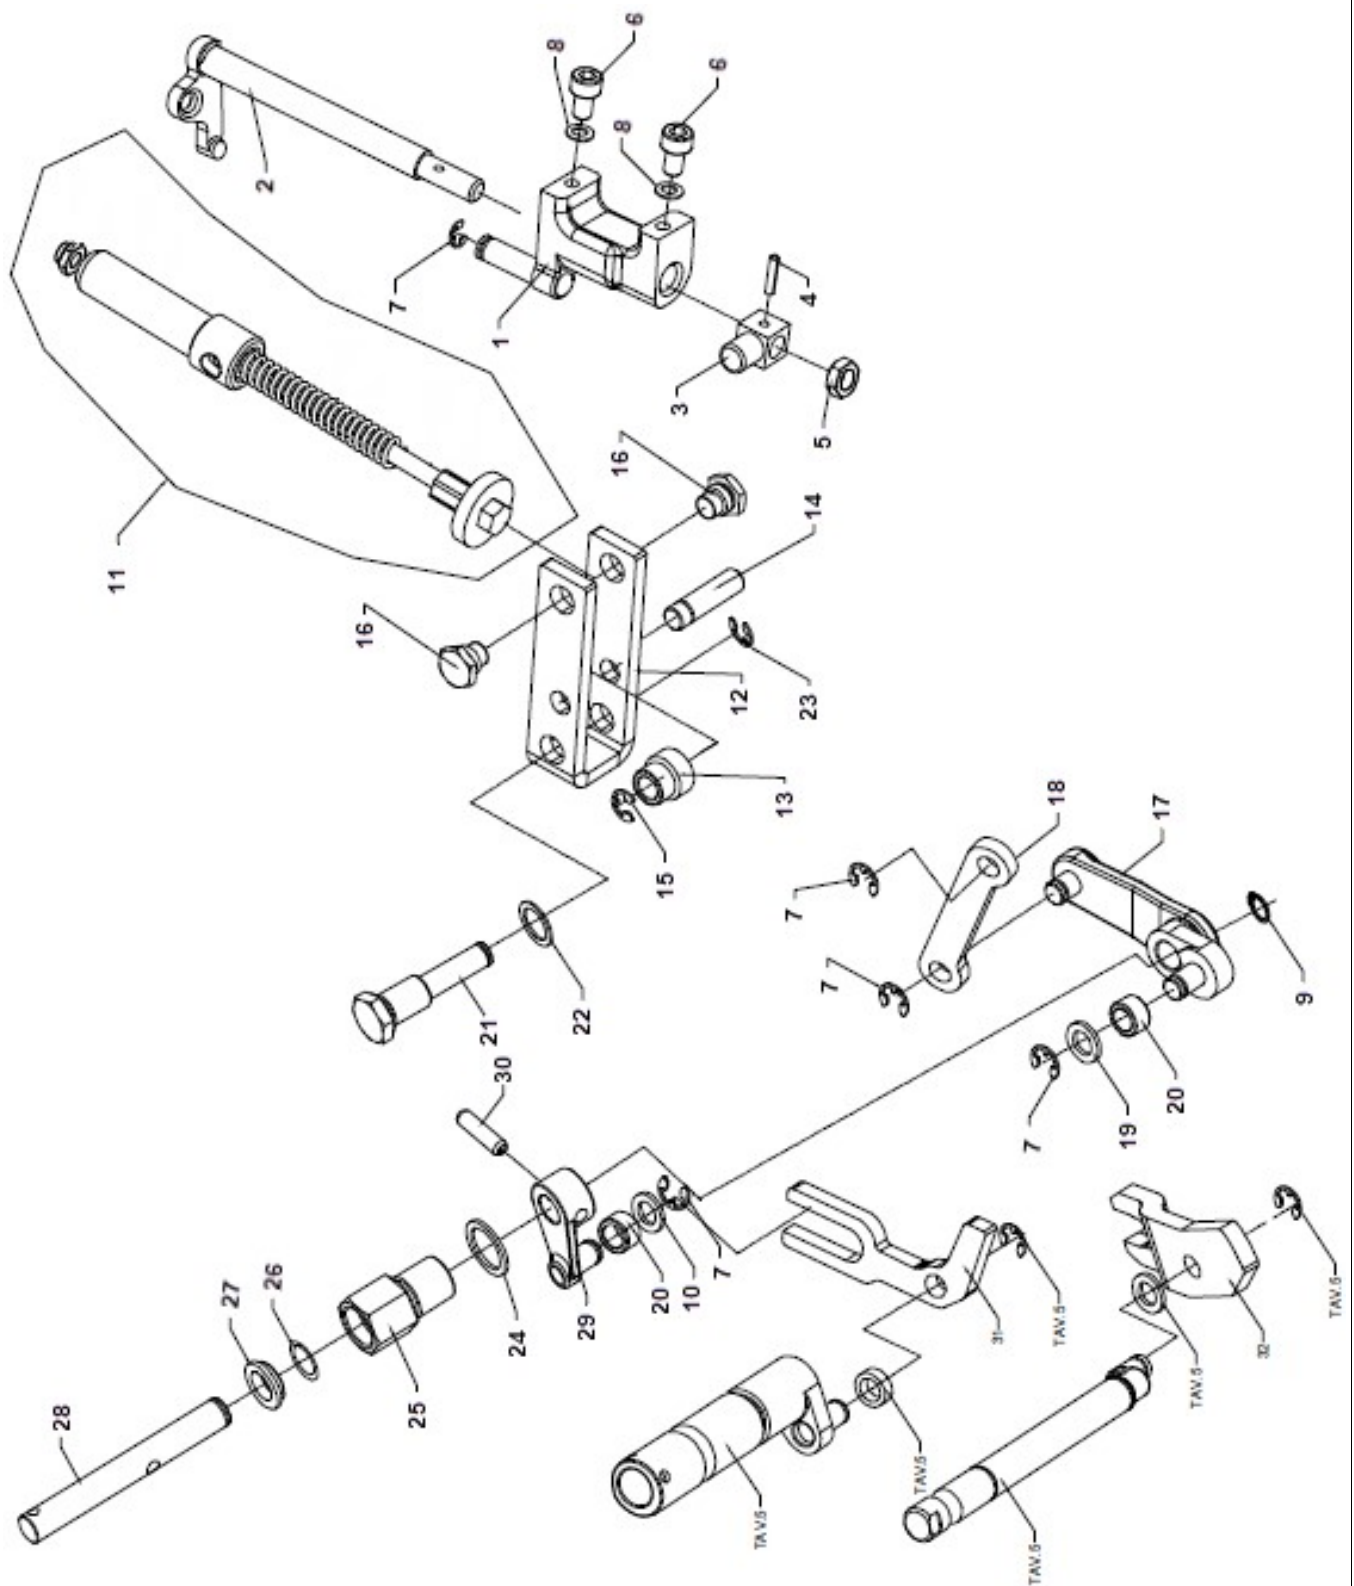 




INTERNAL LEVER ASSEMBLY

ASSEMBLY NO.: -11305578C


SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11405845	LIMIT SWITCH SUPPORT WITH PIN	1	
2	11405846	LIMIT SWITCH LEVER	1	
3	11405847	PIN	1	
4	11405848	ELASTIC PIN DIA 3x14	1	
5	11405849	NUT M8	5	
6	11405850	ALLEN BOLT M6x16	2	
7	11405917	RADIAL CIRCLIP 6MM	5	
8	11405873	COPPER WASHER 6.4x10x1	2	
9	11405874	CIRCLIP	1	
10	11405918	PLAN WASHER	1	
11	11405876	PUSH ROD KIT	1	
12	11405852	LEVER	1	
13	11405853	WHEEL	1	
14	11405854	PIN	1	
15	11405855	RADIAL CIRCLIP 5MM	1	
16	11405856	SUPPORT PIN	2	
17	11405857	COMPENSATOR	1	
18	11405858	LINK	1	
19	11405859	COPPER WASHER 8.5x14x1.5	1	
20	11405860	ROLLER '8/12x7	1	
21	11405861	SUPPORT PIN	1	
22	11405862	COPPER WASHER 14.5/20x1	1	
23	11405888	SEEGER RS D7 DIN 6799	1	
24	11405864	WASHER	1	
25	11405865	SUPPORT PIN	1	
26	11405866	OR 11.91x2.62 sh80/90	1	
27	11405867	WASHER	1	
28	11405868	PIN	1	
29	11405869	LEVER WITH PIN	1	
30	11405870	ELASTIC PIN D4x24	1	
31	11405871	INTERNAL DRAFT LEVER	1	
32	11405872	LEVER	1	

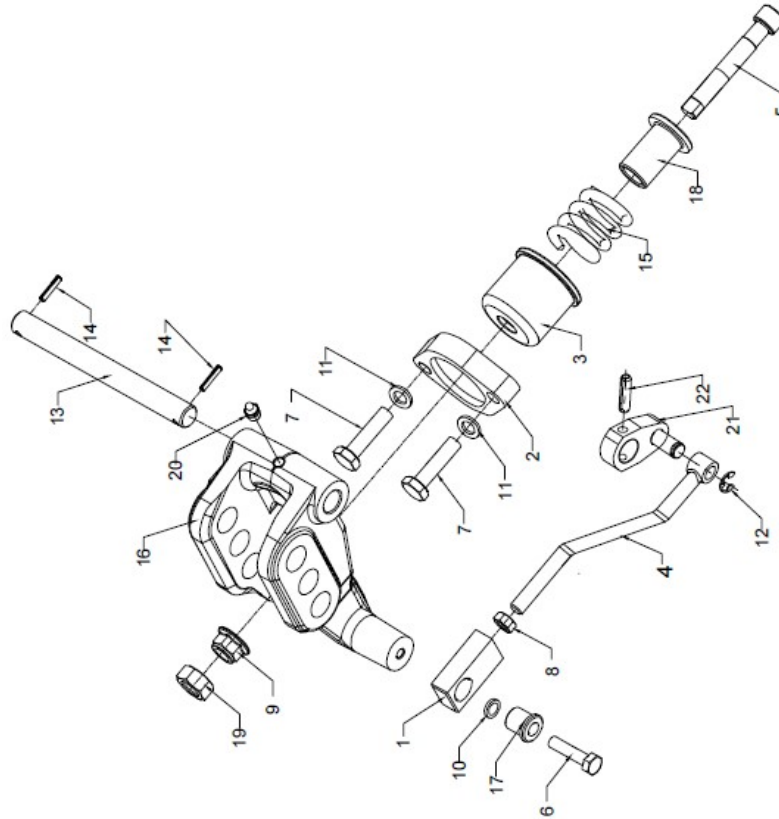 

TOP LINK BRACKET ASSEMBLY

ASSEMBLY NO.:-11305578D


SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11405877	PLATE	1	
2	11405878	FLANGE	1	
3	11405879	COVER	1	
4	11405880	TIE ROD	1	
5	11405881	SCREW	1	
6	11405804	SCREW M8x35 DIN 931-8G	1	
7	11405883	SCREW M10x35 DIN 931-8G	2	
8	11405884	NUT M10 8G	1	
9	11405885	NUT M12	1	
10	11405886	GROWER D=8.1 DIN7980-ZINC	1	
11	11405887	GROWER D10.2 DIN 7980	2	
12	11405888	SEEGER RS D7 DIN 6799	1	
13	11405889	PIN	1	
14	11405890	ELASTIC PIN	2	
15	11405891	SPRING D24x46 FIELD D7.5	1	
16	11405892	BRACKET	1	
17	11405893	BUSH D8/20x19	1	
18	11405894	BUSH D12.5/35x42.5	1	
19	11405895	LOCK NUT	1	
20	11405896	GREASE NIPPLE	1	
21	11405897	CRANK WITH PIN	1	
22	11405870	ELASTIC PIN D4x24	1	

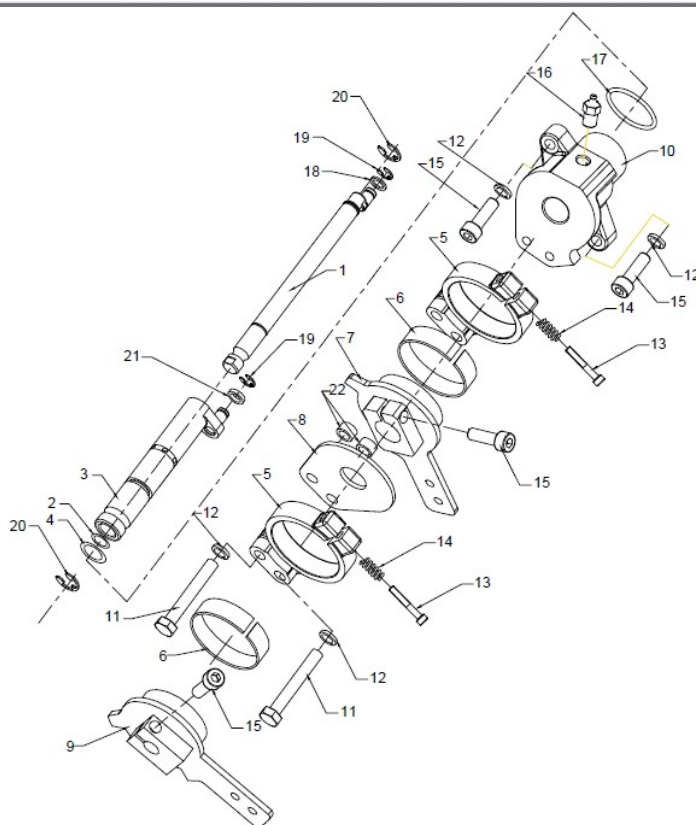 

CONTROL LEVERS ASSEMBLY


ASSEMBLY NO.:-11305578E

SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11405899	POSITION SHAFT	1	
2	11405900	O-RING	1	
3	11405901	DRAFT TUBE	1	
4	11405902	O-RING	1	
5	11405903	CLUB HUB	2	
6	11405904	CLUTCH 50/53x13.5	2	
7	11405905	LEVER	1	
8	11405906	FLANGE	1	
9	11405907	CONTROL LEVER	1	
10	11405908	SUPPORT	1	
11	11405909	VITE M8x70 SCREW	2	
12	11405886	GROWER D=8.1 DIN7980-ZINC	4	
13	11405911	VITE M6x40 UNI5971 Zn 8.8 SCREW	2	
14	11405912	MOLLA FRIZIONE SPRING	2	
15	11405913	VITE M8x30 UNI5971 Zn 8.8 SCREW	4	
16	11405914	INGR. DIRITTO M10x1 FITTING	1	
17	11405915	O-RING	1	
18	11405918	PLAN WASHER	1	
19	11405917	RADIAL CIRCLIP 6MM	2	
20	11405874	CIRCLIP	2	
21	11405919	WASHER	1	
22	11405920	BUSH	2	

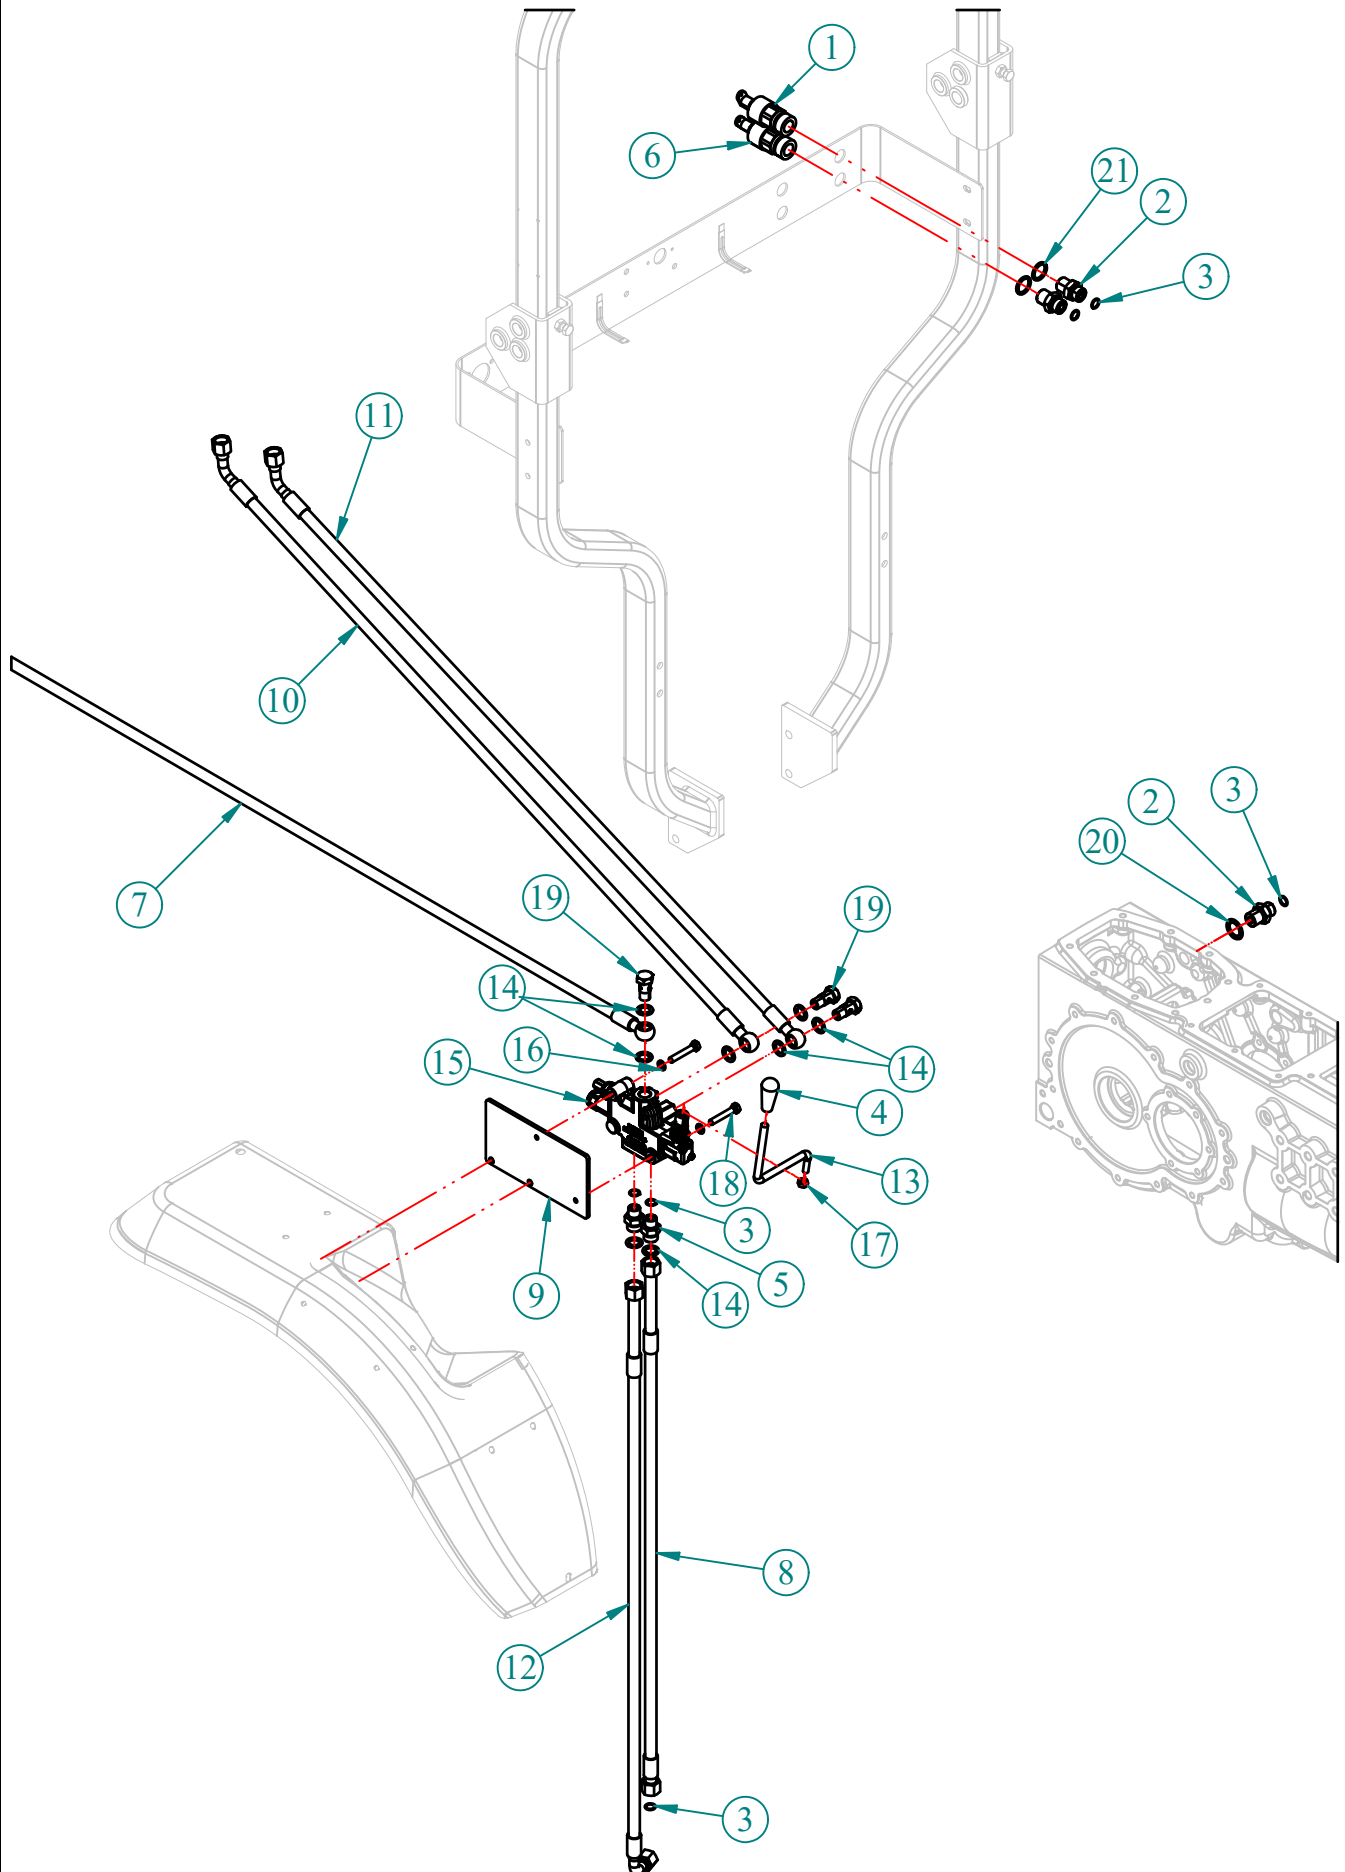 

DIRECTION CONTROL VALVE ASSEMBLY
MODEL :- HST
ASSEMBLY NO. :-11306694


Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11202334	FEMALE QRC	1	
2	11205327	NIPPLE 1/2" BSP X 13/16" UN	3	
3	11205329	O-RING 12.42X1.78	6	
4	11205542	KNOB LEVER FOR DCV	1	
5	11206055	NIPPLE 3/8"BSP x 13/16" UN	2	
6	11206080	FEMALE QRC BLUE	1	
7	11206604	SECONDARY PIPE PUMP TO DCV	1	
8	11206605	PIPE, DCV TO HYDRAULIC	1	
9	11206658	DCV MOUNTING BRACKET	1	
10	11206659	PIPE, DCV TO QRC 1	1	
11	11206661	PIPE, DCV TO QRC 2	1	
12	11206662	PIPE, DCV TO TANK	1	
13	11206663	LEVER DISTRIBUTOR VALVE	1	
14	11402783	DOWTY SEAL 3/8	8	
15	11408945	MOBILE CONTROL VALVE FLOAT POSITION	1	
16	11500052	SPRING WASHER - 8mm	2	
17	11500082	HEX NUT M8	1	
18	11500410	Hex. Bolt M8x50 (F.T.)	2	
19	11502336	BANJO BOLT 3/8	3	
20	11506832	TITLE	1	
21	21504542	DOWTY SEAL 1/2	2	

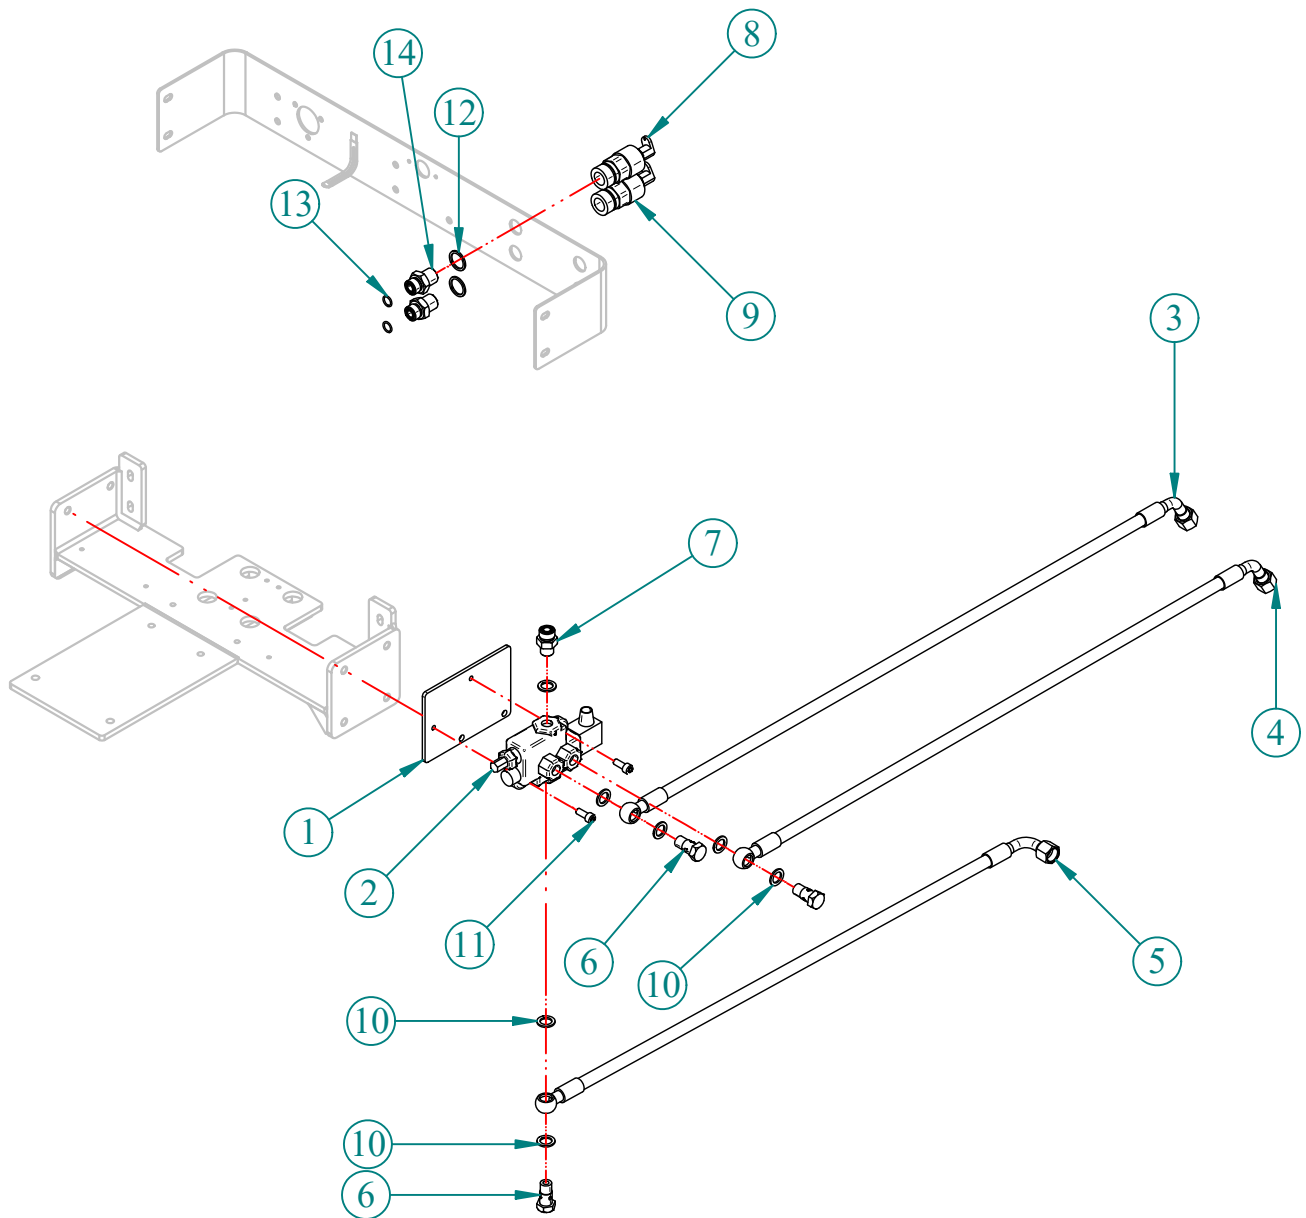 

DIRECTION CONTROL VALVE -2

MODEL :- HST
ASSEMBLY NO. :-11306706


Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11206658	DCV2 MOUNTING BRACKET	1	
2	11202328	HYDRAULIC DISTRIBUTOR VALVE (RETAIN TYPE)	1	
3	11206661	PIPE(DCV2 TO QRC-4)	1	
4	11206659	PIPE(DCV-2 TO QRC-3)	1	
5	11206662	PIPE FROM DCV2 TO LIFT	1	
6	11502336	BANJO BOLT 3/8	3	
7	11206055	NIPPLE 3/8"BSP x 13/16" UN	1	
8	11206079	FEMALE QRC BLACK	1	
9	11206081	FEMALE QRC YELLOW	1	
10	11402783	DOWTY SEAL 3/8	7	
11	11500599	ALLEN BOLT M8x20 (F.T)	2	
12	21504542	DOWTY SEAL 1/2	2	
13	11205329	O-RING 12.42X1.78	2	
14	11205327	NIPPLE 1/2" BSP X 13/16" UN	2	

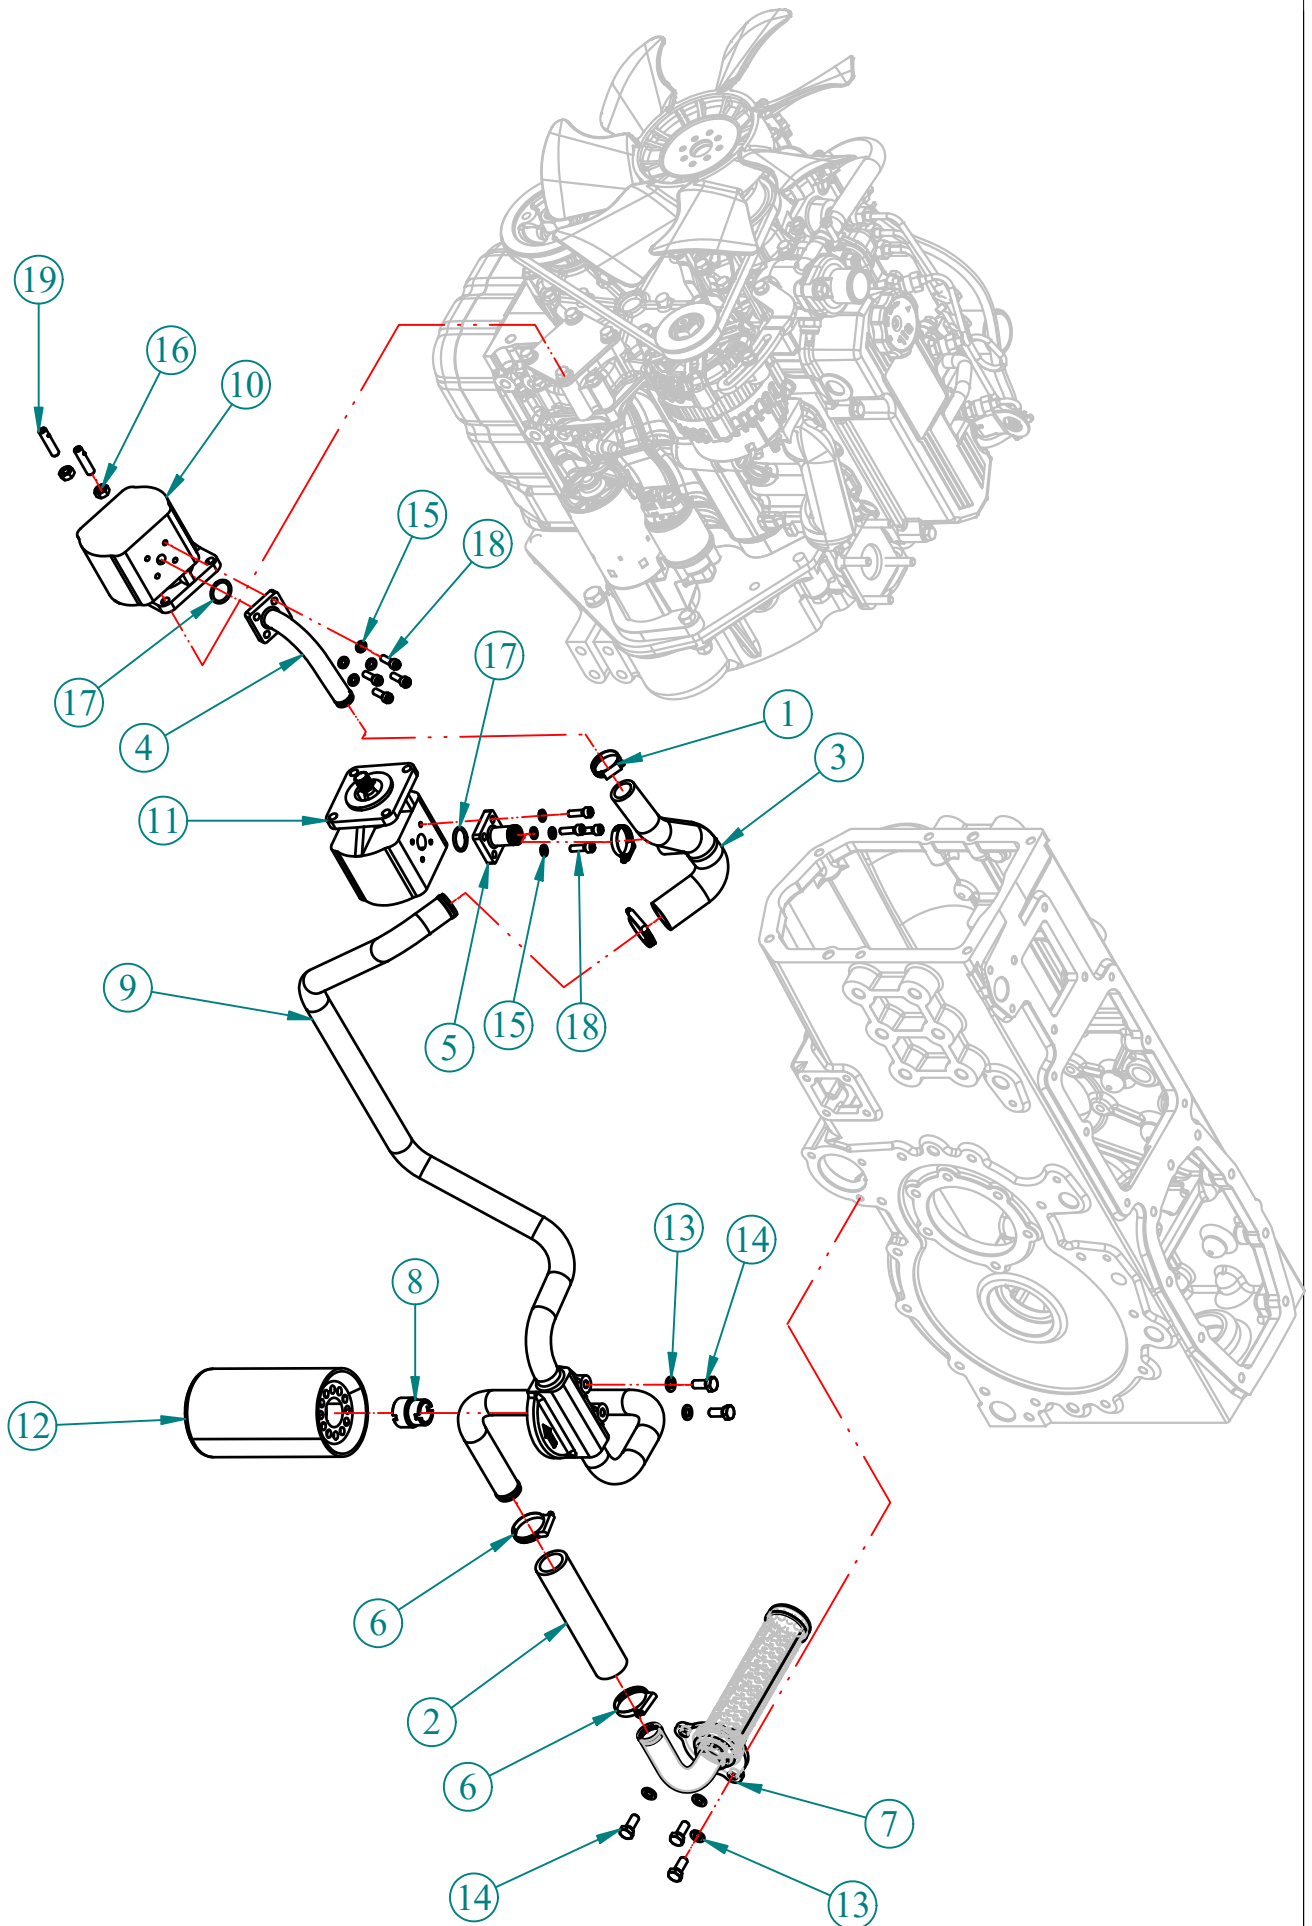 

HYDRAULIC PUMP & PIPE ASSEMBLY 1

MODEL :- HST
ASSEMBLY NO. :-11306695


Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11201445	CLAMP 25mm (IS: 4762)	2	
2	11205155	SUCTION HOSE (150mm)	1	
3	11205158	T- HOSE SUCTION PIPE	1	
4	11205159	PUMP CONECTION (PS)	1	
5	11205160	PUMP CONECTION (HYD)	1	
6	11205251	CLAMP 40mm (IS: 4762)	3	
7	11205261	STRAINER FILTER Ø45	1	
8	11205621	NIPPLE SUCTION FILTER HEAD	1	
9	11206606	SUCTION FILTER HEAD	1	
10	11402455	GEAR PUMP HYDRAULIC (ACW)	1	
11	11402456	GEAR PUMP HYDRAULIC (CW)	1	
12	11405481	SUCTION FILTER ASSY	1	
13	11500052	SPRING WASHER - 8mm	5	
14	11500067	HEX. BOLT M8X20 (F.T)	5	
15	11500073	SPRING WASHER - 6 mm	8	
16	11500082	HEX NUT M8	2	
17	11500415	O-RING Ø20 x Ø2.5	2	
18	11500881	ALLEN BOLT M6x20 (F.T.)	8	
19	11502260	GRUB BOLT M8x35	2	

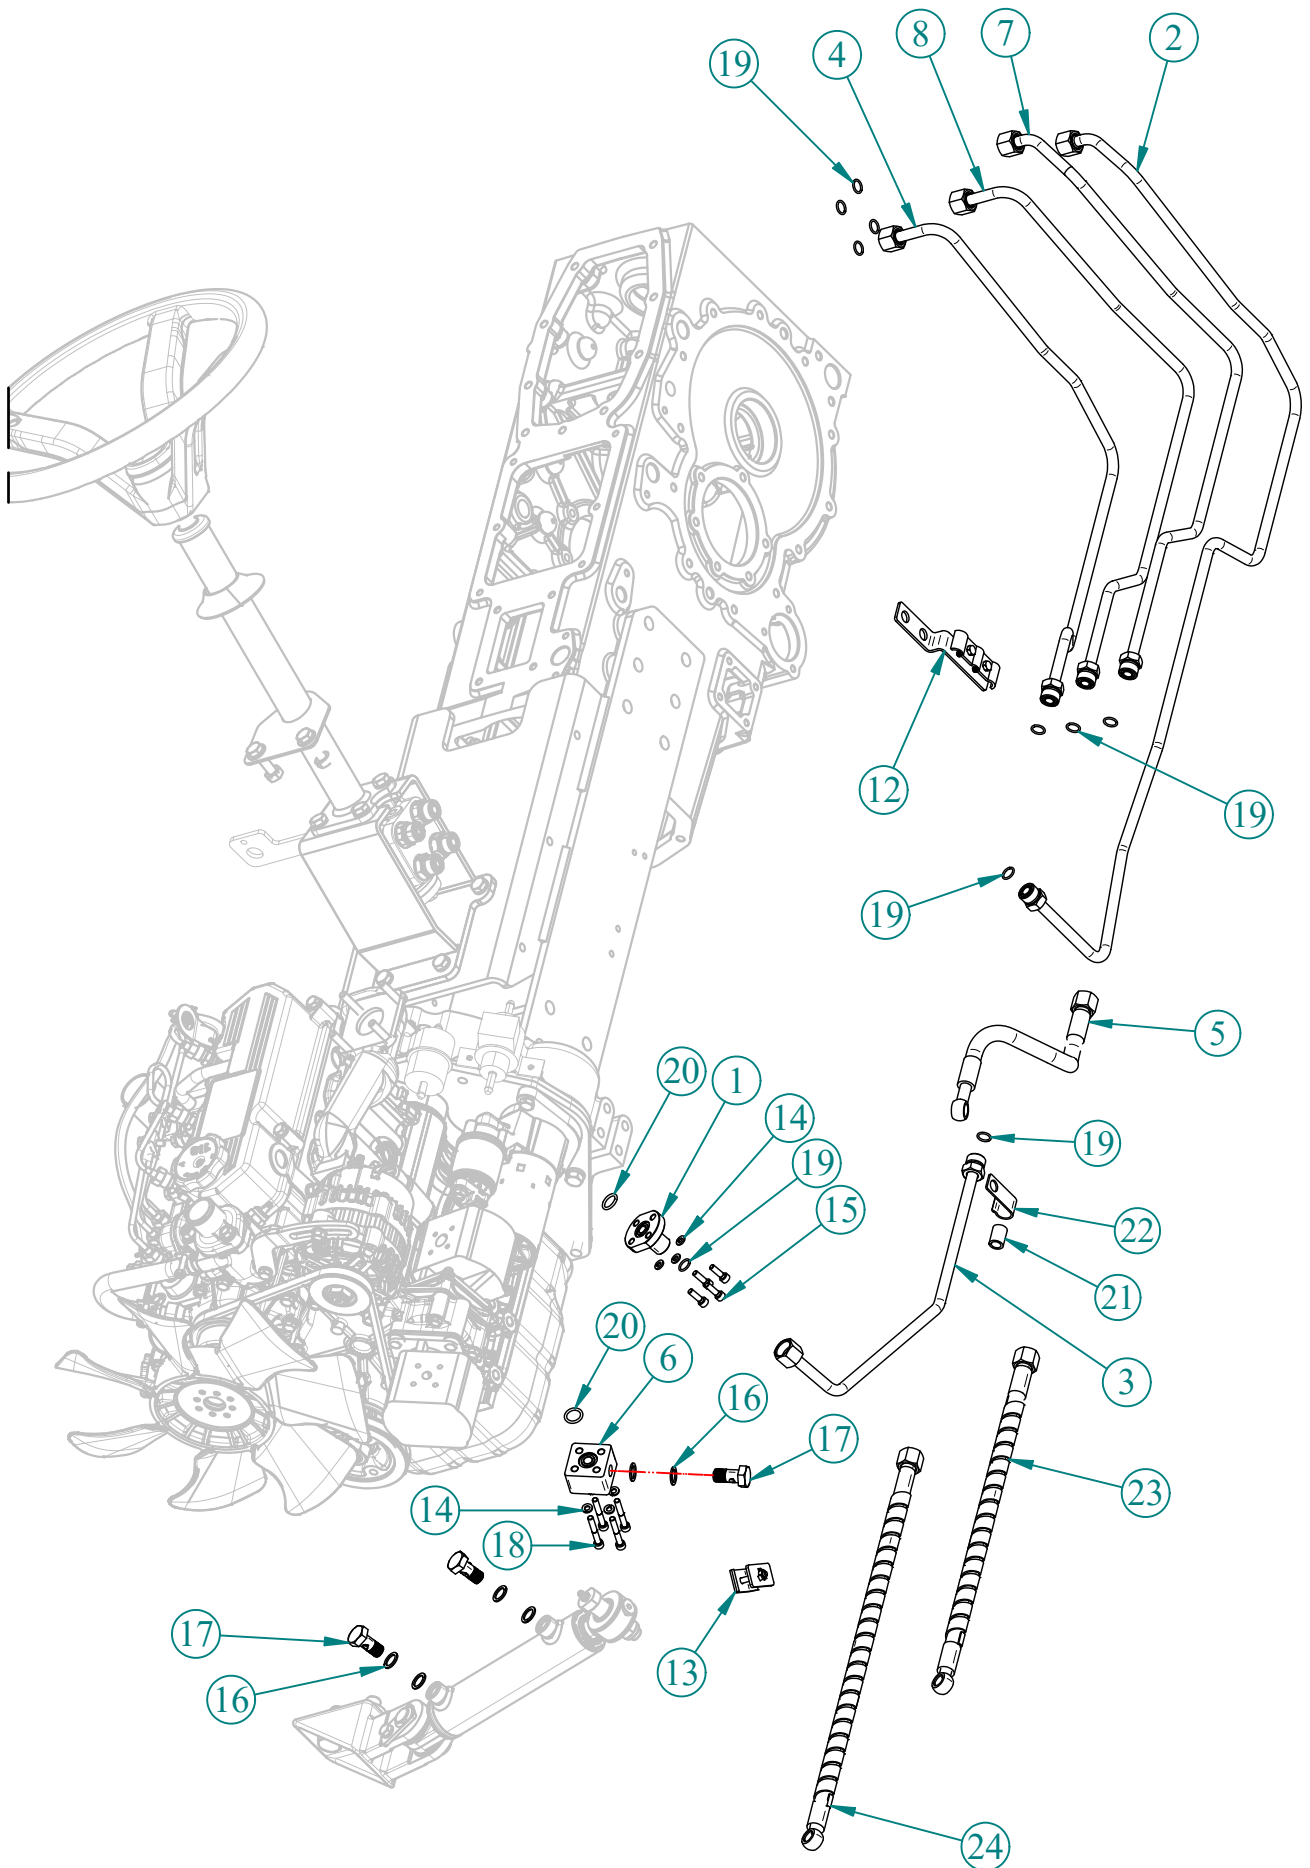 

HYDRAULIC PUMP & PIPE ASSEMBLY 2

MODEL :- HST
ASSEMBLY NO. :-11306710


Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11205325	PUMP CONNECTION 13/16" UN	1	
2	11206609	PRIMARY PIPE STEERING TO OIL COOLER	1	
3	11206610	PRIMARY DELIVERY PIPE	1	
4	11206612	SECONDARY PIPE PUMP TO STEERING	1	
5	11206611	FLEXIBLE PIPE PUMP TO STEERING	1	
6	11206615	PUMP CONNECTION 9/16" UN	1	
7	11206613	PRIMART STEERING PIPE - L	1	
8	11206614	PRIMARY STEERING PIPE -R	1	
12	11208312	CLAMP FOR POWER STEERING PIPES	1	
13	11208609	CLAMP FOR FLEXIBLE STEERING PIPE	1	
14	11500073	SPRING WASHER - 6 mm	8	
15	11500881	ALLEN BOLT M6x20 (F.T.)	4	
16	11205317	COPPER WASHER Ø14.5XØ20X1.5	6	
17	11205286	BANJO BOLT 9/16" - 18 UNF 2A L-30	3	
18	11206798	ALLEN BOLT M6x45 (HT)	4	
19	11205329	O-RING 12.42X1.78	10	
20	11504882	O-RING Ø15.54 x 2.62	2	
21	11205523	RUBBER PROTECTION - PIPE Ø12	1	
22	11206471	CLAMP OIL COOLER OUTLET PIPE	1	
23	11208425	FLEXIBLE STEERING PIPE-R	1	
24	11208426	FLEXIBLE STEERING PIPE L	1	

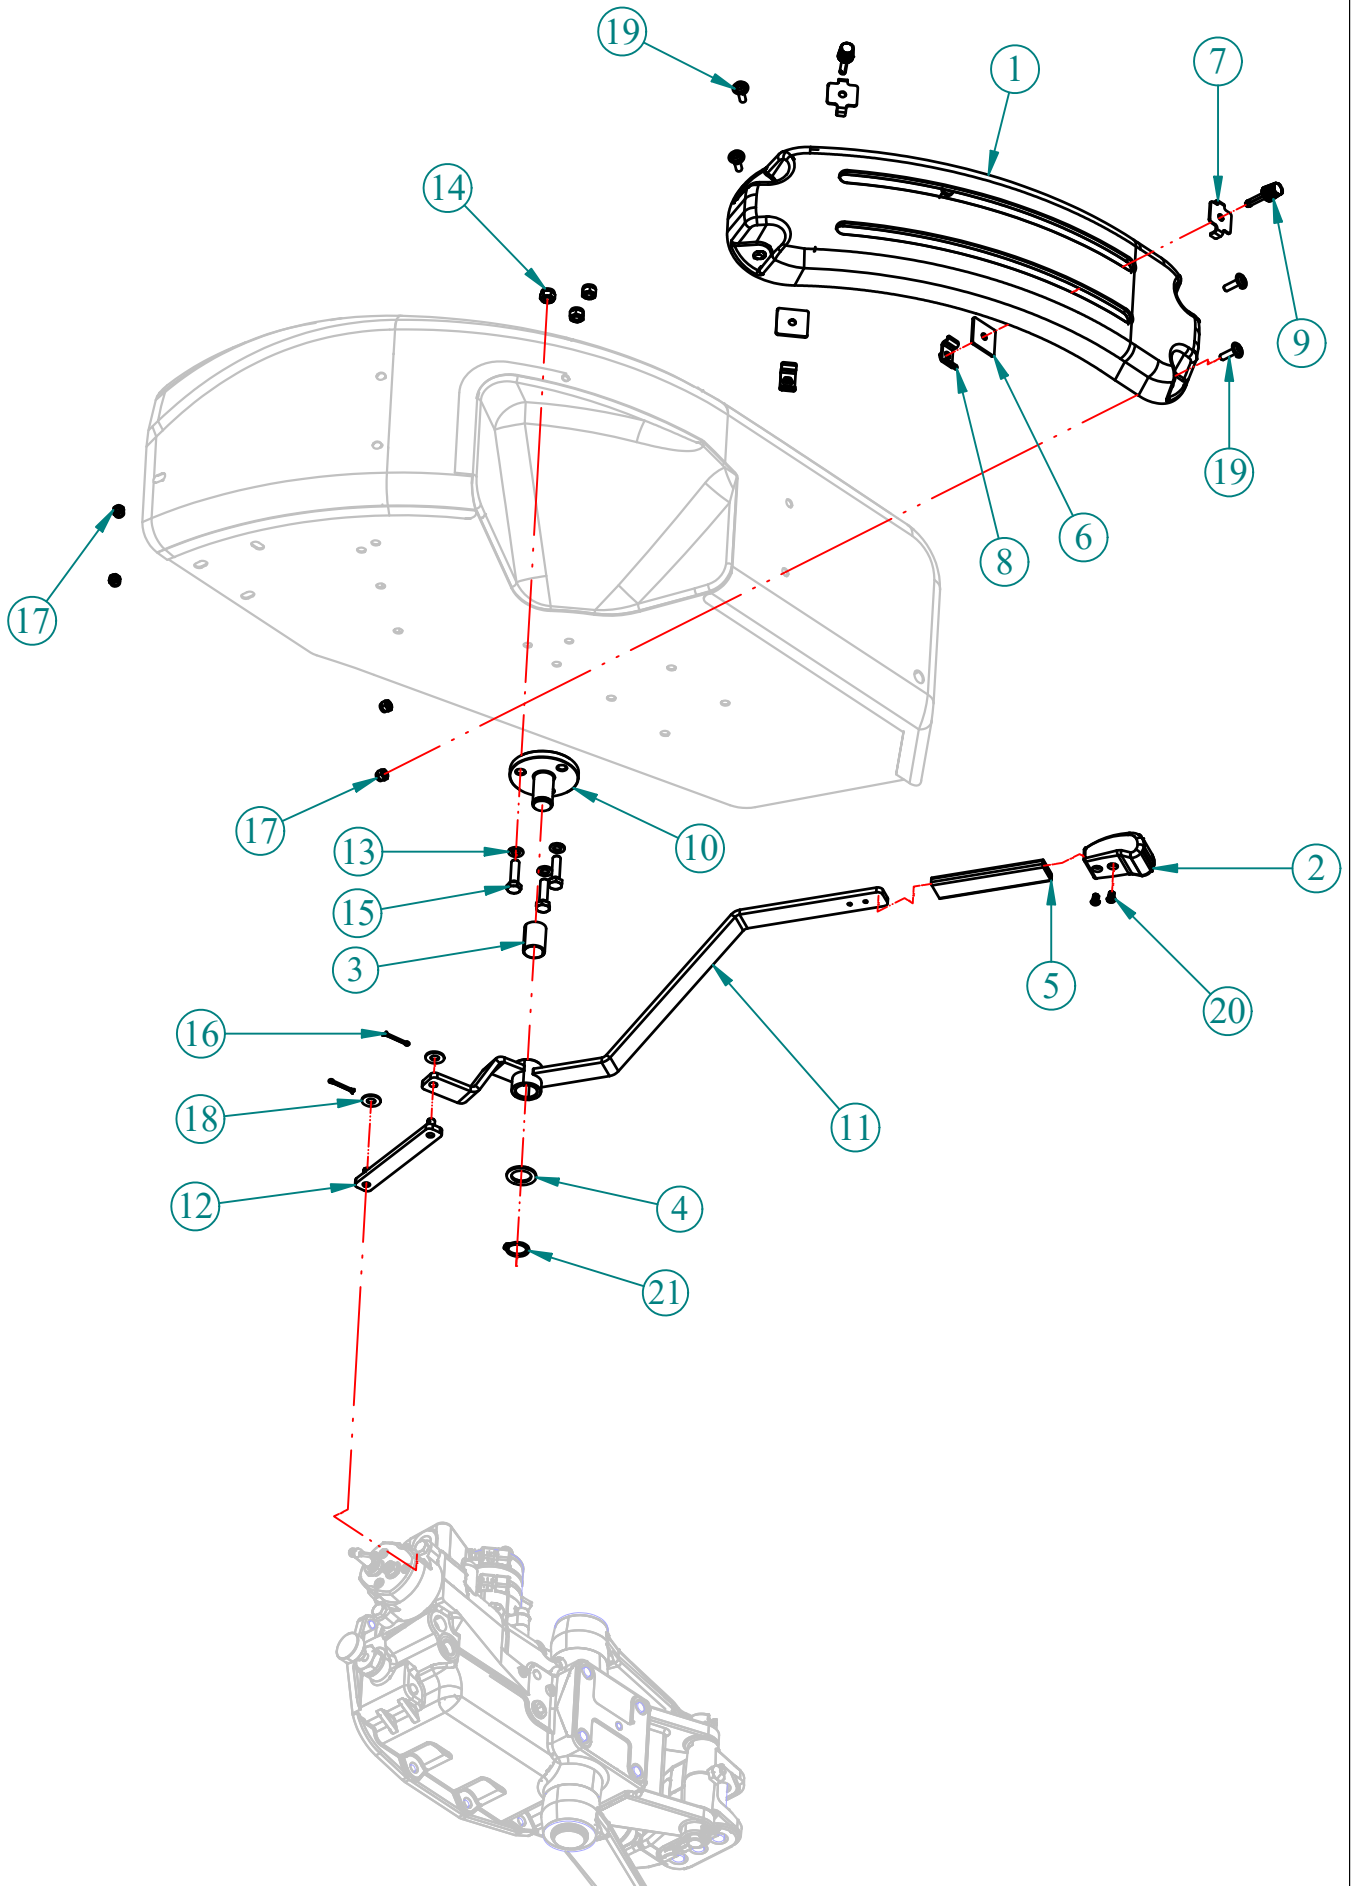 

PC DC LEVER ASSEMBLY


MODEL :- HST
ASSEMBLY NO. :-11306696

Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11203000	FENDER COVER RH	1	
2	11203152	KNOB PC	1	
3	11203195	BUSH, LEVER IGUS (Ø20 x Ø22 x 30)	1	
4	11203206	PLAIN WASHER Ø20.3xØ30x2	1	
5	11204698	COVER PC PLASTIC	1	
6	11205431	PAD RUBBER SPACER PC-DC	2	
7	11205432	PLATE STOPPER PC-DC (TOP)	2	
8	11205433	PLATE STOPPER PC-DC (BOTTOM)	2	
9	11205434	KNOB STOPPER PC-DC	2	
10	11206598	LEVER GUIDE , 4WD	1	
11	11206616	LEVER POSITION CONTROL	1	
12	11206617	LINK-PC	1	
13	11500052	SPRING WASHER - 8mm	3	
14	11500520	NYLOCK HEX NUT M8	3	
15	11500580	HEX BOLT M8x30 (F.T) [8.8]	3	
16	11500619	SPLIT PIN 3/32" x 1"	2	
17	11500947	NYLOCK NUT M6	4	
18	11501068	PLAIN WASHER Ø8.5XØ19X1.5	2	
19	11502174	M6 X 20 ROUND HEAD SCREW WITH COLLAR	4	
20	11503131	PAN HEAD SCREW M5X8	2	
21	11503297	CIRCLIP,EXTERNAL Ø20x1.75	1	

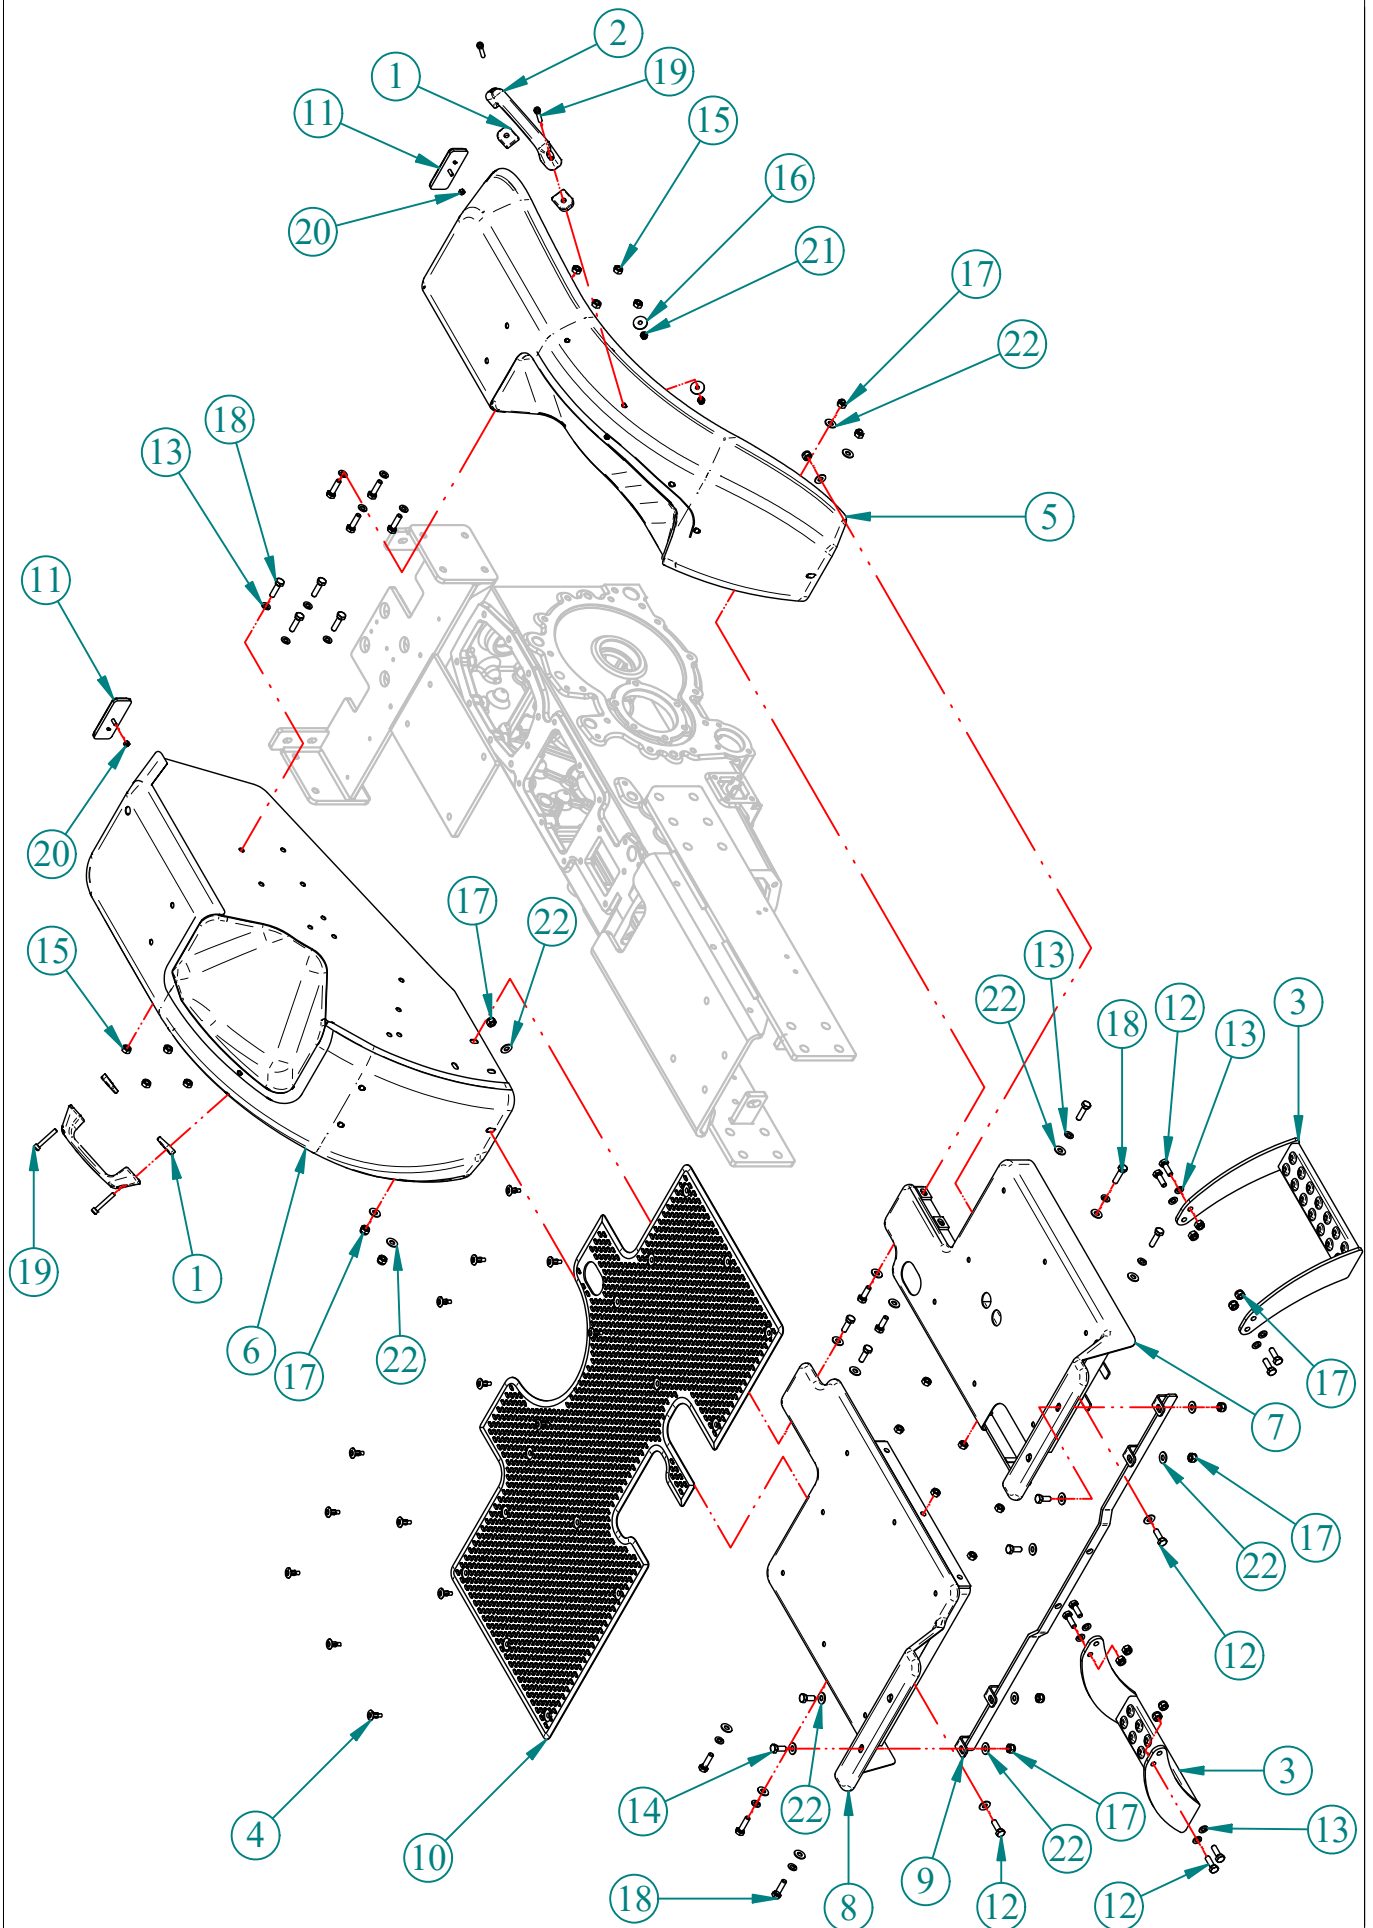 


FENDER AND FOOTREST ASSEMBLY
MODEL :- HST
ASSEMBLY NO. :-11306701

Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11202080	RUBBER DAMPER, HANDLE	4	
2	11202086	HANDLE GRIP, FENDER	2	
3	11205019	FOOT STEP	2	
4	11205711	PUSH RIVET 8mm	14	
5	11206649	FENDER LH	1	
6	11206650	FENDER RH	1	
7	11206651	FOOT REST - LH	1	
8	11206652	FOOT REST - RH	1	
9	11206653	SUPPORT - FOOTREST	1	
10	11206654	FLOOR RUBBER MAT BIG	1	
11	11405161	REFLEX REFLECTOR	2	
12	11500051	HEX. BOLT M8 X 25 (F.T.)	14	
13	11500052	SPRING WASHER - 8mm	22	
14	11500067	HEX. BOLT M8X20 (F.T)	4	
15	11500082	HEX NUT M8	14	
16	11500485	PLAIN WASHER Ø6.5 X Ø23 X 1.5	4	
17	11500520	NYLOCK HEX NUT M8	18	
18	11500580	HEX BOLT M8x30 (F.T) [8.8]	14	
19	11500855	ALLEN BOLT- M6 x 40 (F.T.)	4	
20	11500931	NYLOCK HEX. NUT M5	2	
21	11500947	NYLOCK NUT M6	4	
22	11501068	PLAIN WASHER Ø8.5XØ19X1.5	26	

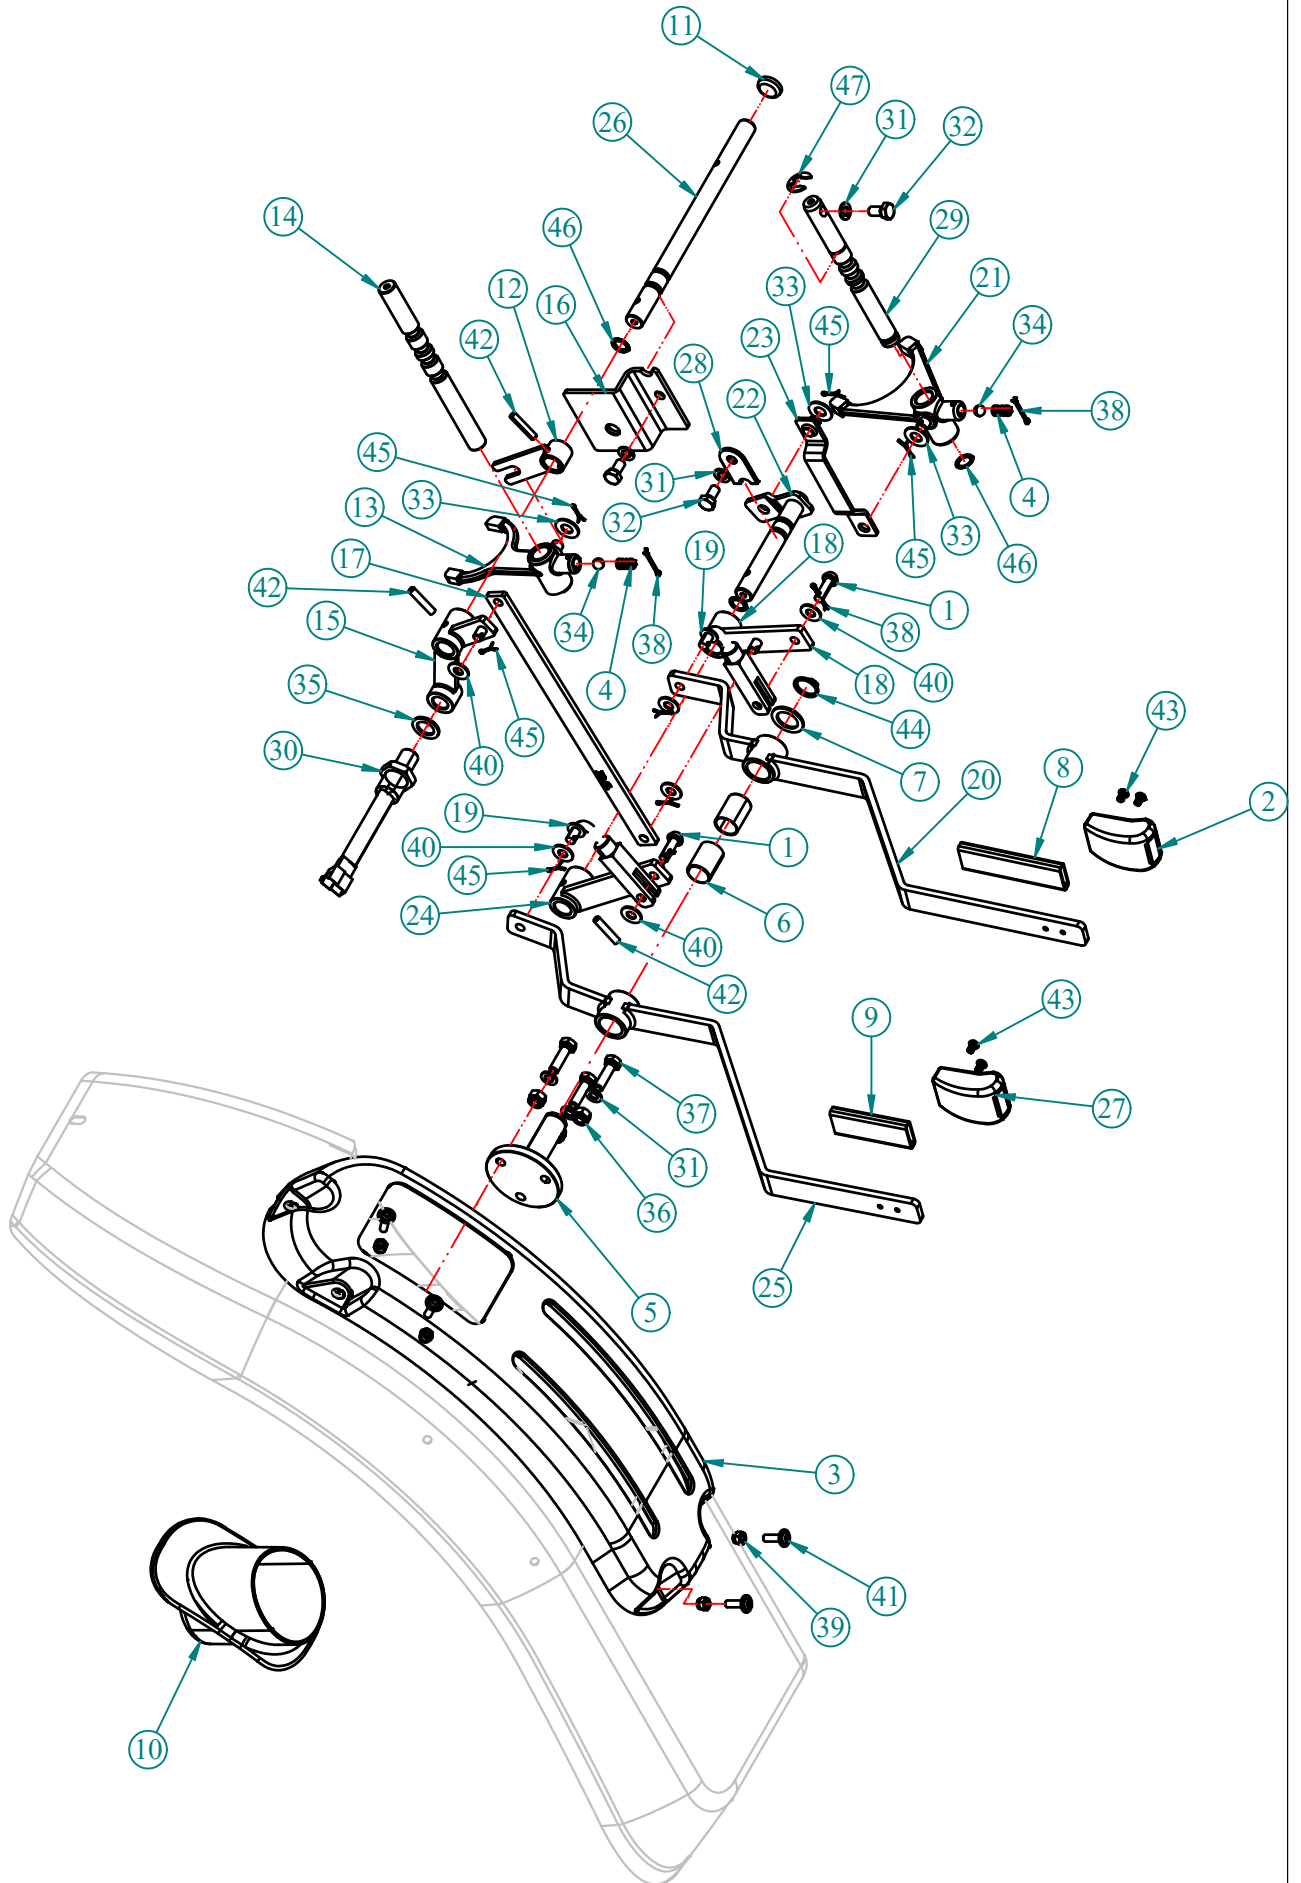 

HML PTO LEVER ASSEMBLY
MODEL :- HST
ASSEMBLY NO. :-11306691


Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11200066	PIN CLUTCH	2	
2	11202995	KNOB H-M-L	1	
3	11202999	FENDER COVER LH	1	
4	11203109	SPRING L-15.6	2	
5	11203110	LEVER,GUIDE	1	
6	11203195	BUSH, LEVER IGUS (Ø20 x Ø22 x 30)	2	
7	11203206	PLAIN WASHER Ø20.3xØ30x2	1	
8	11204697	COVER H-M-L PLASTIC	1	
9	11204699	COVER PTO PLASTIC	1	
10	11205774	POCKET - FENDER COVER LH	1	
11	11205926	SEALING CAP	1	
12	11206570	HOOK ,RANGE ASSLY	1	
13	11206571	FORK RANGE,HML	1	
14	11206574	RAIL SHAFT HML	1	
15	11206576	HUB , RANGE,HML	1	
16	11206577	BRACKET-HML_ SWITCH NEUTRAL BRACKET	1	
17	11206578	LINK HML	1	
18	11206580	LEVER RANGE HML	1	
19	11206581	LINK (PTO & HML)	2	
20	11206582	LEVER HML	1	
21	11206583	FORK PTO	1	
22	11206586	ARM , PTO	1	
23	11206587	LINK PTO	1	
24	11206588	LEVER HUB , PTO	1	
25	11206589	LEVER PTO	1	
26	11206594	RANGE SHAFT	1	
27	11207045	KNOB PTO	1	
28	11208307	PTO STOPPER PLATE	1	
29	11208431	RAIL SHAFT PTO	1	
30	11402494	NEUTRAL SAFETY SWITCH	1	
31	11500052	SPRING WASHER - 8mm	6	
32	11500076	HEX BOLT M8 x 16	3	
33	11500078	PLAIN WASHER Ø10.5xØ22x1.5	3	
34	11500089	BALL - Ø3/8"	2	
35	11500427	COPPER WASHER Ø16.5xØ25x1	2	
36	11500520	NYLOCK HEX NUT M8	3	
37	11500580	HEX BOLT M8x30 (F.T) [8.8]	3	
38	11500619	SPLIT PIN 3/32" x 1"	4	
39	11500947	NYLOCK NUT M6	4	
40	11501068	PLAIN WASHER Ø8.5XØ19X1.5	6	
41	11502174	M6 X 20 ROUND HEAD SCREW WITH COLLAR	4	
42	11502531	SLOTTED SPRING PIN Ø6X30	3	
43	11503131	PAN HEAD SCREW M5X8	4	
44	11503297	CIRCLIP,EXTERNAL Ø20x1.75	1	
45	11506479	SPLIT PIN Ø2 X 16	7	
46	11506575	O RING _Ø11.8X2.4	3	
47	11506608	E-CLIP (Ø12X1.3) IS 3075.3.1986	1	

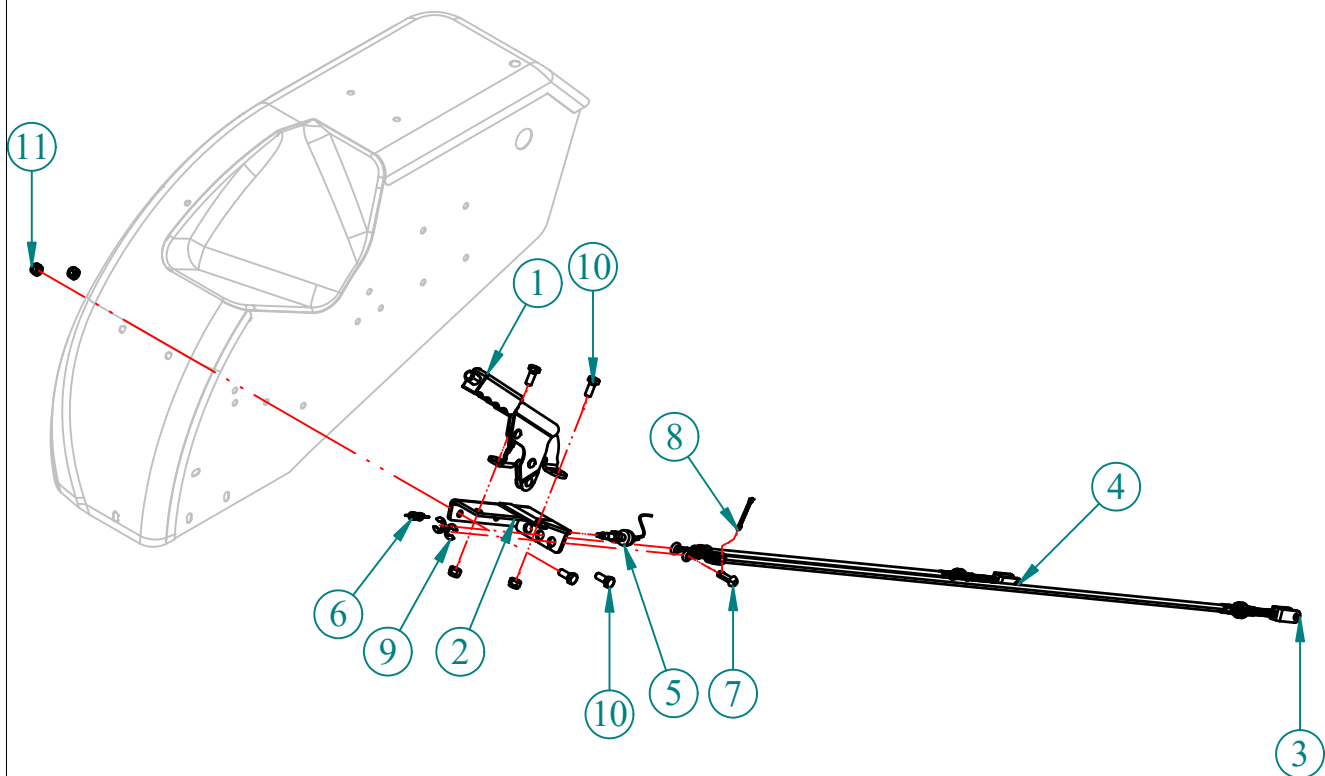 

PARKING BRAKE ASSEMBLY

MODEL :- HST
ASSEMBLY NO. :-11306678


Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11402794	PARKING BRAKE	1	
2	11205393	BRACKET - HAND BRAKE	1	
3	11206504	CABLE HAND BRAKE BIG	1	
4	11206503	CABLE HAND BRAKE SMALL	1	
5	11402078	ASSEMBLY BRAKE SWITCH	1	
6	11201530	SPRING ACCELERATOR LEVER	1	
7	11200066	PIN CLUTCH	1	
8	11500357	SPLIT PIN 1/8" x 1.1/2"	1	
9	11503026	EXTERNAL CIRCLIP ID 10	2	
10	11500067	HEX. BOLT M8X20 (F.T)	4	
11	11500520	NYLOCK HEX NUT M8	4	

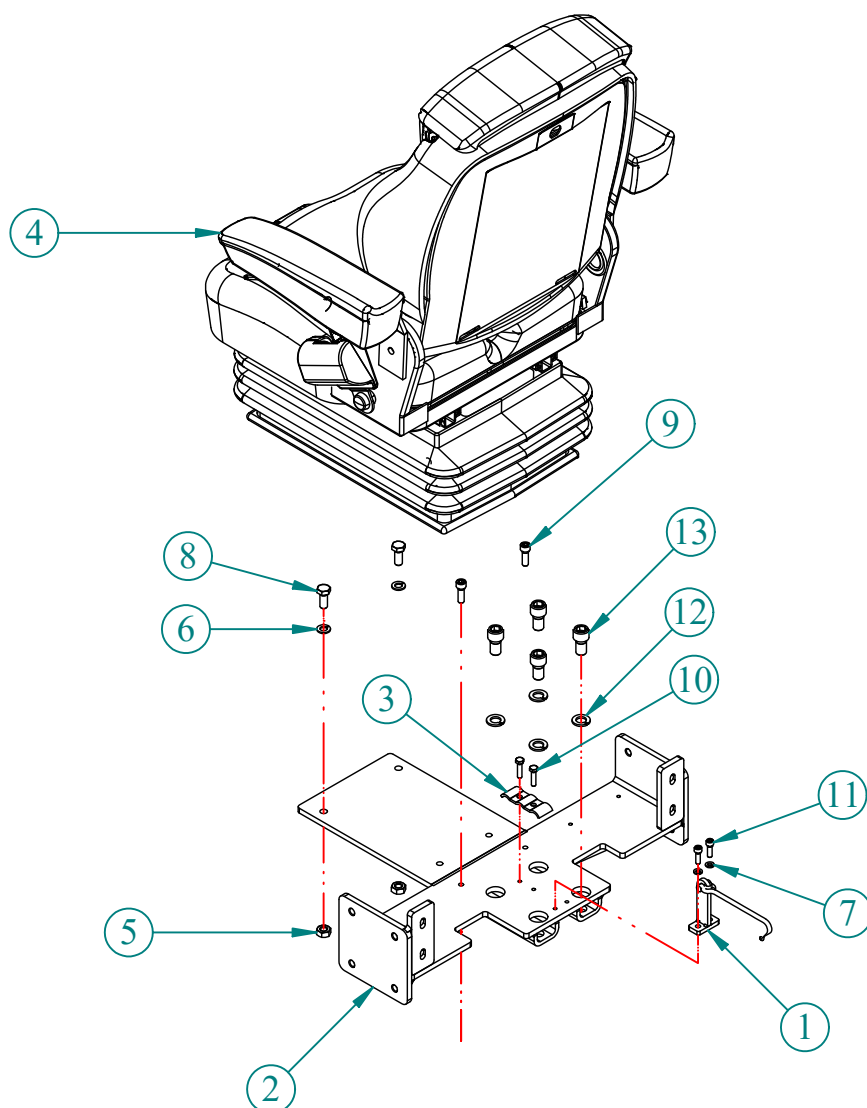 

FENDER BRACKET AND SEAT ASSEMBLY


MODEL :- HST
ASSEMBLY NO. :-11306702

Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11205622	TOP LINK HOLDER	1	
2	11206655	BRACKET FENDER MOUNTING	1	
3	11207731	CLAMP QRC PIPE	1	
4	11408608	SEAT-ASSY STPLUS TV140	1	
5	11500024	HEX NUT M10	2	
6	11500062	SPRING WASHER - 10mm	2	
7	11500073	SPRING WASHER - 6 mm	2	
8	11500156	HEX. BOLT M10X25 (F.T.)	2	
9	11500157	Allen Bolt M8x25 (F.T.)	2	
10	11500195	HEX. BOLT M6x25 (F.T.)8.8	2	
11	11500881	ALLEN BOLT M6x20 (F.T.)	2	
12	11501826	SPRING WASHER - 14mm	4	
13	11505404	ALLEN BOLT M14x25 (F.T.)	4	

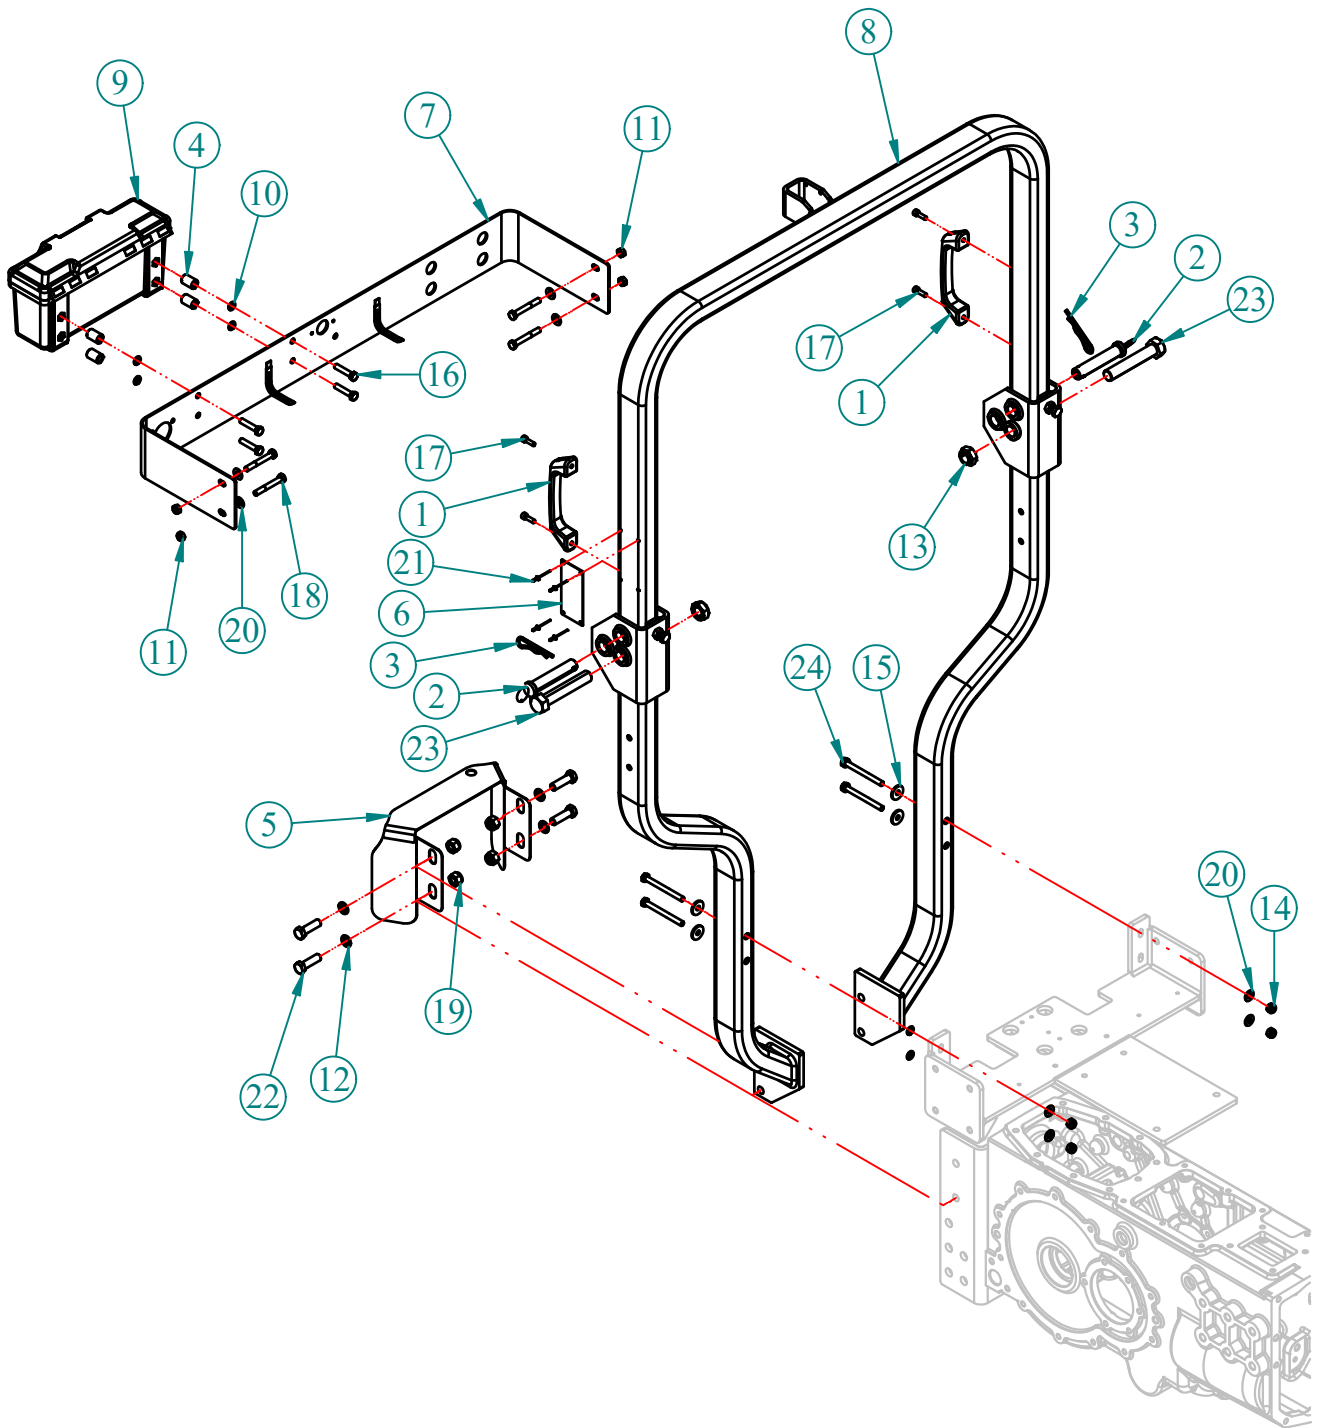 


ROPS ASSEMBLY
MODEL :- HST
ASSEMBLY NO. :-11306700

Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11202086	HANDLE GRIP, FENDER	2	
2	11202236	HITCH PIN, ROPS	2	
3	11202237	CLIP PIN, Ø4	2	
4	11205430	SPACER (Ø9xØ16x24)	4	
5	11206647	POWER TAKE OFF MASTER SHIELD	1	
6	11206648	IDENTIFICATION PLATE ROPS	1	
7	11208597	QRC PLATE (HST)	1	
8	11306645	ROPS (HST)	1	
9	11402998	TOOL BOX ASSEMBLY	1	
10	11500052	SPRING WASHER - 8mm	8	
11	11500082	HEX NUT M8	4	
12	11500118	SPRING WASHER 12 mm	4	
13	11500160	NYLOCK HEX. NUT 3/4" UNF (16 TPI)	2	
14	11500520	NYLOCK HEX NUT M8	4	
15	11500712	PLAIN WASHER Ø8xØ25x3	4	
16	11500809	HEX. BOLT M8x40 (F.T.) 8.8	4	
17	11500881	ALLEN BOLT M6x20 (F.T.)	4	
18	11500999	Hex Bolt M8 x 60	4	
19	11501024	NYLOCK HEX. NUT M12	4	
20	11501068	PLAIN WASHER Ø8.5XØ19X1.5	8	
21	11501460	BLIND ALLUMINIUM RIVET Ø0.125"x0.422"	4	
22	11501772	HEX. BOLT M12x40 (H.T.)- GRADE- 10.9	4	
23	11505106	SPECIAL BOLT - ROPS	2	
24	11505394	HEX. BOLT M8 X 85 (10.9)	4	

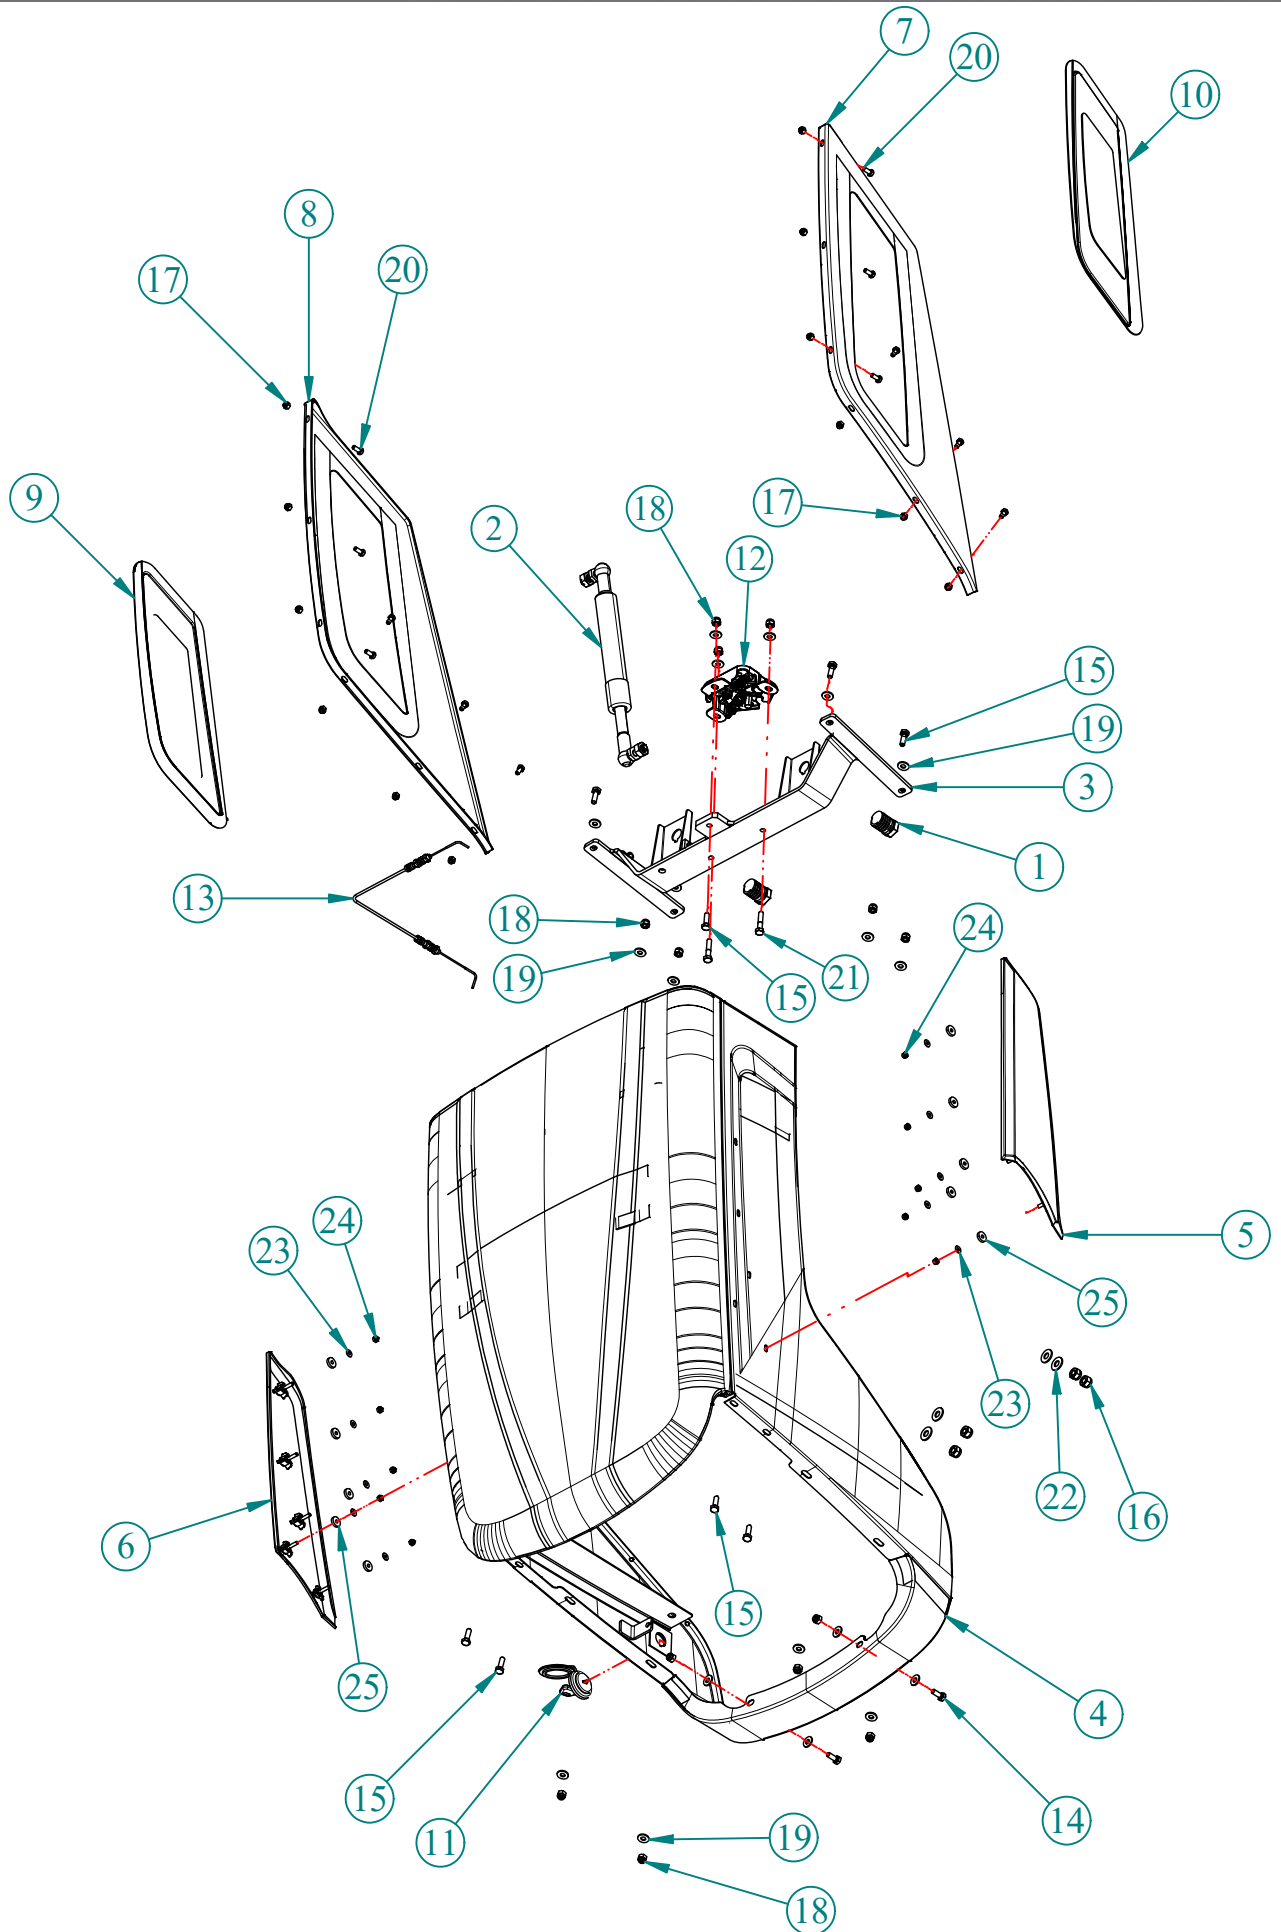 


BONNET & FRONT MESH ASSEMBLY 1
MODEL :- HST
ASSEMBLY NO. :-11307300

Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11202147	RUBBER GROMET BONNET TOP	2	
2	11203214	AUTO LIFT GAS SPRINGS	1	
3	11204996	BRACKET LOCK MOUTING	1	
4	11205184	BONNET-8G	1	
5	11205192	BRAND PANEL BONNET LH	1	
6	11205193	BRAND PANEL BONNET RH	1	
7	11206056	BONNET SIDE LH	1	
8	11206057	BONNET SIDE RH	1	
9	11209055	BONNET SIDE GRILL RH	1	
10	11209056	BONNET SIDE GRILL LH	1	
11	11404800	LOCK BONNET WITH KEY (273)	1	
12	11405011	LATCH COMP HOOD	1	
13	11405012	CABLE LATCH COMP HOOD	1	
14	11500071	HEX. BOLT M6x15 (F.T.)8.8	2	
15	11500426	HEX. BOLT M6x20 (F.T.)8.8	9	
16	11500520	NYLOCK HEX NUT M8	4	
17	11500931	NYLOCK HEX. NUT M5	12	
18	11500947	NYLOCK NUT M6	13	
19	11501015	PLAIN WASHER Ø6.5xØ15x1.5	19	
20	11501034	HEX. BOLT M5x12 (F.T.) 8.8	12	
21	11501058	HEX. BOLT M6 X 12 (F.T.)	2	
22	11501068	PLAIN WASHER Ø8.5XØ19X1.5	4	
23	11503166	PLAIN WASHER Ø4 x Ø10 x 0.5	10	
24	11505137	NYLOCK HEX. NUT M4	10	
25	11505200	RUBBER WASHER Ø4.5xØ14x3	10	

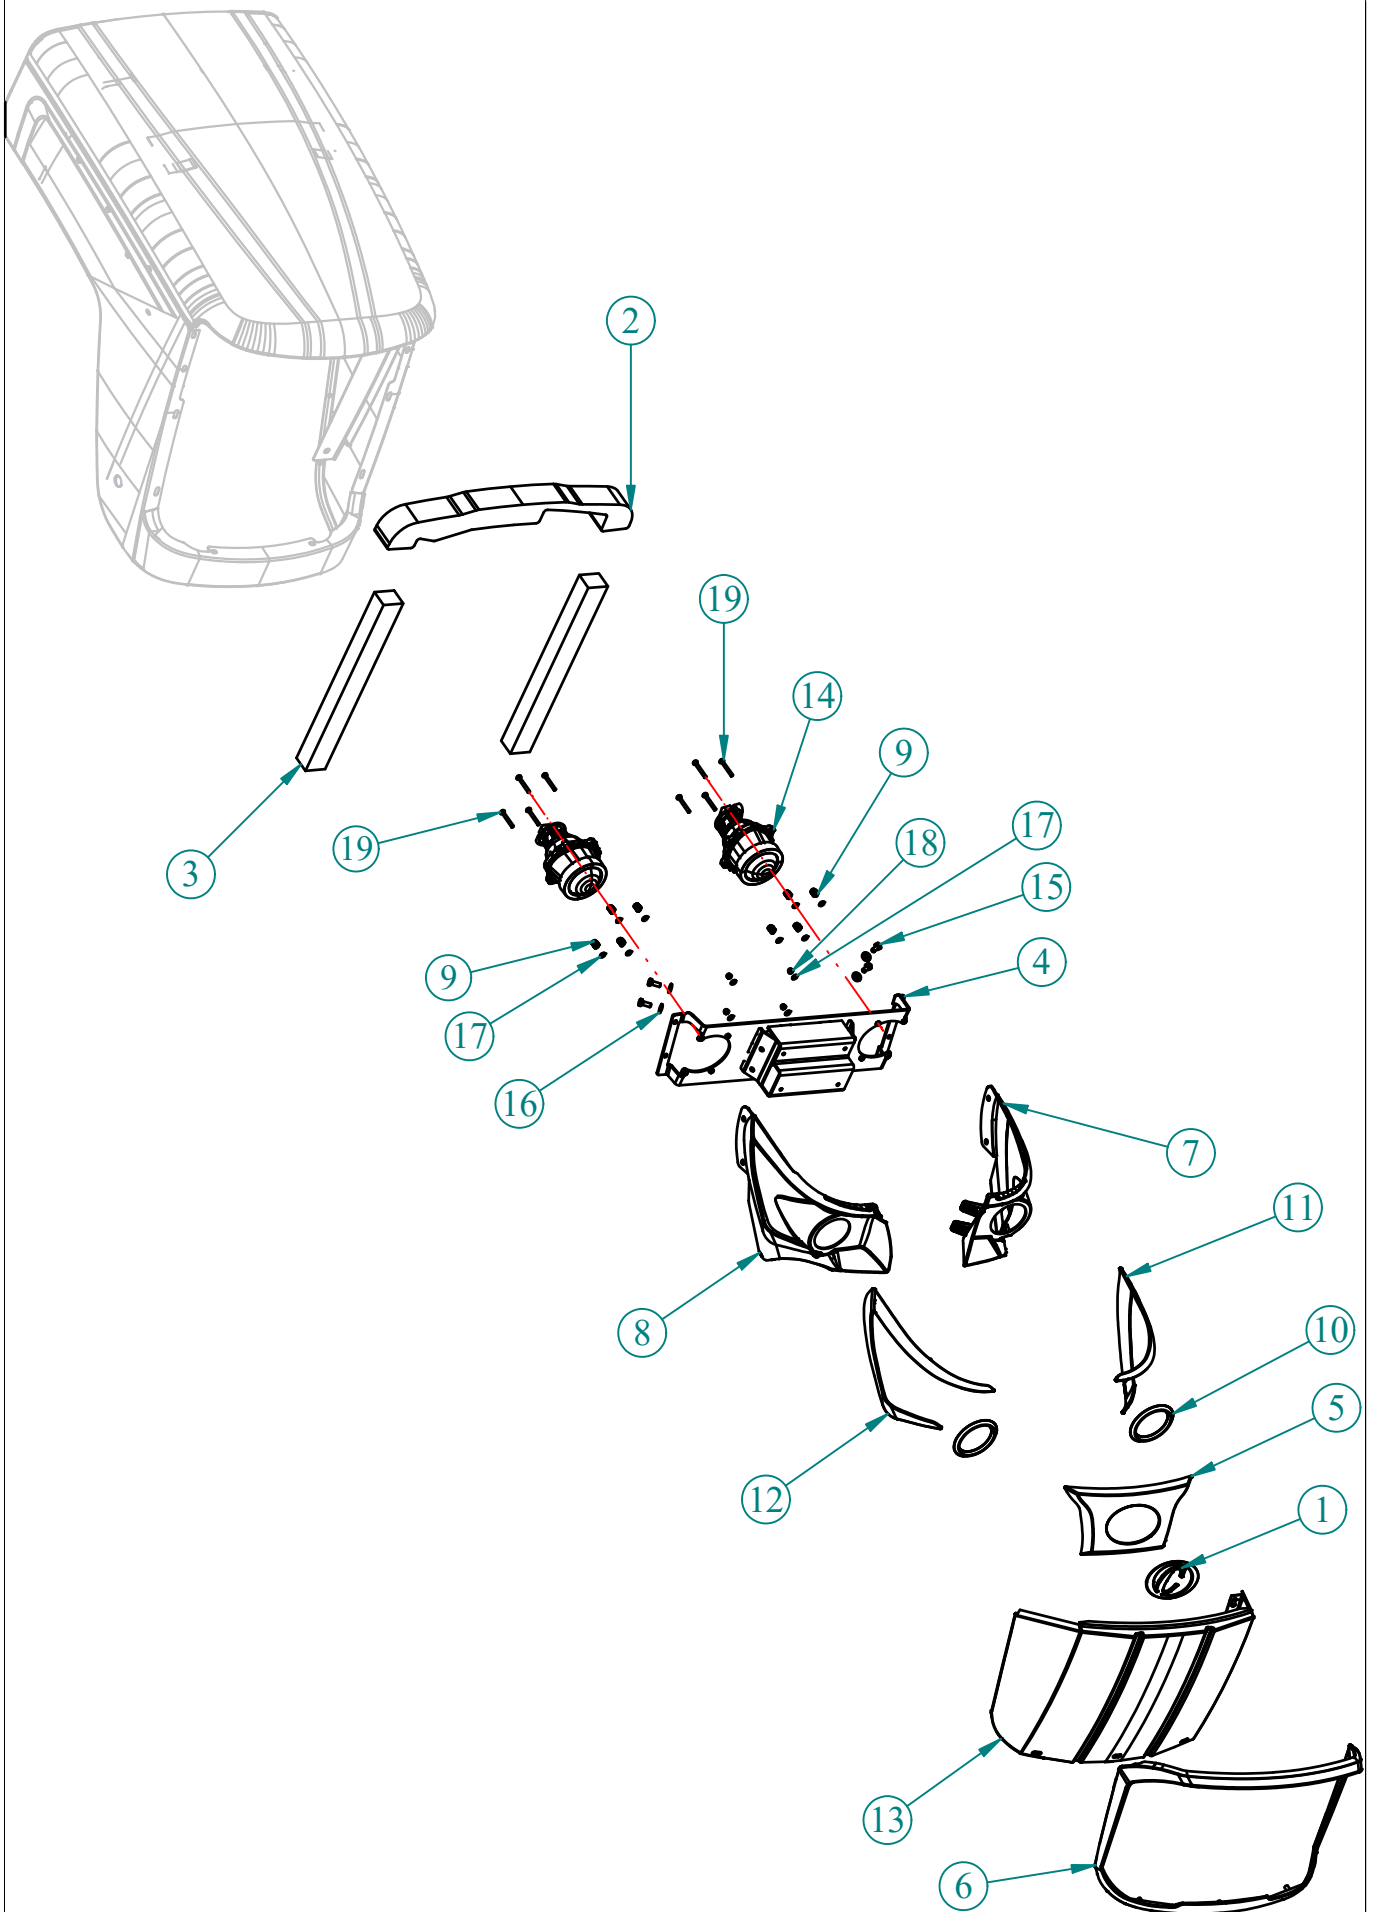 


BONNET FRONT MESH ASSY 2
MODEL :- HST
ASSEMBLY NO. :-11305548

Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11203258	""3D ""C"" EMBLEM"	1	
2	11205110	FOAM RADIATOR TOP SEALING	1	
3	11205112	FOAM RADIATOR SIDE SEALING (LH & RH)	2	
4	11205185	BRACKET HEAD LIGHT ASSEMBLY	1	
5	11205186	LOGO PANEL	1	
6	11205188	BORDER FRONT GRILL	1	
7	11205190	HEAD LAMP COVER LH	1	
8	11205191	HEAD LAMP COVER RH	1	
9	11205199	SPRING HEAD LIGHT	8	
10	11205267	RING HAND LAMP COVER	2	
11	11205396	BORDER HEAD LAMP COVER LH	1	
12	11205397	BORDER HEAD LAMP COVER RH	1	
13	11207723	FRONT GRILL 8G (283)	1	
14	11405010	M60 LOW BEAM	2	
15	11500071	HEX. BOLT M6x15 (F.T.)8.8	4	
16	11501015	PLAIN WASHER Ø6.5xØ15x1.5	4	
17	11503166	PLAIN WASHER Ø4 x Ø10 x 0.5	12	
18	11505137	NYLOCK HEX. NUT M4	4	
19	11505201	SCREW M4 x 35	8	

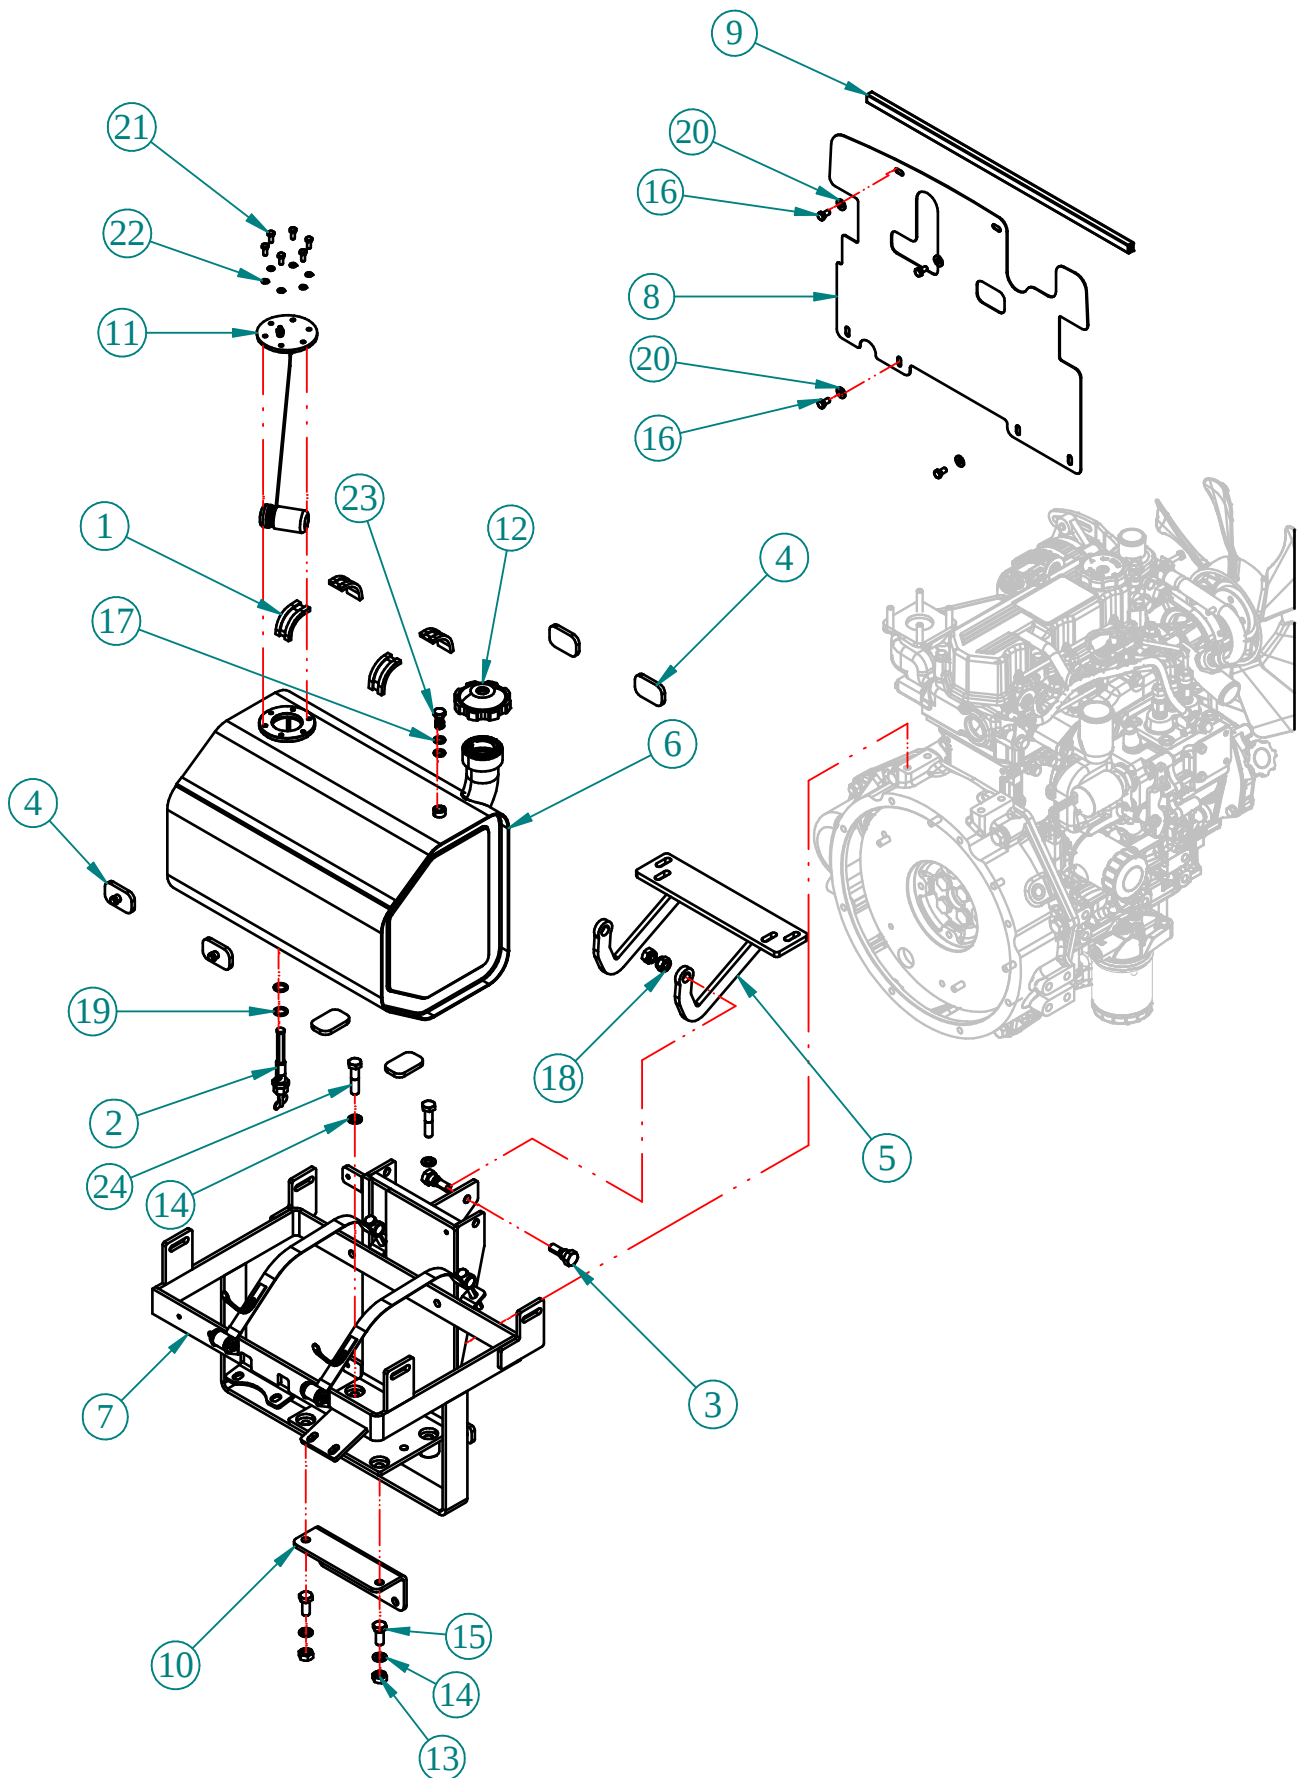 

FUAL TANK CAGE
MODEL :- HST
ASSEMBLY NO. :-11306703


Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11200857	RUBBER PIECES FOR FUEL TANK CLAMP	4	
2	11201854	COCK FUEL (WITH FILTER)	1	
3	11204757	SPECIAL BOLT, HINGE MOUTING	2	
4	11204845	RUBBER PAD, FUEL TANK CAGE	6	
5	11205294	HINGE, BONNET	1	
6	11205366	FUEL TANK (239)	1	
7	11205385	CAGE, FUEL TANK	1	
8	11205409	SEALING PLATE	1	
9	11205675	RUBBER GRIP CAGE	1	
10	11206656	BRACKET CAGE MOUNTING	1	
11	11401032	FUEL TANK UNIT	1	
12	11405503	FUEL TANK CAP 239	1	
13	11500024	HEX NUT M10	2	
14	11500062	SPRING WASHER - 10mm	4	
15	11500156	HEX. BOLT M10X25 (F.T.)	2	
16	11500484	HEX. BOLT M6 X 12 (F.T.)	4	
17	11500654	COPPER WASHER 10mm (15x10x1.5)	2	
18	11500676	NYLOCK NUT M10	2	
19	11500783	COPPER WASHER Ø13xØ18x1.5	2	
20	11501015	PLAIN WASHER Ø6.5xØ15x1.5	4	
21	11501034	HEX. BOLT M5x12 (F.T.) 8.8	6	
22	11501207	SPRING WASHER 5 mm	6	
23	11501846	BANJO BOLT M10	1	
24	11505035	HEX.BOLT 10x45x1.25P(H.T)	2	

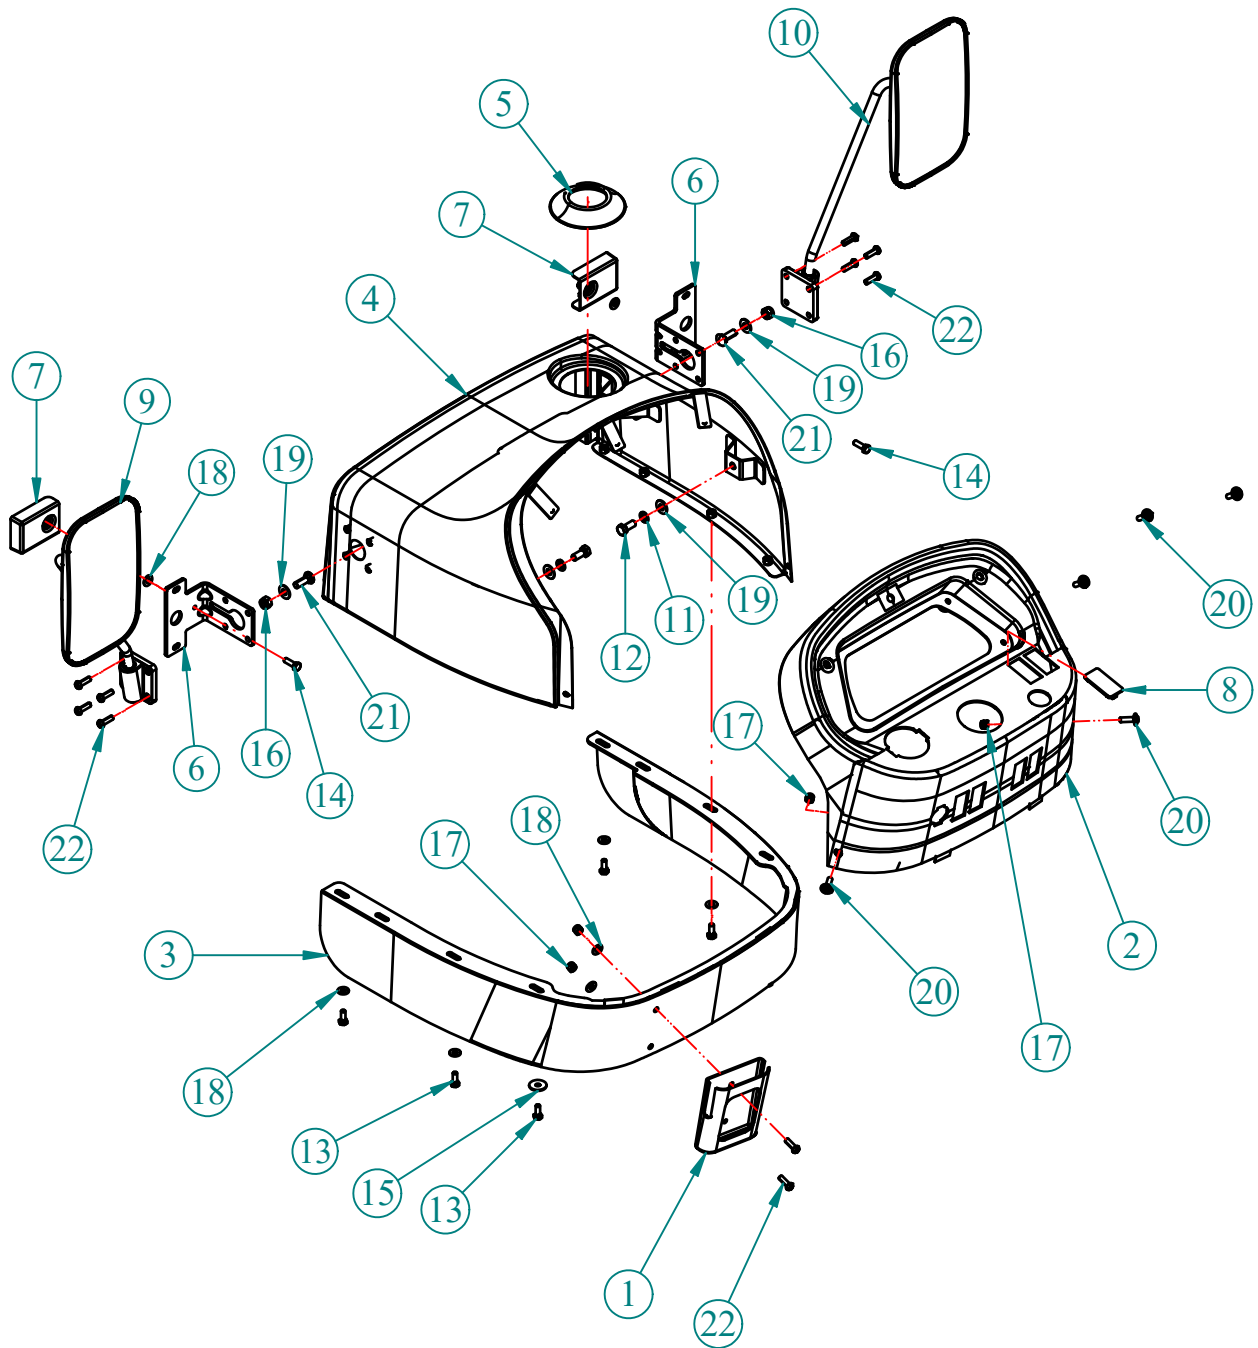 

DASH BOARD ASSEMBLY

MODEL :- HST
ASSEMBLY NO. :-11306704

Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11201997	MOBILE POCKET	1	
2	11205126	INSTRUMENT PANEL	1	
3	11205127	SKIRT PANEL LONG	1	
4	11205445	DASHBOARD 263	1	
5	11205665	RUBBER COVER FUEL TANK	1	
6	11207055	BRACKET FRONT LIGHT	2	
7	11207056	COVER PARKING LIGHT	2	
8	11405027	DUMMY SWITCH PLUG	1	
9	11409278	MIRROR ASSEMBLY (LH)	1	
10	11409279	MIRROR ASSEMBLY (RH)	1	
11	11500052	SPRING WASHER - 8mm	2	
12	11500067	HEX. BOLT M8X20 (F.T)	2	
13	11500071	HEX. BOLT M6x15 (F.T.)8.8	6	
14	11500426	HEX. BOLT M6x20 (F.T)8.8	2	
15	11500485	PLAIN WASHER Ø6.5 X Ø23 X 1.5	2	
16	11500520	NYLOCK HEX NUT M8	2	
17	11500947	NYLOCK NUT M6	4	
18	11501015	PLAIN WASHER Ø6.5xØ15x1.5	8	
19	11501068	PLAIN WASHER Ø8.5XØ19X1.5	4	
20	11502174	M6 X 20 ROUND HEAD SCREW WITH COLLAR	5	
21	11505009	CARRIAGE BOLT M8X1.25	2	
22	11505389	PAN HEAD SCREW M6 x 20	10	

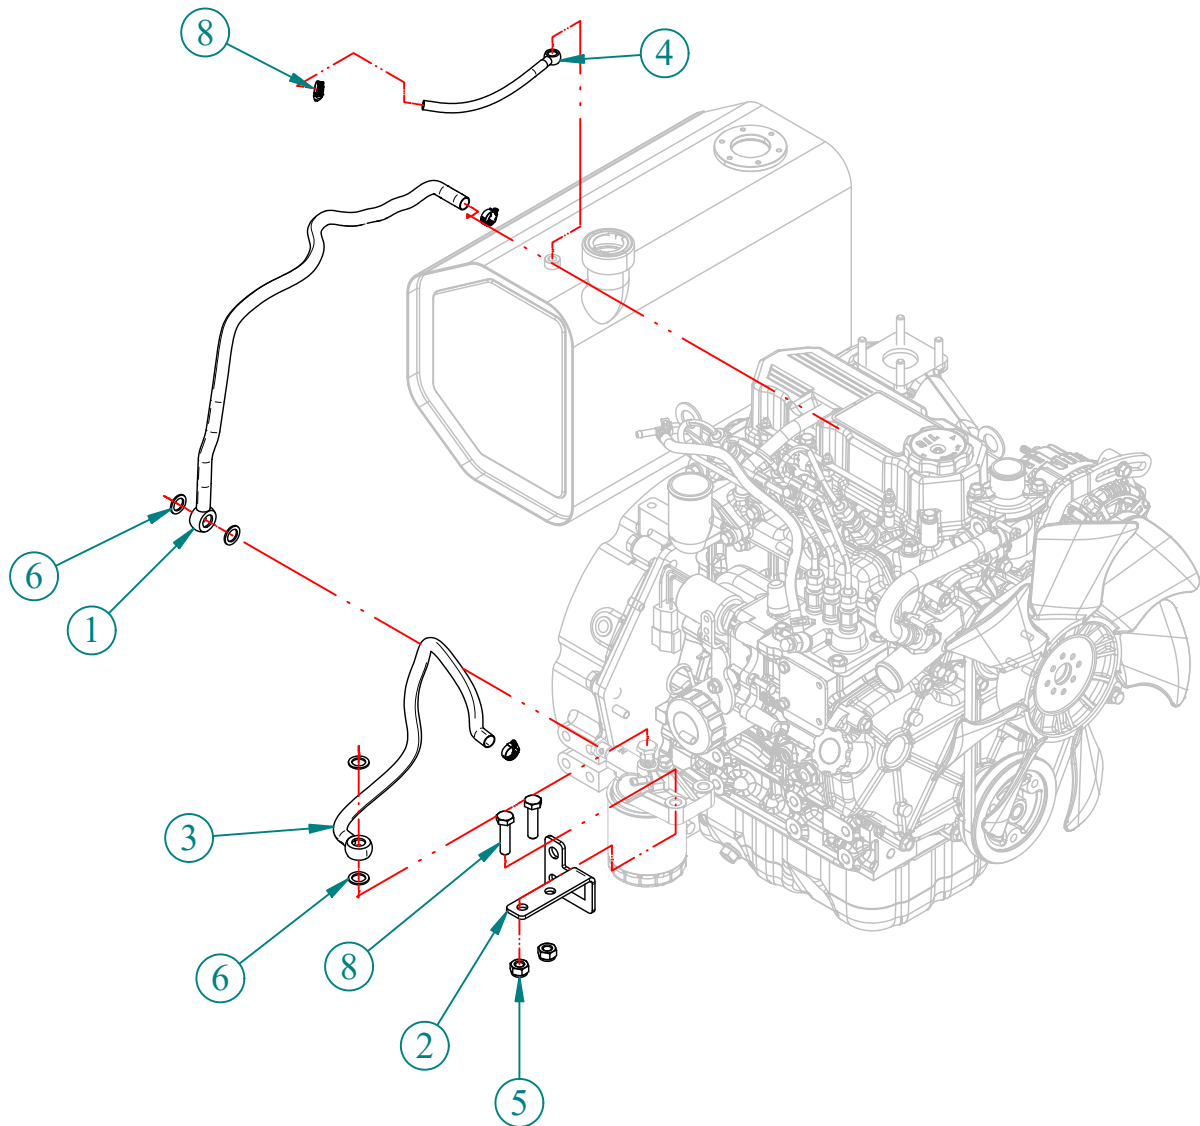 


FUEL PUMP PIPE 1

MODEL :- HST

ASSEMBLY NO. :-11305573

Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11202497	PIPE FUEL (725L)	1	
2	11202435	BRACKET, FUEL FILTER (273)	1	
3	11203021	PIPE FUEL FILTER TO FIP (273)	1	
4	11202764	OVERFLOW PIPE (410L)	1	
5	11500676	NYLOCK NUT M10	2	
6	11500462	COPPER WASHER Ø14xØ21x1.5	4	
7	11201848	CLAMP OVER FLOW PIPE	3	
8	11501863	HEX. BOLT M10X40 (F.T.)10.9	2	

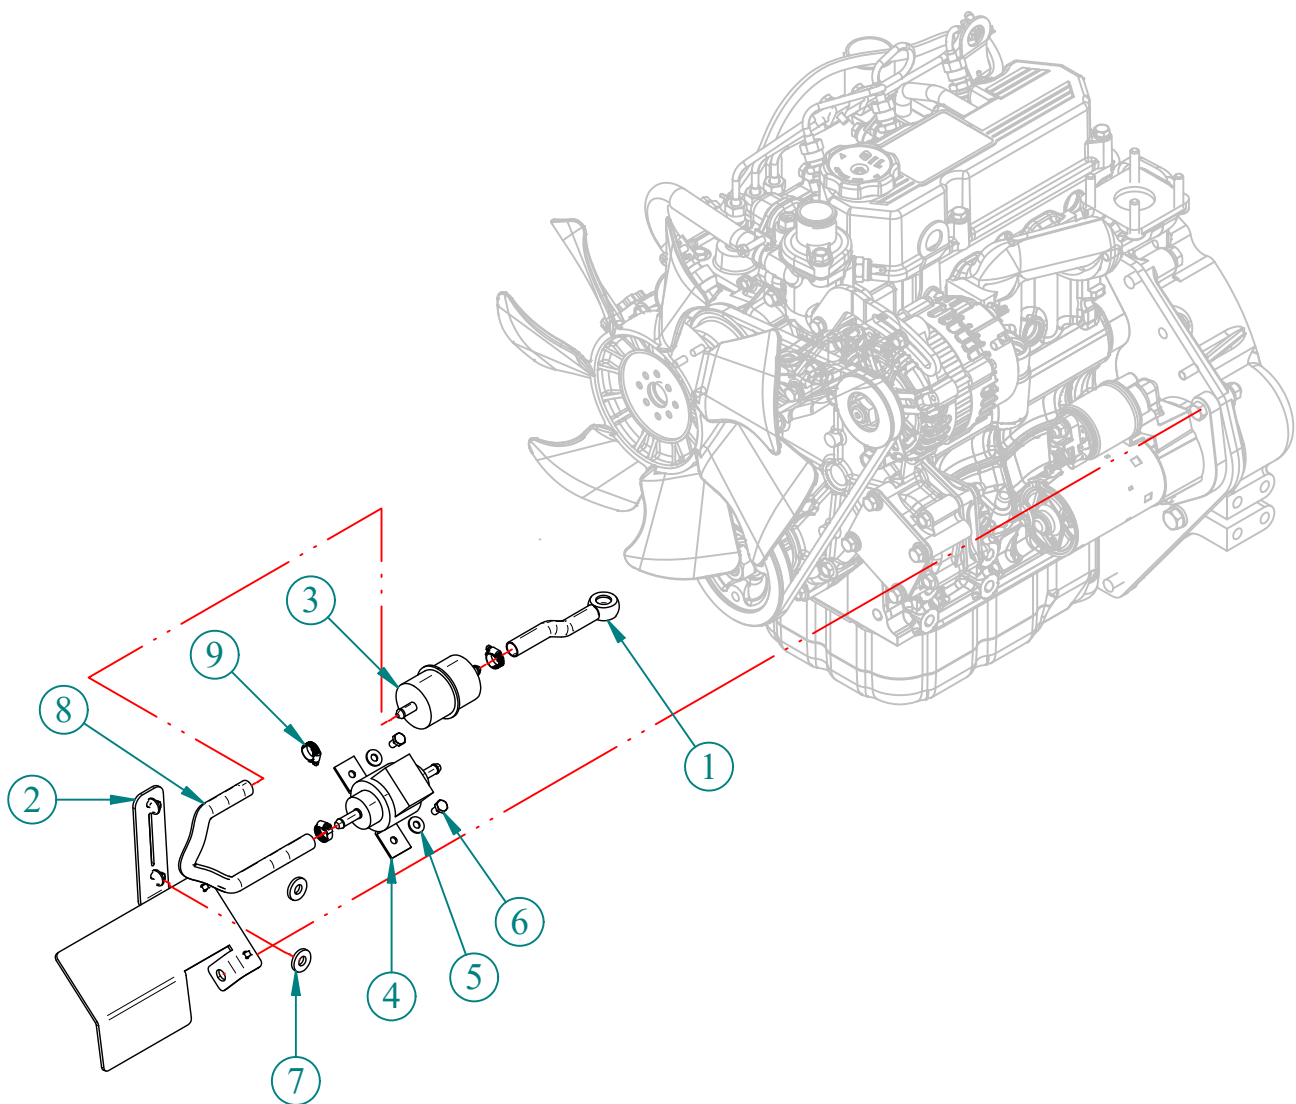 


FUAL PUMP PIPE - 2

MODEL :- HST


ASSEMBLY NO. :-11306709

Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11205163	PIPE, FUEL TANK TO PRE FILTER (115L)	1	
2	11202478	BRACKET, FUEL FEED PUMP (263)	1	
3	39204421	PRE FILTER	1	
4	39205109	FUEL PUMP ASSY	1	
5	11501015	PLAIN WASHER Ø6.5xØ15x1.5	2	
6	11500484	HEX. BOLT M6 X 12 (F.T.)	2	
7	11201535	RUBBER WAHSER Ø9xØ22x3.5	2	
8	11205162	PIPE,FUEL PRE FILTER TO FEED PUMP (200 L)	1	
9	11201848	CLAMP OVER FLOW PIPE	3	

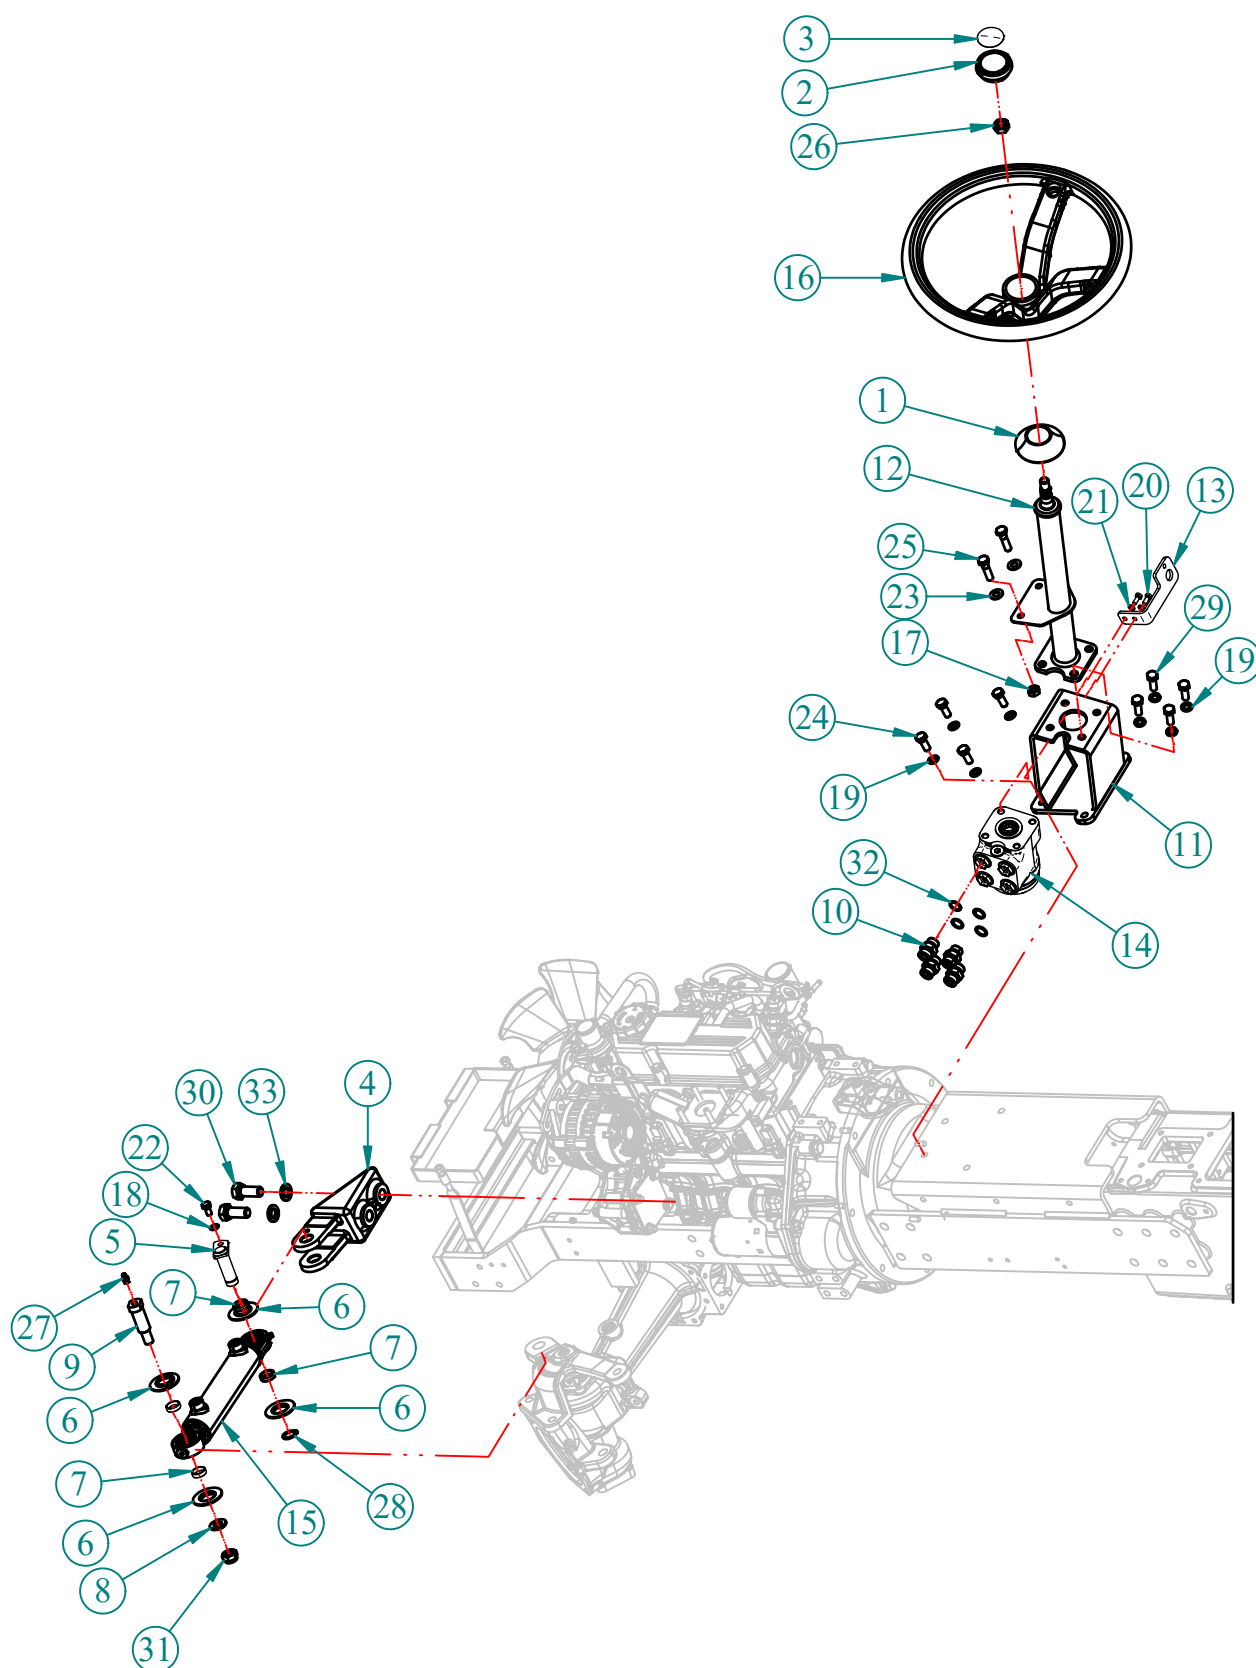 


POWER STEERING ASSEMBLY
MODEL :- HST
ASSEMBLY NO. :-11306677

Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11200610	RUBBER COVER, STEERING	1	
2	11201484	CAP STEERING CONTROL WHEEL	1	
3	11201737	STICKER CAP STEERING WHEEL	1	
4	11205086	CYLINDER MOUNTING BRACKET	1	
5	11205093	LOCKING PIN	1	
6	11205095	RUBBER PAD FOR SPACER	4	
7	11205096	SPACER CYLINDER	4	
8	11205097	SPACER (Ø14.5XØ28X3)	1	
9	11205098	PIN DIA-Ø20	1	
10	11205326	NIPPLE 3/4" UNF x 13/16" UN	4	
11	11206502	BRACKET HSU MTG.	1	
12	11207729	STEERING COLUMN ASSY	1	
13	11207751	BRACKET BATTERY CUT-OFF SWITCH (LF)	1	
14	11404900	HYDROSTATIC STEERING UNIT	1	
15	11404902	STEERING CYLINDER	1	
16	11407730	STEERING CONTROL WHEEL	1	
17	11500024	HEX NUT M10	2	
18	11500052	SPRING WASHER - 8mm	1	
19	11500062	SPRING WASHER - 10mm	8	
20	11500071	HEX. BOLT M6x15 (F.T.)8.8	2	
21	11500073	SPRING WASHER - 6 mm	2	
22	11500076	HEX BOLT M8 x 16	1	
23	11500078	PLAIN WASHER Ø10.5xØ22x1.5	2	
24	11500156	HEX. BOLT M10X25 (F.T.)	4	
25	11500814	HEX BOLT M10X40 (H.T.) [10.9]	2	
26	11501822	NUT M14 X 1.5 P	1	
27	11502088	GREASE NIPPLE M8x1	1	
28	11503297	CIRCLIP,EXTERNAL Ø20x1.75	1	
29	11504704	HEX BOLT M10x30 (F.T) [10.9]	4	
30	11505099	HEX BOLT M16X1.5X45_10.9	2	
31	11505318	NYLOCK HEX. NUT M14 X 1.5	1	
32	11505717	O-RING Ø16.36 X Ø2.21	4	
33	21504529	SPRING WASHER 16mm	2	

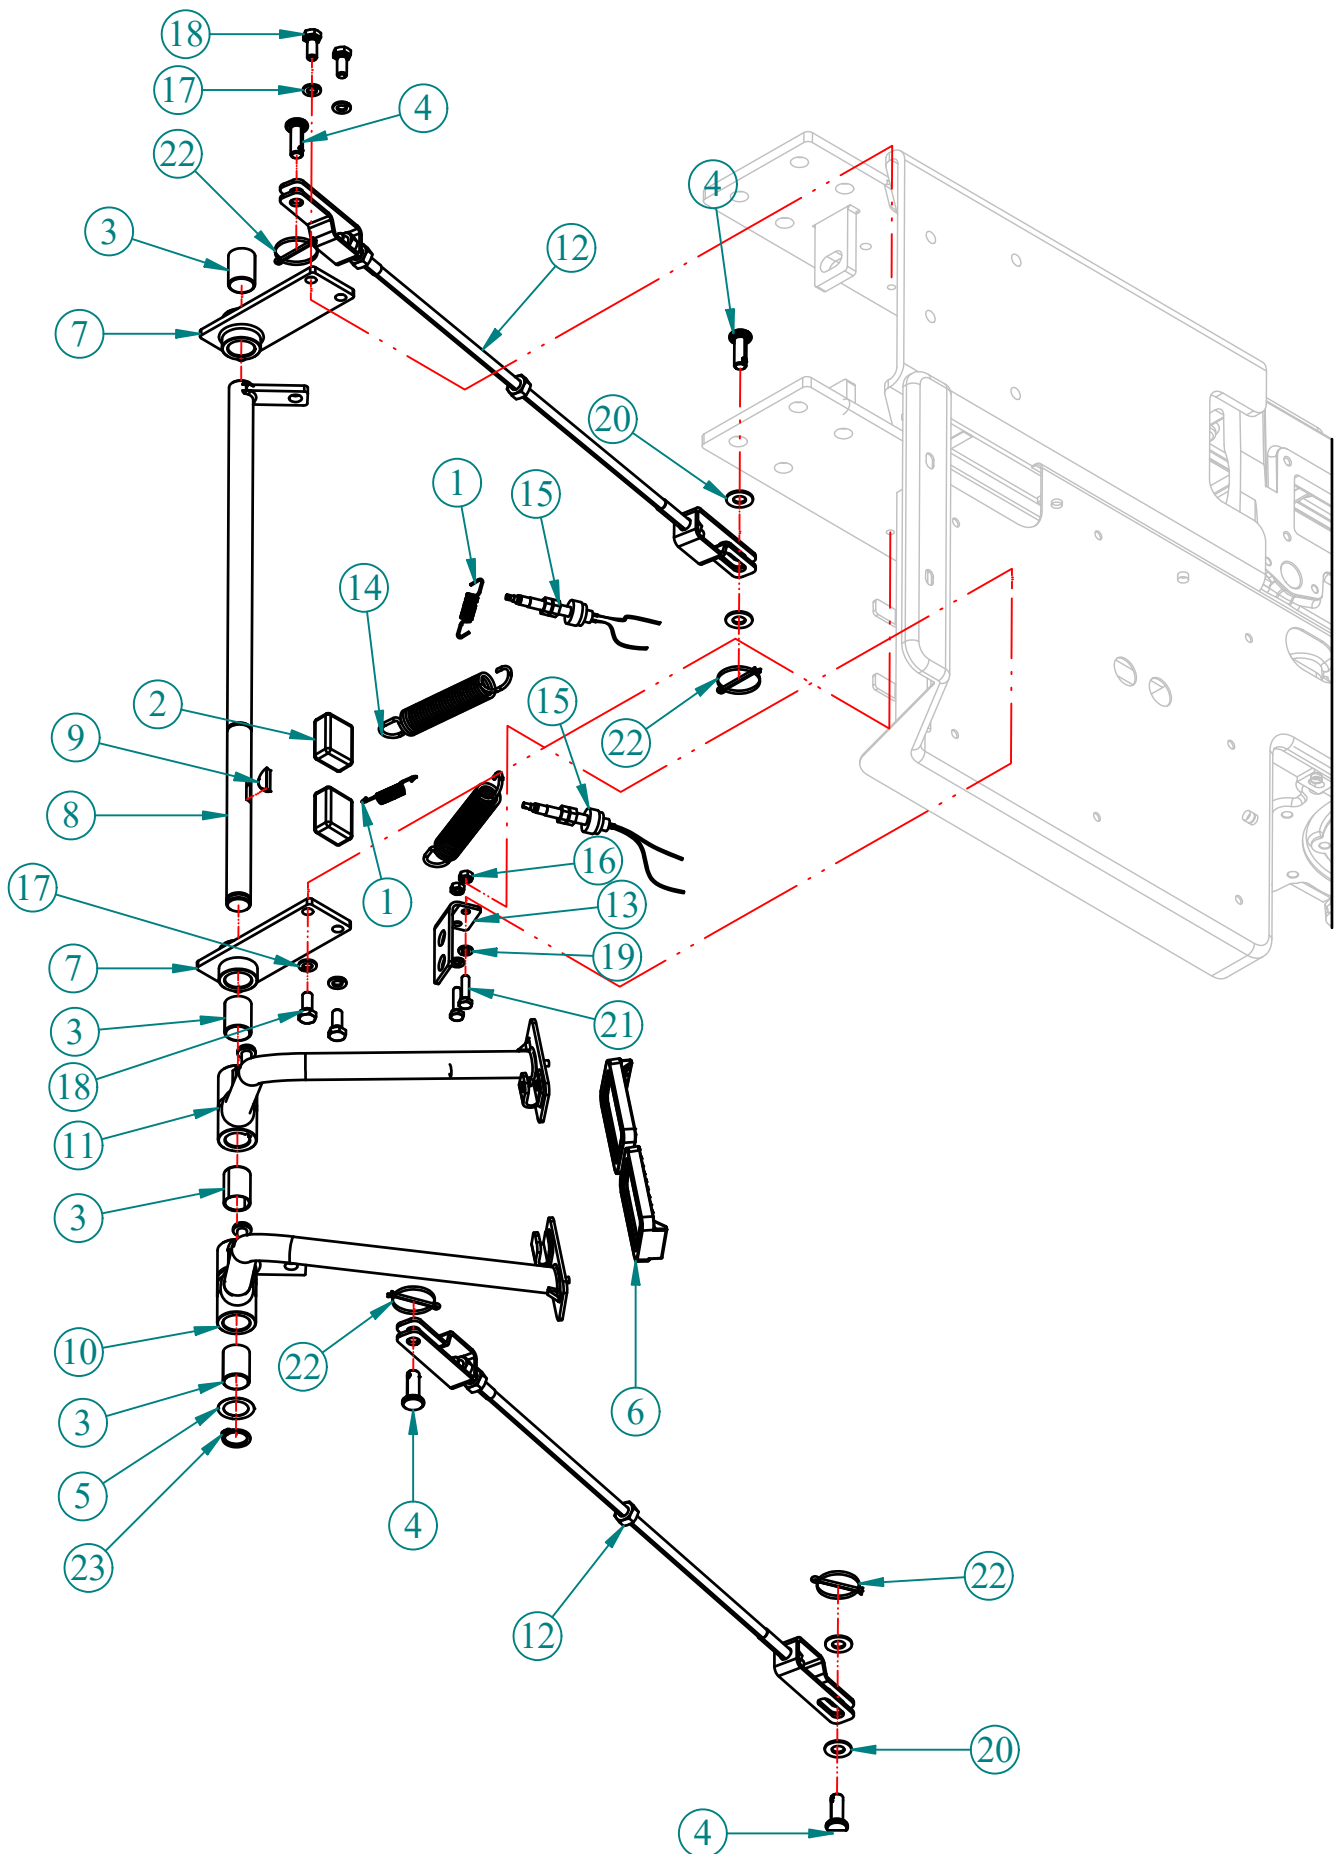 

BRAKE PEDAL & LINKAGE
MODEL :- HST
ASSEMBLY NO. :-11306676


Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11200547	SPRING FOR BRAKE LIGHT	2	
2	11202420	RUBBER DAMPER, PEDAL	2	
3	11203195	BUSH, LEVER IGUS (Ø20 x Ø22 x 30)	4	
4	11203251	PIN, BRAKE (OIB)	4	
5	11204854	SHIMS Ø20.5 X Ø30 X 0.2	1	AR
6	11205210	BRAKE PEDAL PAD	2	
7	11206494	HUB,BRAKE	2	
8	11206495	SHAFT, PEDAL	1	
9	11206496	WOODRUFF KEY 5 X 9	1	
10	11206497	PEDAL - BRAKE LH	1	
11	11206498	PEDAL - BRAKE RH	1	
12	11206499	LINK - BRAKE	2	
13	11206500	BRAKE SWITCH BRACKET	1	
14	11206501	SPRING BRAKE PADAL	2	
15	11402078	ASSEMBLY BRAKE SWITCH	2	
16	11500037	HEX. NUT M6	2	
17	11500052	SPRING WASHER - 8mm	4	
18	11500067	HEX. BOLT M8X20 (F.T)	4	
19	11500073	SPRING WASHER - 6 mm	2	
20	11500078	PLAIN WASHER Ø10.5xØ22x1.5	4	
21	11500195	HEX. BOLT M6x25 (F.T.)8.8	2	
22	11500357	SPLIT PIN 1/8" x 1.1/2"	4	
23	11503297	CIRCLIP,EXTERNAL Ø20x1.75	2	

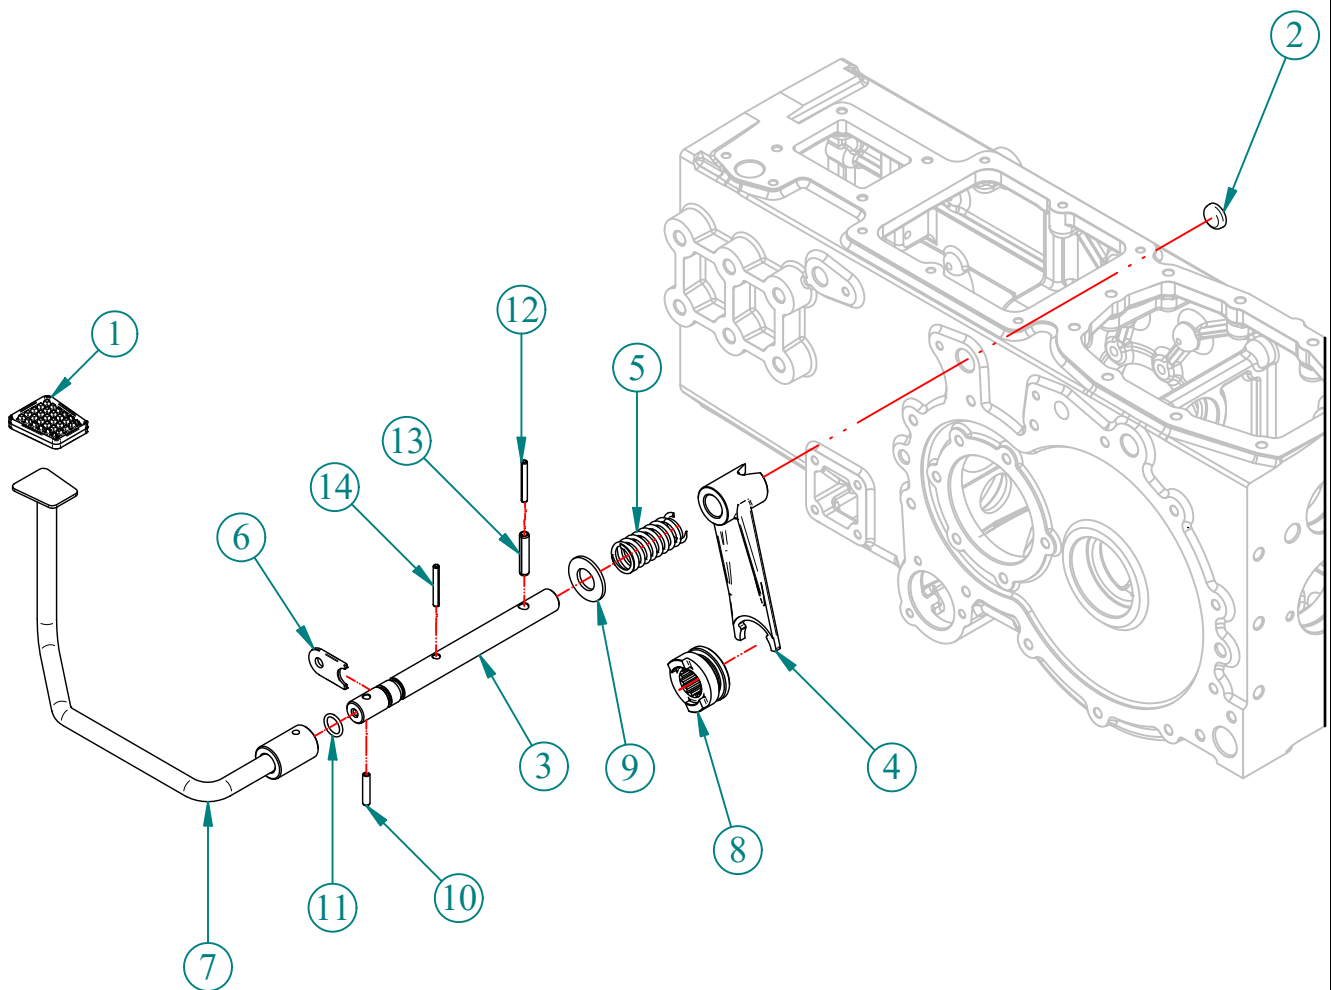 

DIFF LOCK

MODEL :- HST
ASSEMBLY NO. :-11306686


Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11203130	PEDAL PAD (FOOT THROTTLE)	1	
2	11205926	SEALING CAP	1	
3	11206547	SHAFT DIFF LOCK	1	
4	11206548	FORK DIFF LOCK	1	
5	11206550	SPRING DIFF. LOCK	1	
6	11206553	STOPER PLATE	1	
7	11206554	PEDAL DIFF LOCK	1	
8	11206555	DIFFERENTIAL LOCK	1	
9	11500159	PLAIN WASHER Ø20XØ40X3	1	
10	11502531	SLOTTED SPRING PIN Ø6X30	1	
11	11504882	O-RING Ø15.54 x 2.62	1	
12	11506545	SLOTED PIN Ø5X40	1	
13	11506546	SLOTED PIN Ø8X40	1	
14	11506549	SLOTED PIN Ø6x40	1	

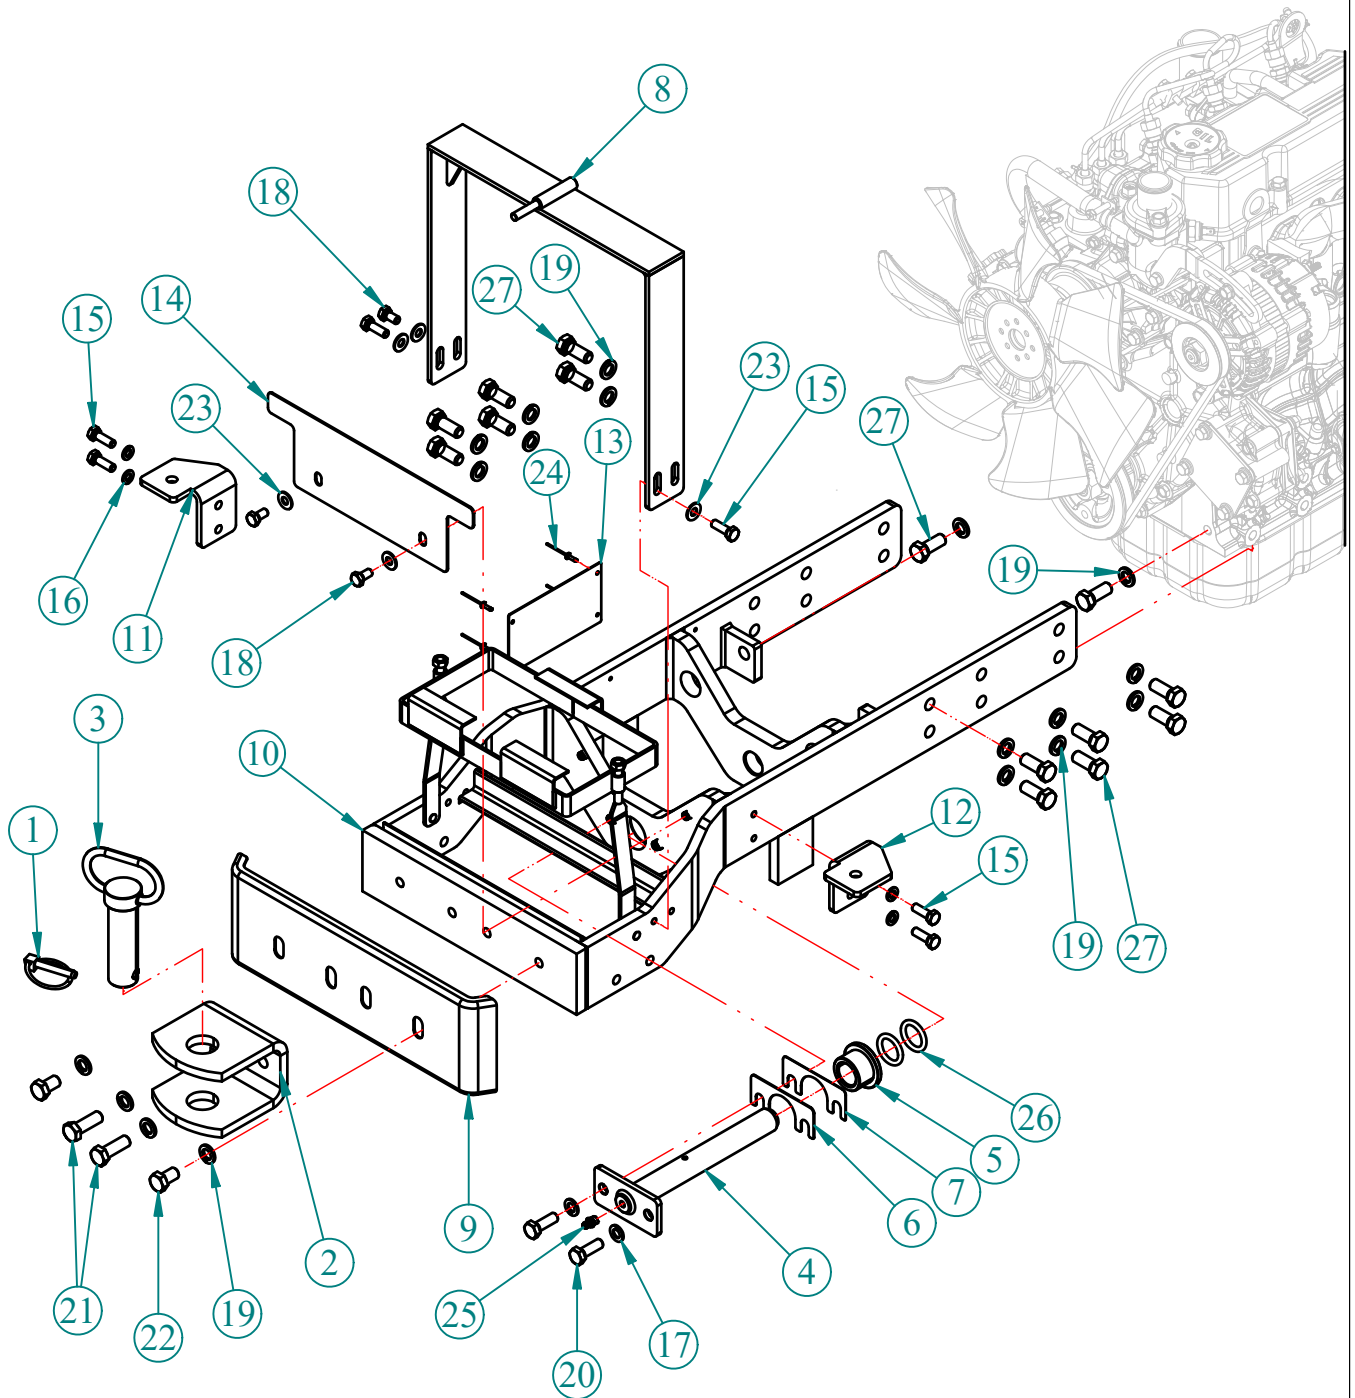 

CHASIS FRAME ASSEMBLY

MODEL :- HST
ASSEMBLY NO. :-11306693


Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11200590	LINCH PIN	1	
2	11202216	FRONT COUPLING	1	
3	11202217	HITCH PIN - FRONT COUPLING	1	
4	11202426	CENTER PIN (215 L)	1	
5	11202427	BUSH CENTER PIN	1	
6	11202428	SHIM CENTER PIN (1MM)	1	AR
7	11203020	SHIM CENTER PIN (0.5 MM)	1	AR
8	11205100	BRACKET,BONNET SUPPORT	1	
9	11205605	FRONT GUARD	1	
10	11206600	TRACTOR SUPPORT FRONT AXLE	1	
11	11206601	BRACKET FOR RADIATOR R.H.	1	
12	11206602	BRACKET FOR RADIATOR L.H.	1	
13	11206603	IDENTIFICATION PLATE	1	
14	11206806	RADIATOR PLATE SEALING BOTTOM	1	
15	11500051	HEX. BOLT M8 X 25 (F.T.)	6	
16	11500052	SPRING WASHER - 8mm	4	
17	11500062	SPRING WASHER - 10mm	2	
18	11500076	HEX BOLT M8 x 16	3	
19	11500118	SPRING WASHER 12 mm	18	
20	11500232	HEX. BOLT M10 X 30 (F.T.)	2	
21	11500768	HEX BOLT M12X35 (F.T.) [10.9]	2	
22	11500773	HEX BOLT M12x20 (F.T.) [8.8]	2	
23	11501068	PLAIN WASHER Ø8.5XØ19X1.5	5	
24	11501460	BLIND ALLUMINIUM RIVET Ø0.125"x0.422"	4	
25	11502088	GREASE NIPPLE M8x1	1	
26	11502272	O RING Ø25 X Ø5	2	
27	11505347	HEX. BOLT M12 x 30 (1.25P)	14	

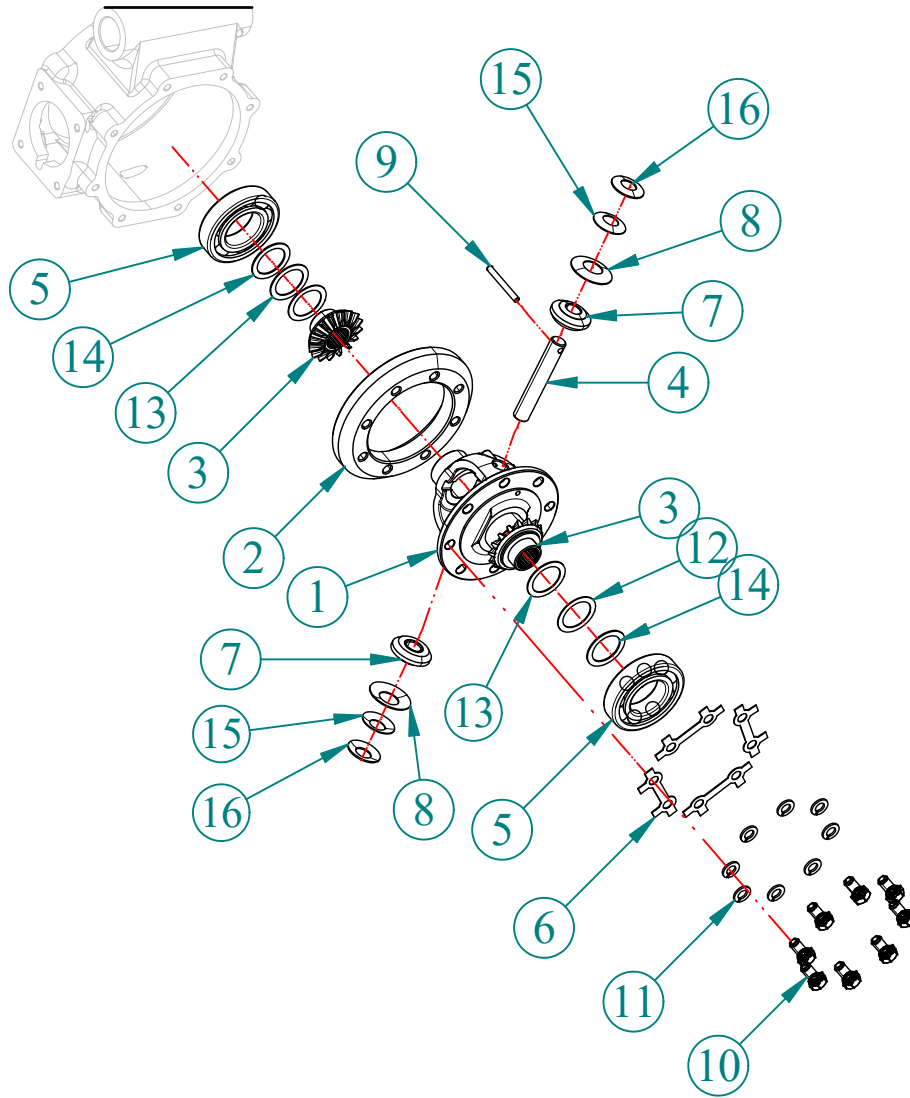 

FRONT DIFFERENTIAL CAGE ASSEMBLY


MODEL :- HST
ASSEMBLY NO. :-11305570

Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11201102	FRONT DIFFERENTIAL CAGE	1	
2	11201103	CROWN & PINION SET 43X9	1	
3	11201104	BEVEL GEAR 16 T	2	
4	11201108	PIN FOR STAR GEAR	1	
5	11501117	BALL BEARING 6208	2	
6	11200299	LOCK FLAP FOR AXLE	4	
7	11201106	STAR GEAR 10 T	2	
8	11201107	SHIM STAR GEAR 1.0MM	2	QTY:- AR
9	11201109	LOCK PIN HOLLOW Ø5.5X50	1	
10	11201143	CROWN BOLT M10X20 (1.25P)	8	
11	11500062	SPRING WASHER - 10mm	8	
12	11201105	SHIM Ø31XØ42X0.8	2	QTY:- AR
13	11200514	SHIM Ø31XØ42X1.0	2	QTY:- AR
14	11208492	SHIM Ø31XØ42X1.2	2	QTY:- AR
15	11204924	SHIM STAR GEAR 0.8MM	2	QTY:- AR
16	11204925	SHIM STAR GEAR 1.2MM	2	QTY:- AR

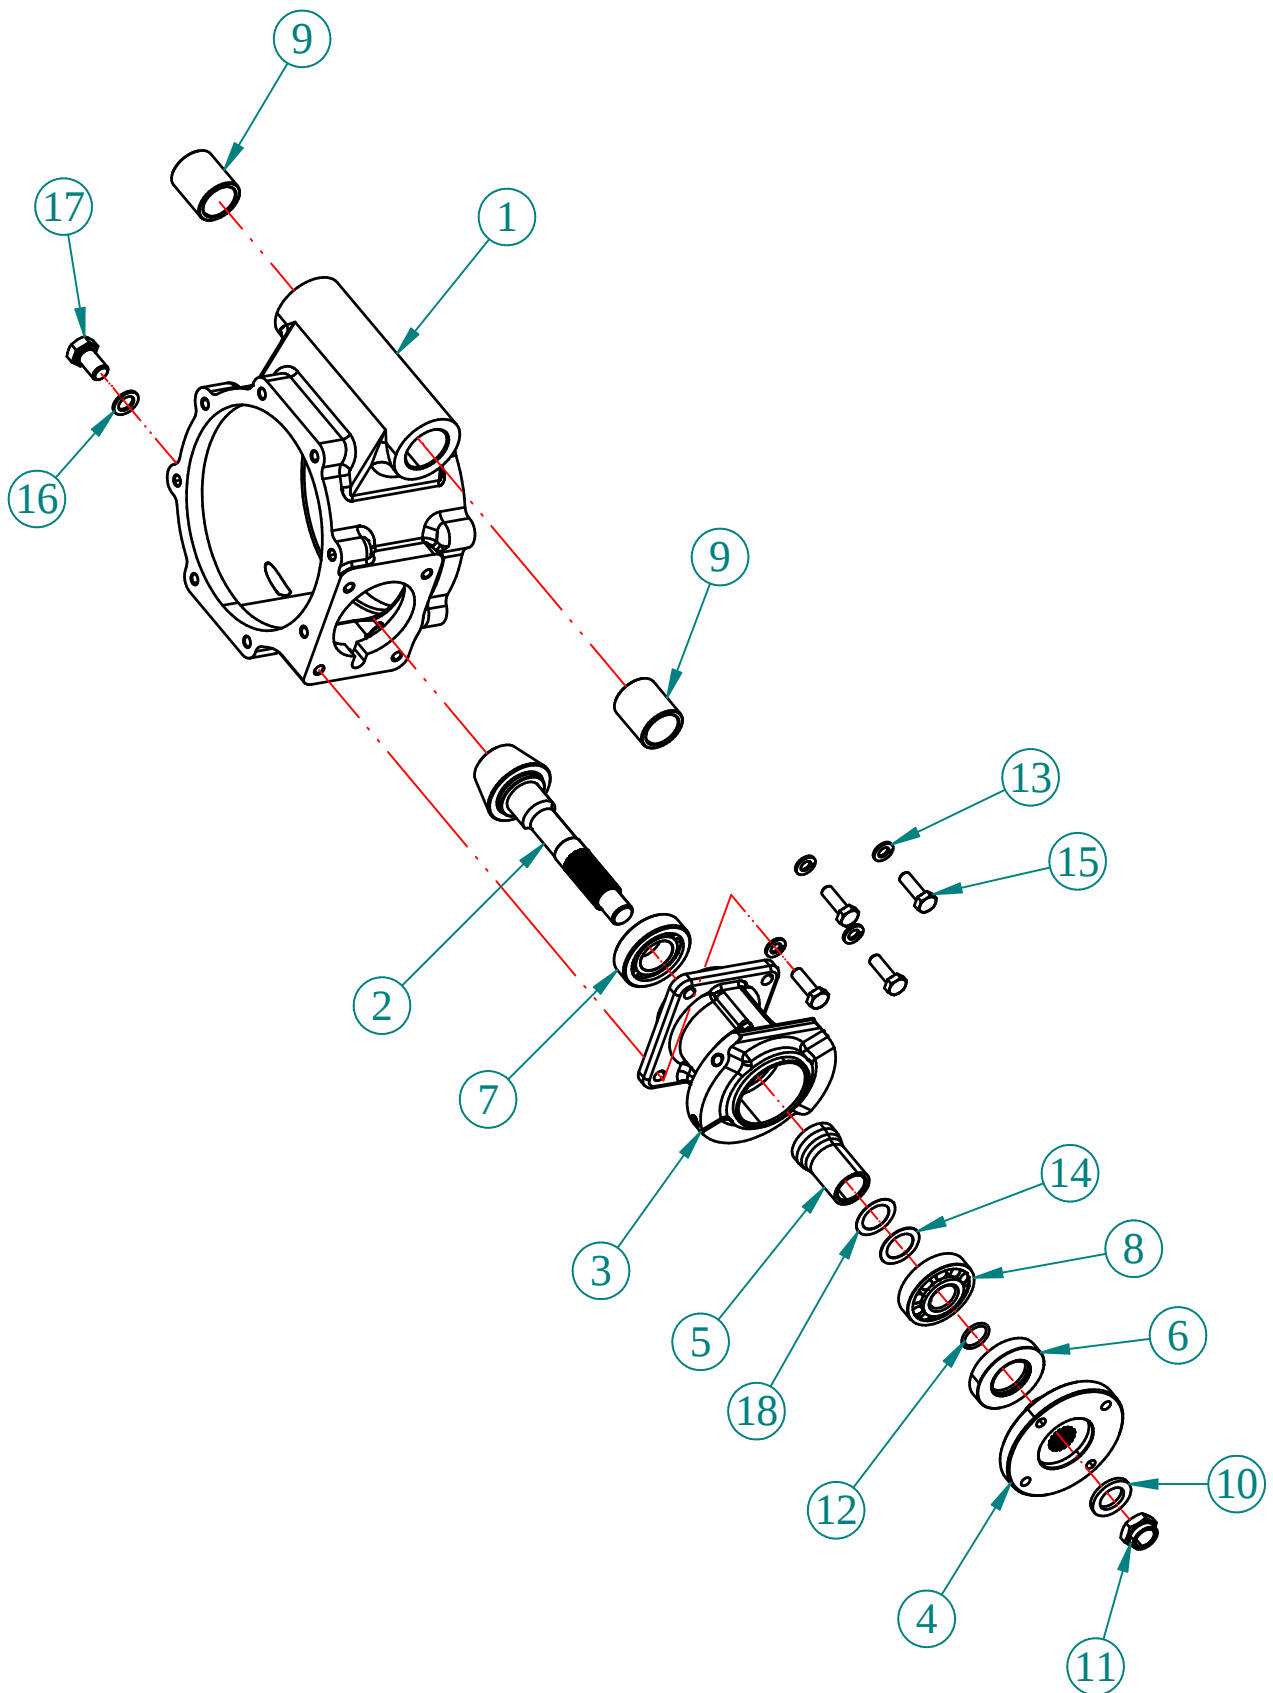 

FRONT DIFFERENTIAL PINION SHAFT ASSEMBLY
MODEL :- 223, 263, SIMBA 30, HST
ASSEMBLY NO. :-11305571

Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11208209	MAIN DIFFERENTIAL HOUSING	1	
2	11201103	CROWN & PINION SET 43X9	1	
3	11201094	PINION HOUSING	1	
4	11201145	PROPELLER FLANGE	1	
5	11201127	DISTANCE FOR PINION HOUSING	1	
6	11501124	OIL SEAL Ø52xØ28x10	1	
7	11500344	TAPPER ROLLER BEARING 30205	1	
8	11501121	TAPPER ROLLER BEARING 30304	1	
9	11205422	BUSH CENTER SLEEVE	2	
10	11501146	PLAIN WASHER Ø18XØ30X3	1	
11	11201147	PINION NUT M16X1.5	1	
12	11501470	O-RING Ø17xØ2	1	
13	11500052	SPRING WASHER - 8mm	4	
14	11201128	SHIM Ø20.5 X Ø30 X 0.5	1	
15	11504701	HEX BOLT M8x25 (F.T.) [10.9]	4	
16	11500007	COPPER WASHER Ø12xØ19x1.5	1	
17	11500773	HEX BOLT M12x20 (F.T.) [8.8]	1	
18	11204854	SHIMS Ø20.5 X Ø30 X 0.2	1	

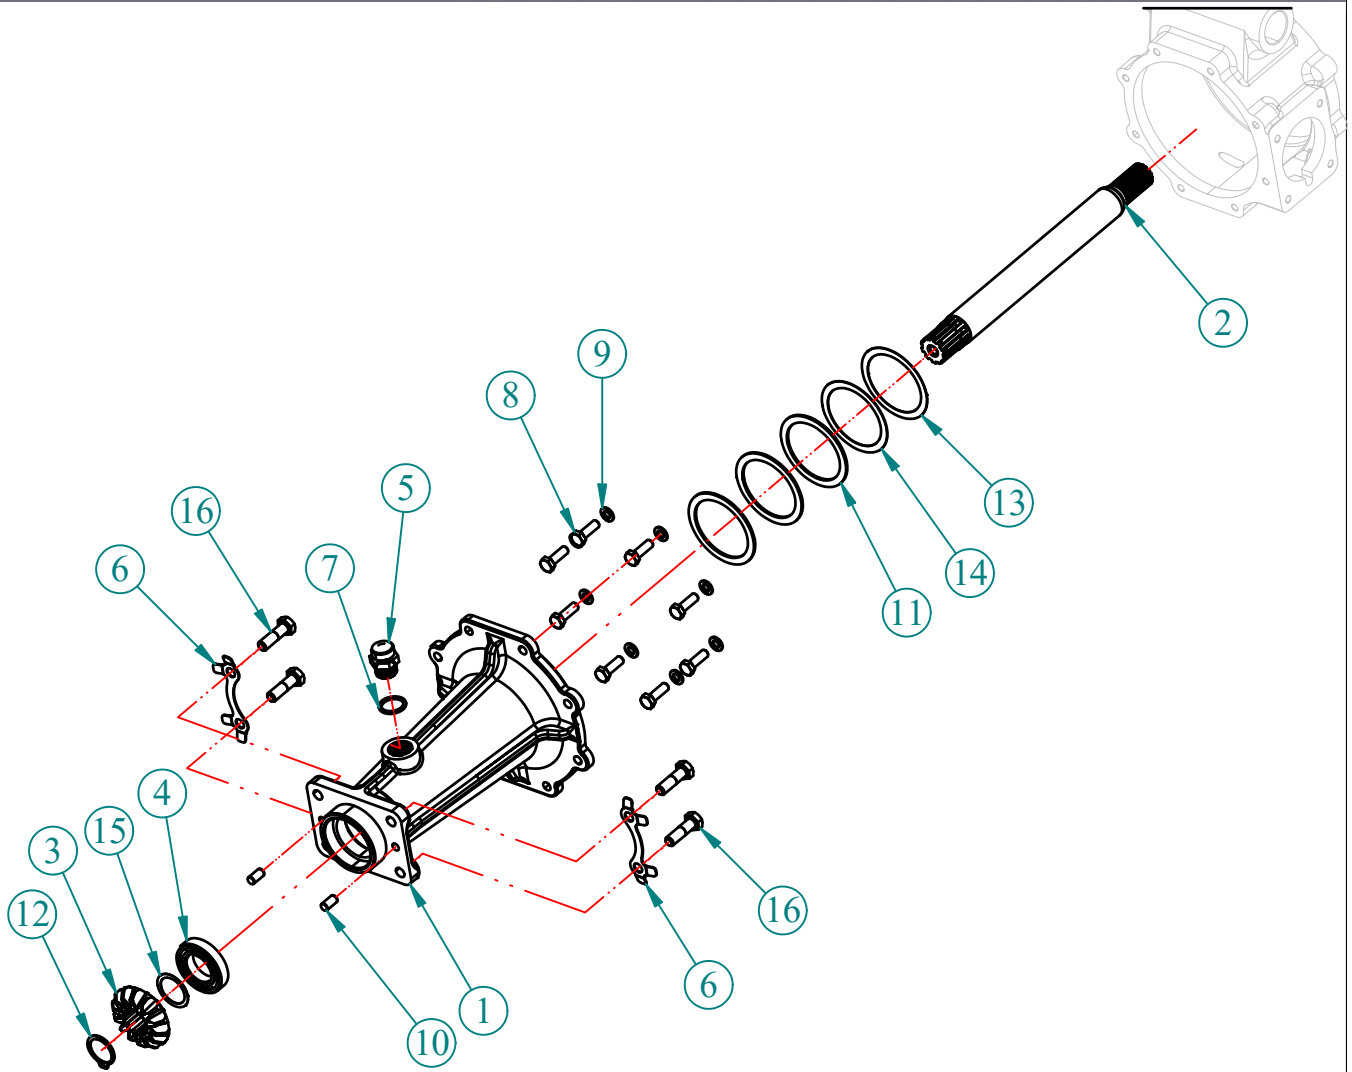 


FLANGE DIFFERENTIAL HOUSING ASSEMBLY LH

MODEL :- HST

ASSEMBLY NO. :-11305565

Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11201091	FLANGE DIFFERENTIAL HOUSING	1	
2	11201110	DIFFERENTIAL MAIN AXLE	1	
3	11205072	BEVEL GEAR 14 T	1	
4	11501120	BALL BEARING 6006	1	
5	11202915	AIR BREATHER 1/2" BSP	1	
6	11203256	LOCKING FLAP, FLANGE DIFFERENTIAL HOUSING	2	
7	11500430	COPPER WASHER Ø21XØ26X1.5	1	
8	11504701	HEX BOLT M8x25 (F.T.) [10.9]	8	
9	11500052	SPRING WASHER - 8mm	8	
10	11200119	PIN, DOWEL Ø8 X 16	2	
11	11201221	SPACER FOR FLANGE DIFF. HOUSING	3	
12	11501125	CIRCLIP EXTERNAL Ø28X1.5	1	
13	11200441	SHIMS Ø79XØ64.5X0.2	1	QTY:- AR
14	11201130	SHIMS Ø79xØ64.5x0.5	1	QTY:- AR
15	11201132	SHIMS Ø29xØ37x0.3	1	QTY:- AR
16	11503270	HEX BOLT M10x35x1.25P [10.9]	4	

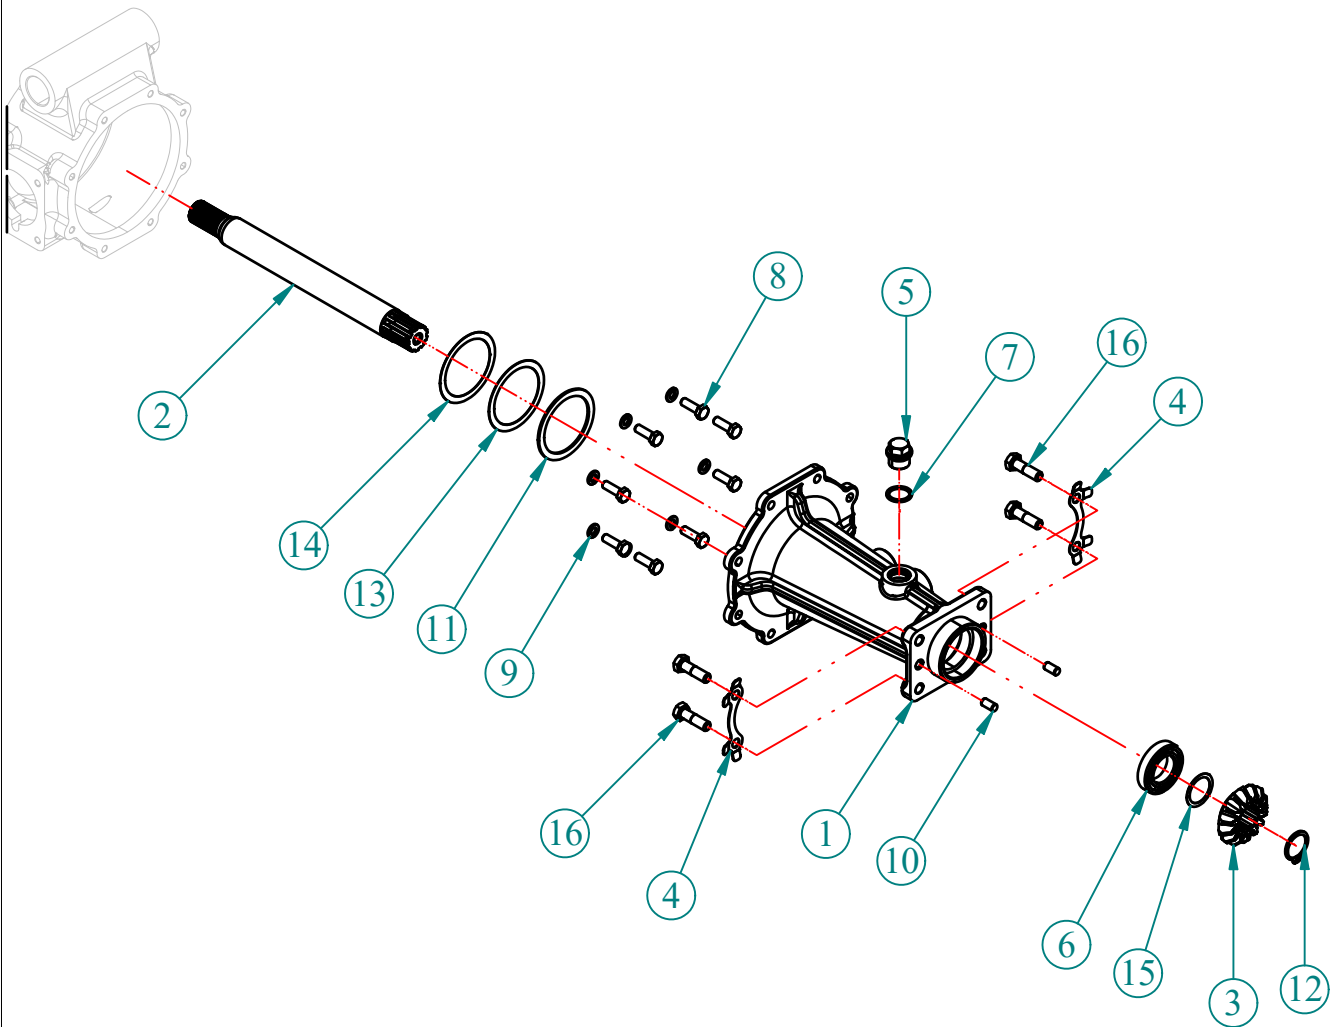 


FLANGE DIFFERENTIAL HOUSING ASSEMBLY RH

MODEL :- HST


ASSEMBLY NO. :-11305566

Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11208423	FLANGE DIFFERENTIAL HOUSING (R.H.)	1	
2	11201110	DIFFERENTIAL MAIN AXLE	1	
3	11205072	BEVEL GEAR 14 T	1	
4	11203256	LOCKING FLAP, FLANGE DIFFERENTIAL HOUSING	2	
5	11200120	DRAIN PLUG	1	
6	11501120	BALL BEARING 6006	1	
7	11500430	COPPER WASHER Ø21XØ26X1.5	1	
8	11504701	HEX BOLT M8x25 (F.T.) [10.9]	8	
9	11500052	SPRING WASHER - 8mm	8	
10	11200119	PIN, DOWEL Ø8 X 16	2	
11	11201221	SPACER FOR FLANGE DIFF. HOUSING	1	
12	11501125	CIRCLIP EXTERNAL Ø28X1.5	1	
13	11201130	SHIMS Ø79xØ64.5x0.5	1	QTY:- AR
14	11200441	SHIMS Ø79XØ64.5X0.2	1	QTY:- AR
15	11201132	SHIMS Ø29xØ37x0.3	1	QTY:- AR
16	11503270	HEX BOLT M10x35x1.25P [10.9]	4	

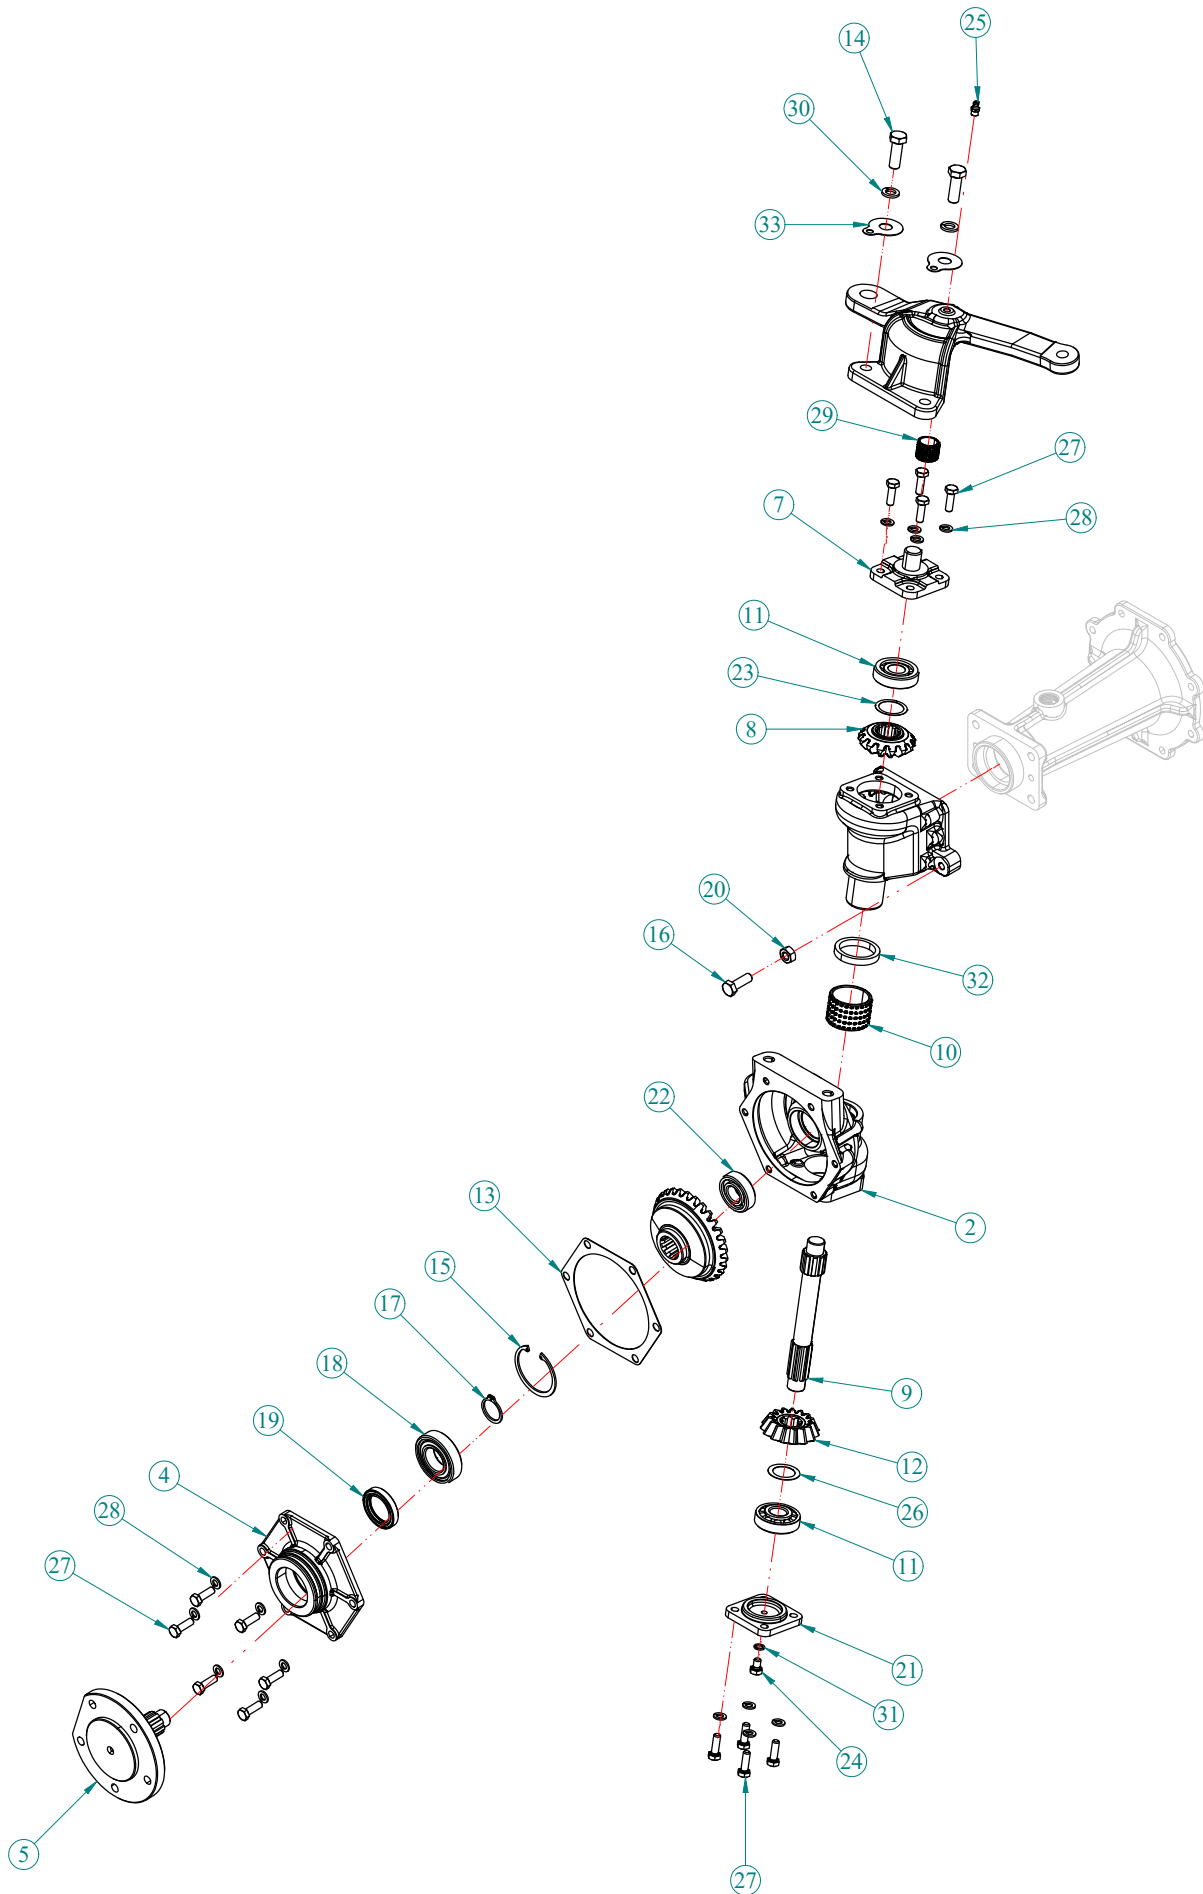 


VERTICAL SHAFT HOUSING ASSEMBLY LH
MODEL :- 223, 223 NT, 223 EU
ASSEMBLY NO. :- 11305596

SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11208207	HOUSING FOR VERTICAL SHAFT LH	1	
2	11208205	HOUSING FOR AXLE FLANGE LH	1	
3	11204549	BEVEL GEAR 29 T -78°	1	
4	11208257	FLANGE FOR AXLE FLANGE HOUSING	1	
5	11208258	AXLE FLANGE (5 Hole)	1	
6	11208424	STEERING ARM DOUBLE	1	
7	11201096	TOP COVER FOR VERTICAL SHAFT	1	
8	11205072	BEVEL GEAR 14 T	1	
9	11201111	VERTICAL SHAFT	1	
10	11205030	BUSH FOR VERTICAL HOUSING	1	
11	11501121	TAPPER ROLLER BEARING 30304	2	
12	11204550	BEVEL PINION GEAR 15 T -78°	1	
13	11201136	GASKET FOR AXLE FLANGE HOUSING	1	
14	11500768	HEX BOLT M12X35 (F.T.) [10.9]	2	
15	11501126	CIRCLIP, INTERNAL Ø62X2	1	
16	11504704	HEX BOLT M10x30 (F.T.) [10.9]	1	
17	11501255	CIRCLIP EXTERNAL Ø28 X 2	1	
18	21503363	BALL BEARING 6206ZZ	1	
19	11505362	OIL SEAL Ø35x Ø50x8 (NBR)	1	
20	11500024	HEX NUT M10	1	
21	11204551	BOTTOM COVER FOR VERTICAL SHAFT -78°	1	
22	11501119	BALL BEARING 6204	1	
23	11201132	SHIMS Ø29xØ37x0.3	1	QTY:- AR
24	11500489	HEX BOLT M8 X 12 (F.T.)	2	
25	11502088	GREASE NIPPLE M8x1	1	
26	11201133	SHIM Ø26 X Ø37 X 0.5	1	QTY:- AR
27	11504701	HEX BOLT M8x25 (F.T.) [10.9]	14	
28	11500052	SPRING WASHER - 8mm	14	
29	11205123	STEERING ARM BUSH	1	
30	11500118	SPRING WASHER 12 mm	2	
31	11500112	COPPER WASHER Ø8XØ12X1	2	
32	11501122	OIL SEAL Ø52xØ42x8	1	
33	11200880	LOCK FLAP FOR M12 BOLT	2	
34	11607766	LOXEAL 59-20--RTV SEALANT-310ML	AR	

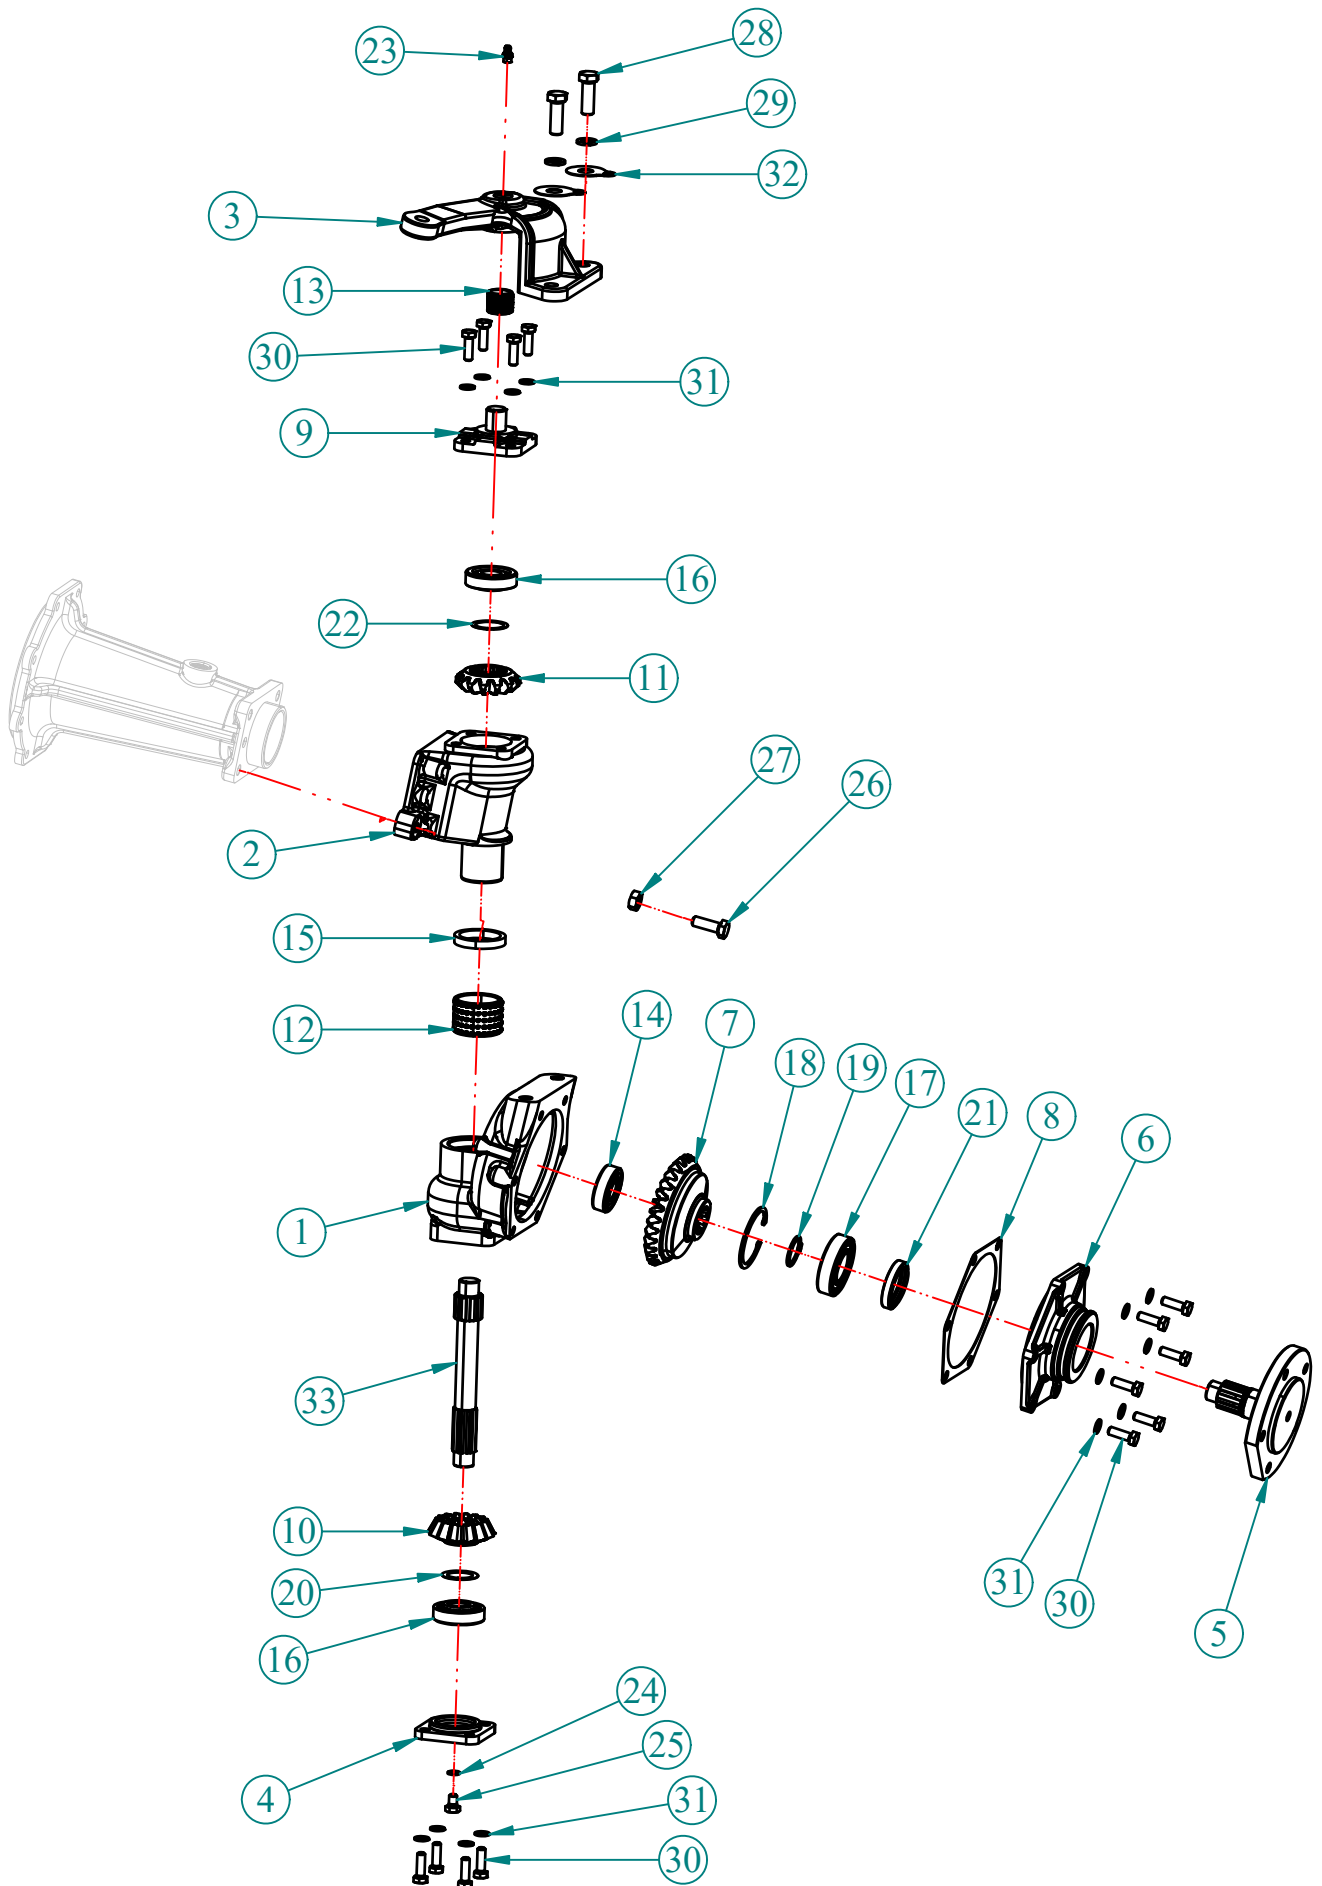 

VERTICAL SHAFT HOUSING ASSEMBLY RH
MODEL :- HST
ASSEMBLY NO. :-11305597

Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11208206	HOUSING FOR AXLE FLANGE RH	1	
2	11208208	HOUSING FOR VERTICAL SHAFT RH	1	
3	11205084	STEERING ARM (SINGLE)	1	
4	11204551	BOTTOM COVER FOR VERTICAL SHAFT -78°	1	
5	11208258	AXLE FLANGE (5 Hole)	1	
6	11208257	FLANGE FOR AXLE FLANGE HOUSING	1	
7	11204549	BEVEL GEAR 29 T -78°	1	
8	11201136	GASKET FOR AXLE FLANGE HOUSING	1	
9	11201096	TOP COVER FOR VERTICAL SHAFT	1	
10	11204550	BEVEL PINION GEAR 15 T -78°	1	
11	11205072	BEVEL GEAR 14 T	1	
12	11205030	BUSH FOR VERTICAL HOUSING	1	
13	11205123	STEERING ARM BUSH	1	
14	11501119	BALL BEARING 6204	1	
15	11501122	OIL SEAL Ø52xØ42x8	1	
16	11501121	TAPPER ROLLER BEARING 30304	2	
17	21503363	BALL BEARING 6206ZZ	1	
18	11501126	CIRCLIP, INTERNAL Ø62X2	1	
19	11501255	CIRCLIP EXTERNAL Ø28 X 2	1	
20	11201133	SHIM Ø26 X Ø37 X 0.5	1	QTY : AR
21	11505362	OIL SEAL Ø35x Ø50x8 (NBR)	1	
22	11201132	SHIMS Ø29xØ37x0.3	1	QTY : AR
23	11502088	GREASE NIPPLE M8x1	1	
24	11500112	COPPER WASHER Ø8XØ12X1	2	
25	11500489	HEX BOLT M8 X 12 (F.T.)	2	
26	11504704	HEX BOLT M10x30 (F.T) [10.9]	1	
27	11500024	HEX NUT M10	1	
28	11500768	HEX BOLT M12X35 (F.T.) [10.9]	2	
29	11500118	SPRING WASHER 12 mm	2	
30	11504701	HEX BOLT M8x25 (F.T.) [10.9]	14	
31	11500052	SPRING WASHER - 8mm	14	
32	11200880	LOCK FLAP FOR M12 BOLT	2	
33	11201111	VERTICAL SHAFT	1	
34	11607766	LOXEAL 59-20--RTV SEALANT-310ML	AR	

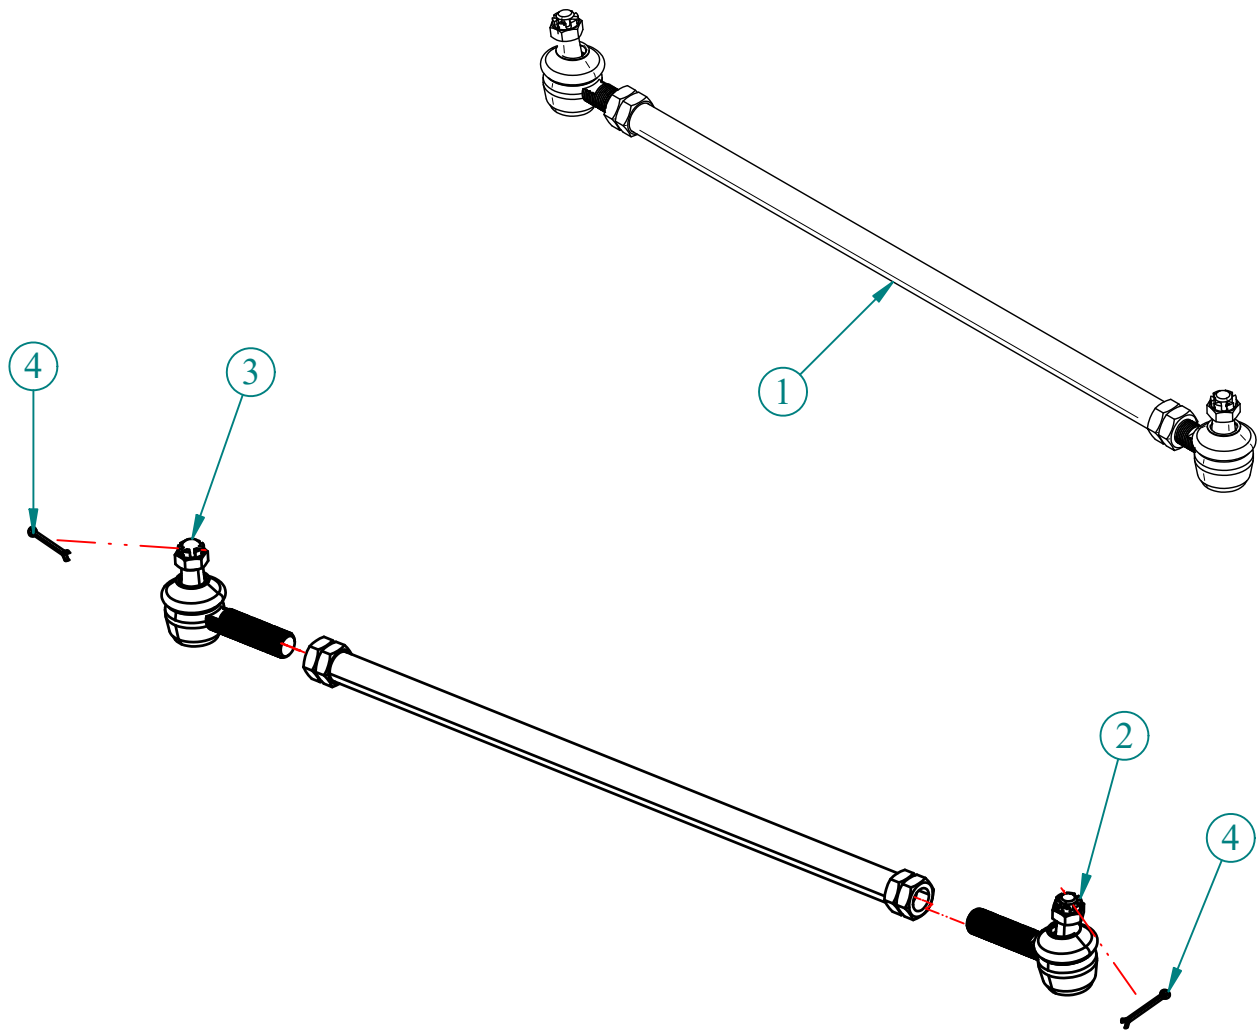 


TIE ROD ASSEMBLY 508

MODEL :- HST

ASSEMBLY NO. :-11305629


Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11305108	TIE ROD ASSEMBLY 508	1	
2	11200790	TIE ROD END R.H. SIDE	1	
3	11200789	TIE ROD END L.H. SIDE	1	
4	11500357	SPLIT PIN 1/8" x 1.1/2"	2	

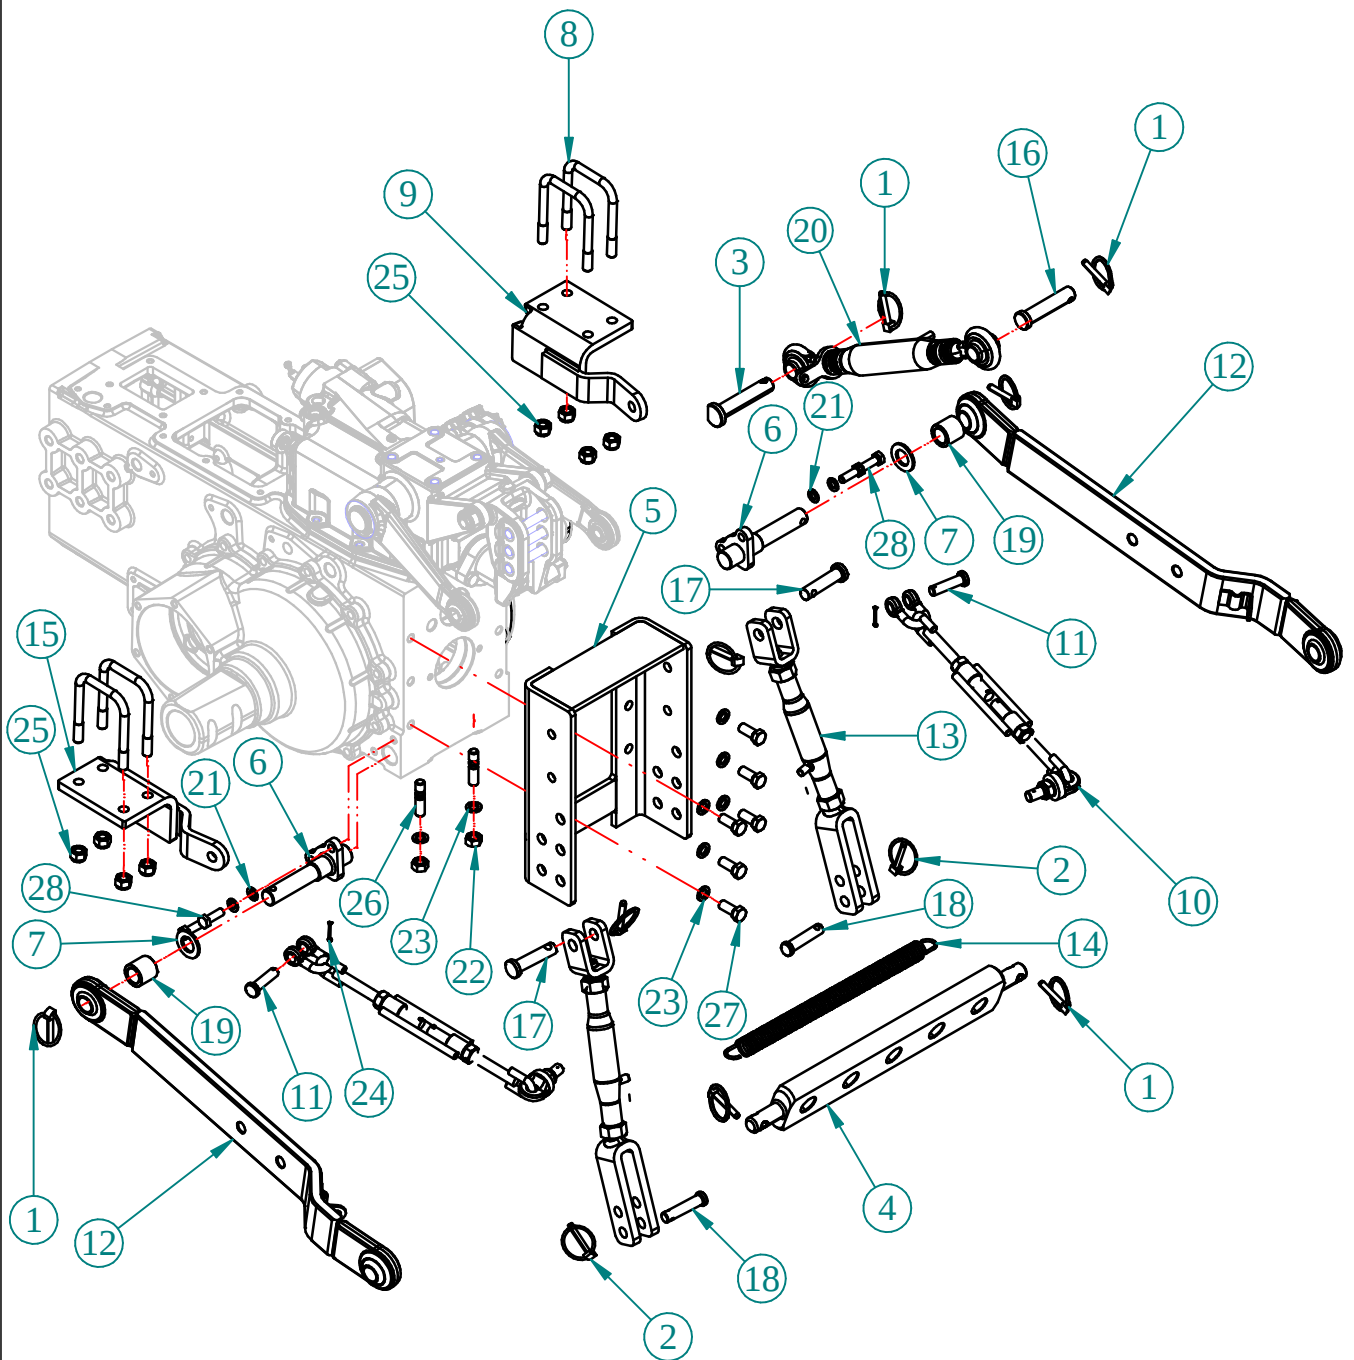 

THREE POINT LINKAGE


MODEL :- HST
ASSEMBLY NO. :-11306698

Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11200590	LINCH PIN	8	
2	11201300	LINCH PIN (SMALL)	2	
3	11203271	HITCH PIN BIG	1	
4	11205482	DRAWBAR	1	
5	11206629	BRACKET, LOWER LINK	1	
6	11206630	PIN BRACKET	2	
7	11206631	WASHER_Ø23XØ40X3	2	
8	11206632	U-BOLT	4	
9	11206633	BRACKET STABILIZER CHAIN -RH	1	
10	11206634	STABILZER CHAIN LOWER LINK	2	
11	11206635	PIN Ø12.7	2	
12	11206636	LOWER LINK	2	
13	11206637	SIDE LINK ADJUSTABLE	2	
14	11206638	SPRING	1	
15	11206713	BRACKET STABILIZER CHAIN -LH	1	
16	11207282	HITCH PIN BIG-IMPLEMENT	1	
17	11207705	HITCH PIN BIG (Ø 16MM)	2	
18	11207706	HITCH PIN (Ø 14MM)	2	
19	11207720	SPACER LOWER LINK	2	
20	11300584	TOP LINK	1	
21	11500062	SPRING WASHER - 10mm	4	
22	11500117	HEX NUT M12	2	
23	11500118	SPRING WASHER 12 mm	8	
24	11500619	SPLIT PIN 3/32" x 1"	2	
25	11501024	NYLOCK HEX. NUT M12	8	
26	11501052	STUD M12 X 35	2	
27	11502079	HEX. BOLT M12 X 30 (F.T.) 8.8	6	
28	11504704	HEX BOLT M10x30 (F.T) [10.9]	4	

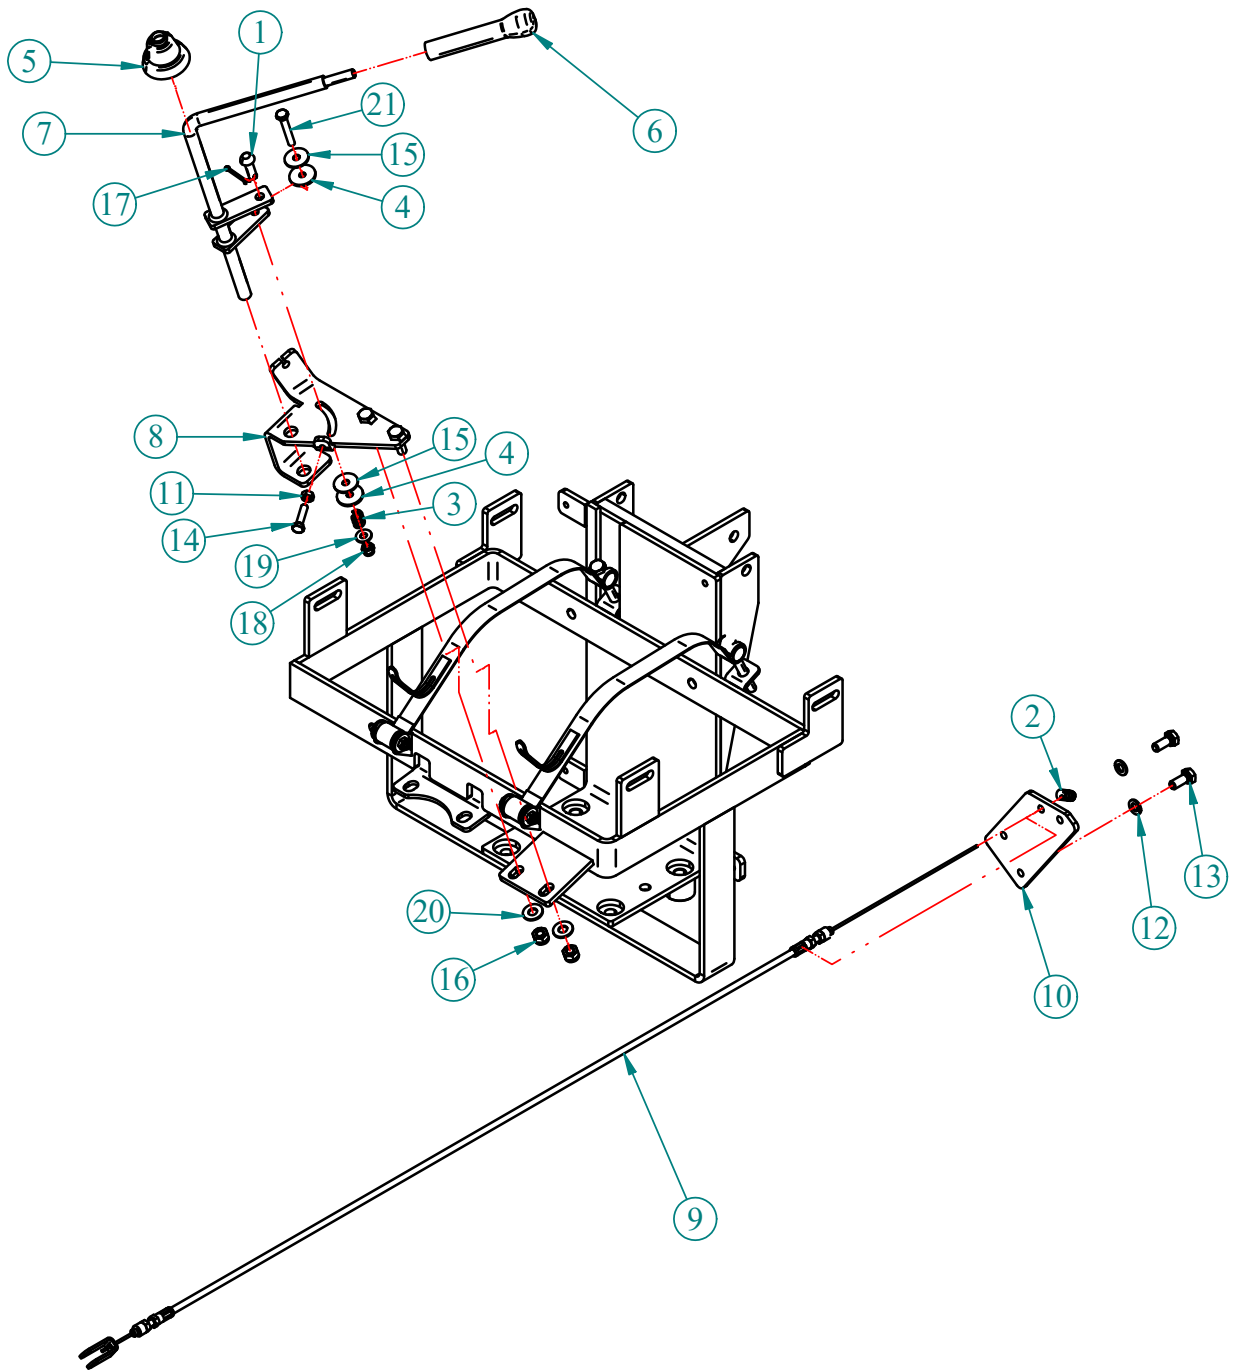 

**HAND ACCELERATOR****MODEL :- HST****ASSEMBLY NO. :-11306673**

 Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11200066	PIN CLUTCH	1	
2	11200337	ACCELERATOR CABLE END SCREW (MINDIL)	1	
3	11201004	SPRING DRAFT & POSITION LEVER	1	
4	11201531	WASHER FRICTION	2	
5	11202124	RUBBER COVER HAND THROTTLE LEVER	1	
6	11202125	GRIP HAND THROTTLE LEVER	1	
7	11202451	HAND ACCELERATOR ASSY	1	
8	11206083	HAND LEVER SUPPORT	1	
9	11206464	CABLE HAND ACCELERATOR	1	
10	11206465	ACCELERATOR CABLE MOUNTING	1	
11	11500037	HEX. NUT M6	1	
12	11500052	SPRING WASHER - 8mm	2	
13	11500067	HEX. BOLT M8X20 (F.T)	2	
14	11500195	HEX. BOLT M6x25 (F.T.)8.8	1	
15	11500485	PLAIN WASHER Ø6.5 X Ø23 X 1.5	2	
16	11500520	NYLOCK HEX NUT M8	2	
17	11500619	SPLIT PIN 3/32" x 1"	1	
18	11500947	NYLOCK NUT M6	1	
19	11501015	PLAIN WASHER Ø6.5xØ15x1.5	1	
20	11501068	PLAIN WASHER Ø8.5XØ19X1.5	2	
21	11501077	HEX. BOLT M6x40 (F.T.) 8.8	1	

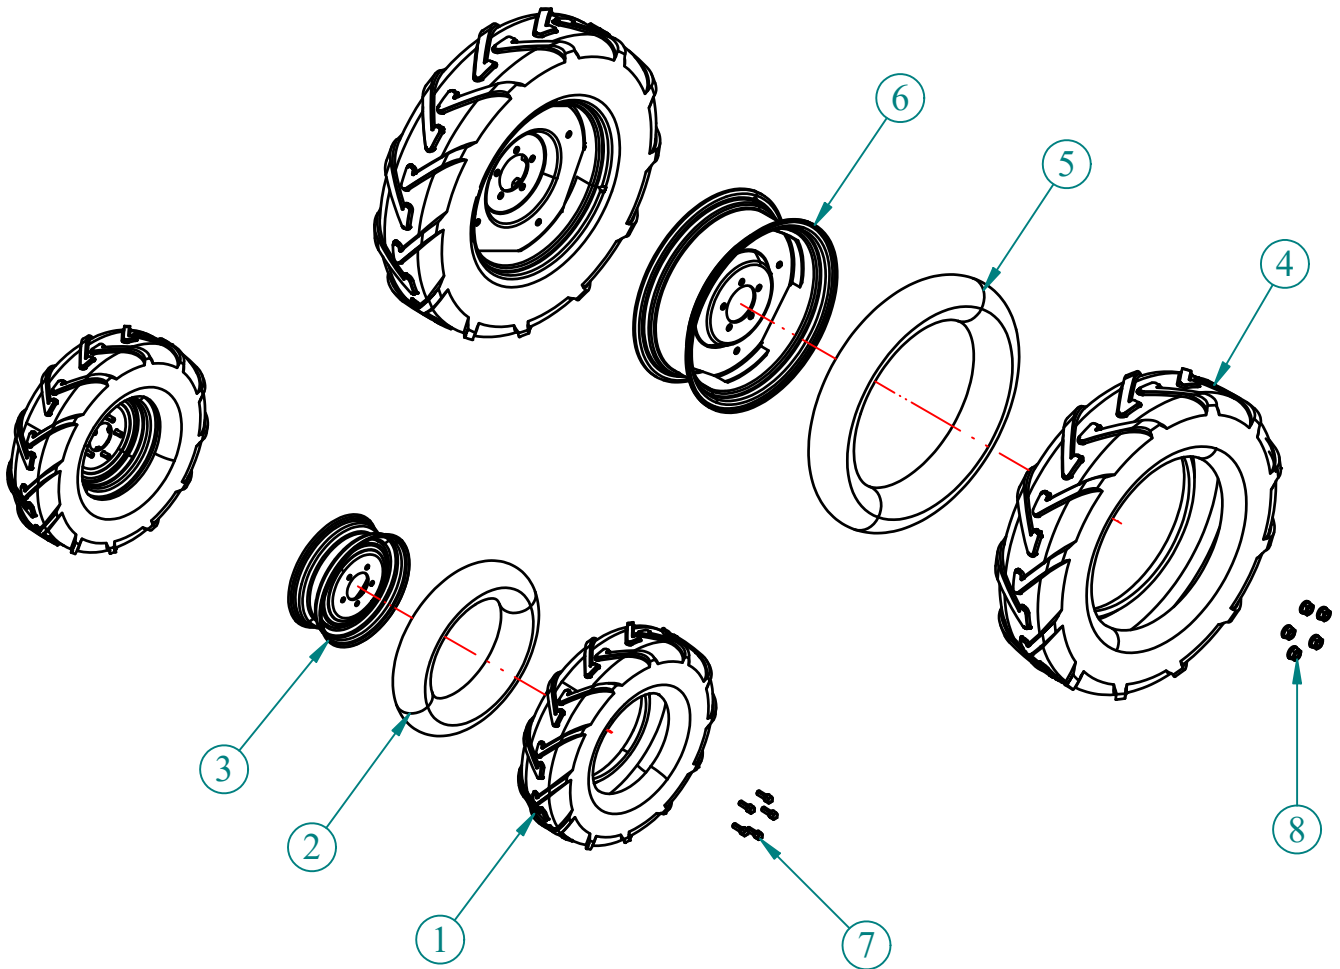


FRONT & REAR WHEEL ASSEMBLY

MODEL :- HST

ASSEMBLY NO. :-11305568

Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11404727	180/85D12 6PR BKT TR128 E TT	2	
2	11401878	TUBE- 6.00 X 12	2	
3	11403038	WHEEL RIM 4JA X 12	2	
4	11402459	TYRE, 8.3 X 20 (BKT)	2	
5	11402756	TUBE, REAR 8.3 x 20 (BKT)	2	
6	11401866	WHEEL RIM REAR - W7 x 20	2	
7	11501144	HEX BOLT 1/2" UNF 20 TPI [10.9]	10	
8	11202778	NUT FLANGE HEADED, REAR WHEEL	10	

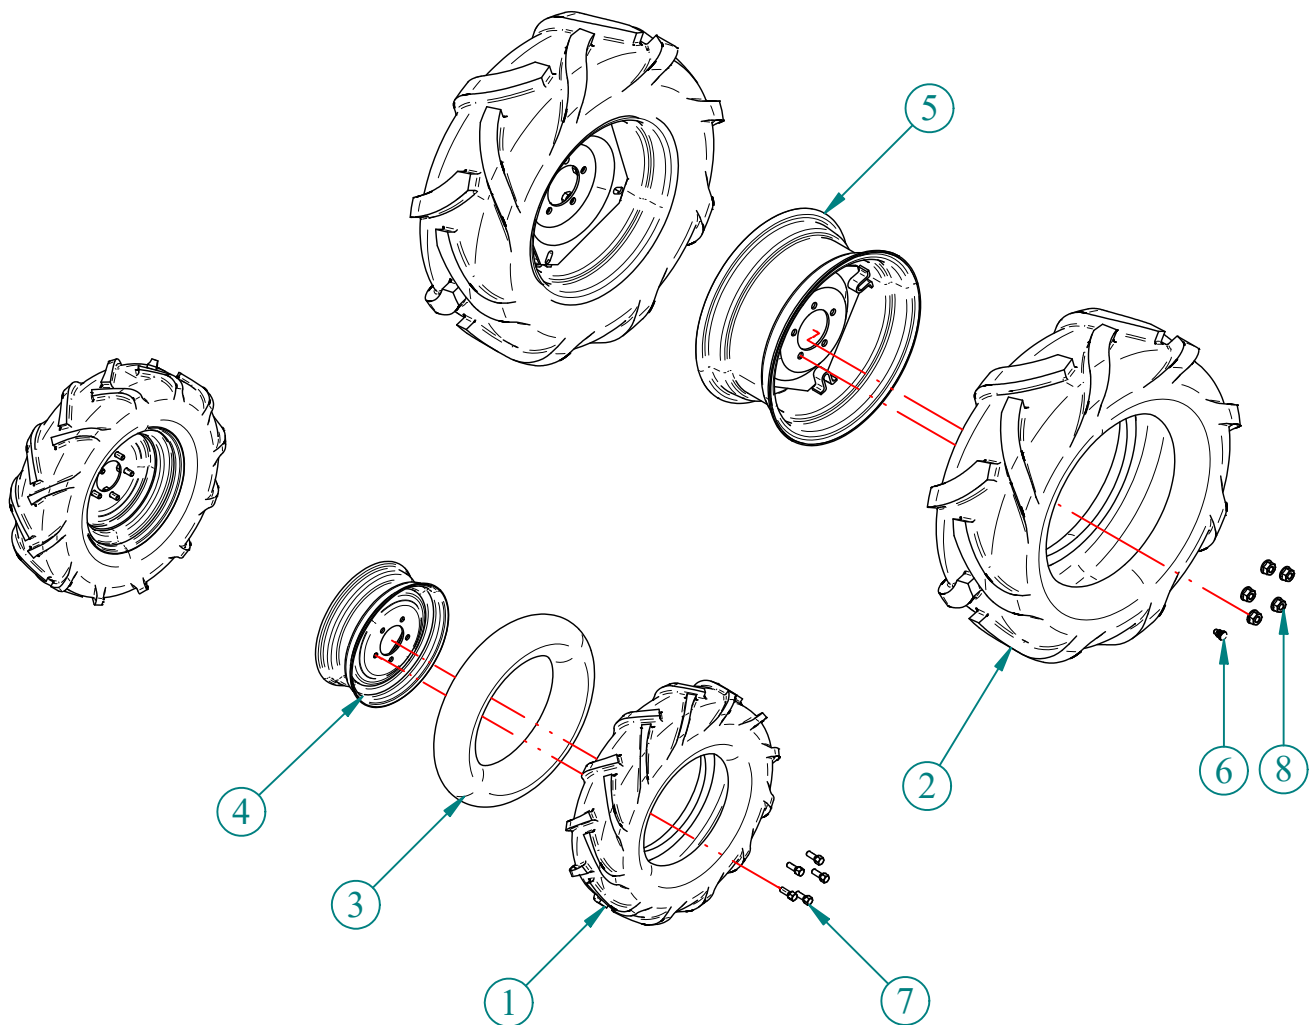 


FRONT & REAR WHEEL ASSY (AGRI-WHEEL)

MODEL :- HST

ASSEMBLY NO. :-11305630

Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11404729	6.5/80-12 6PR BKT AS504 HD E TT (Agri wider)	2	
2	11404726	280/70 AGRIMAX RT765 E 114A8/B (Agri Wider)	2	
3	11401878	TUBE- 6.00 X 12	2	
4	11403038	WHEEL RIM 4JA X 12	2	
5	11404707	WHEEL RIM -W9x18	2	
6	11402287	VALVE TR 618A	2	
7	11501144	HEX BOLT 1/2" UNF 20 TPI [10.9]	10	
8	11202778	NUT FLANGE HEADED, REAR WHEEL	10	

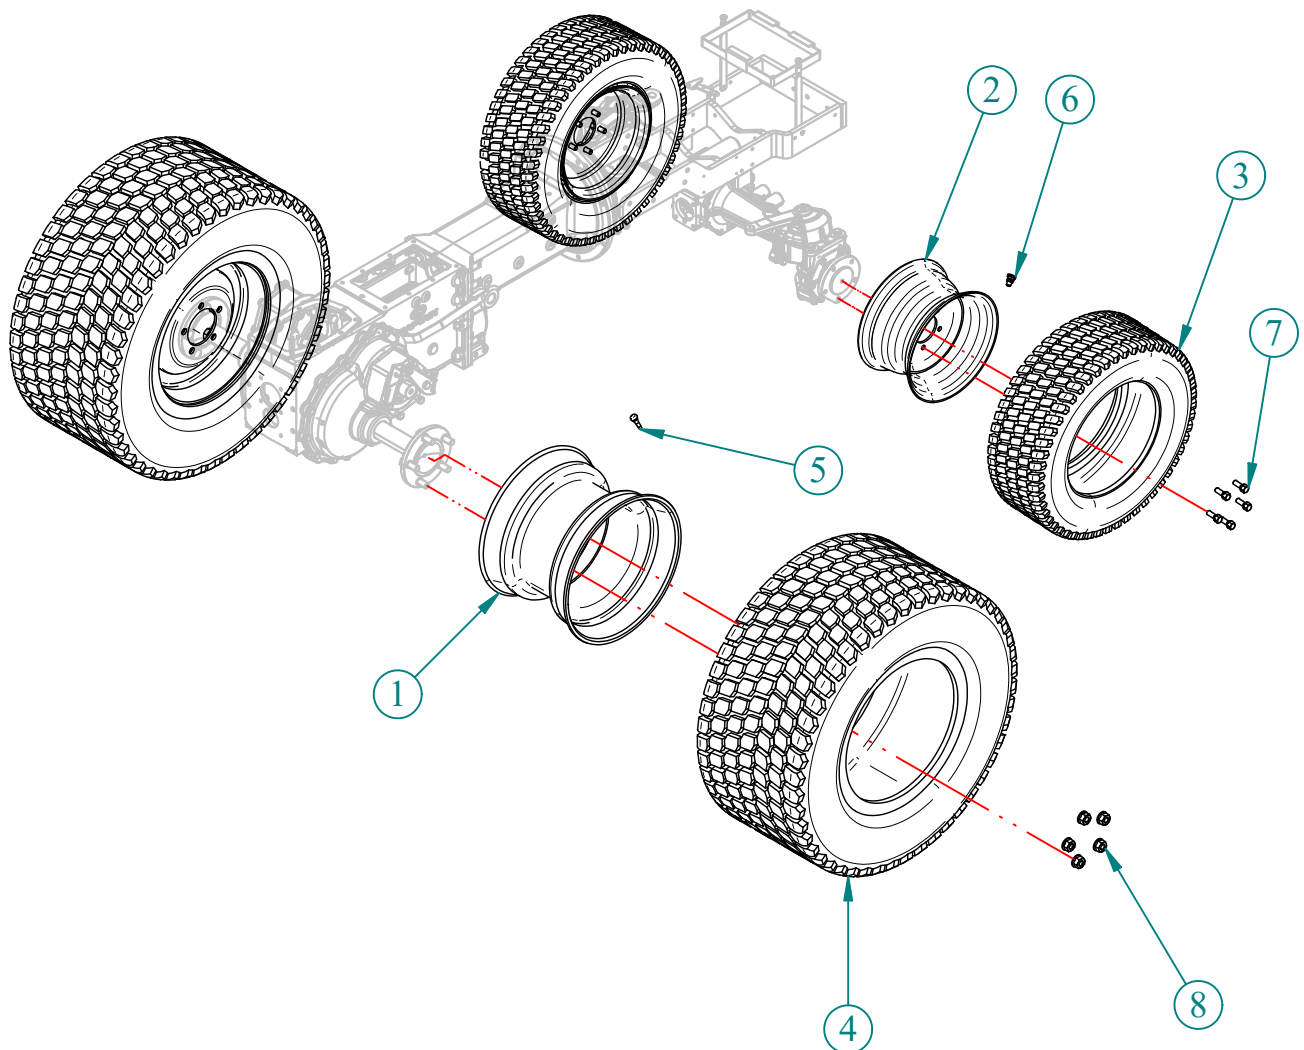 


FRONT & REAR WHEEL ASSY (TURF)

MODEL :- HST

ASSEMBLY NO. :-11305631

Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11402118	REAR TRACTOR WHEEL RIM - 16.5 X 12.00	2	
2	11402116	WHEEL RIM - 7.00 X 12	2	
3	11402112	TYRE 23 X 8.5-12 (TURF)	2	
4	11402114	TYRE 33 X 15.5-16.5 (TURF)	2	
5	11402309	VALVE TR 414	2	
6	11402287	VALVE TR 618A	2	
7	11501144	HEX BOLT 1/2" UNF 20 TPI [10.9]	10	
8	11202778	NUT FLANGE HEADED, REAR WHEEL	10	

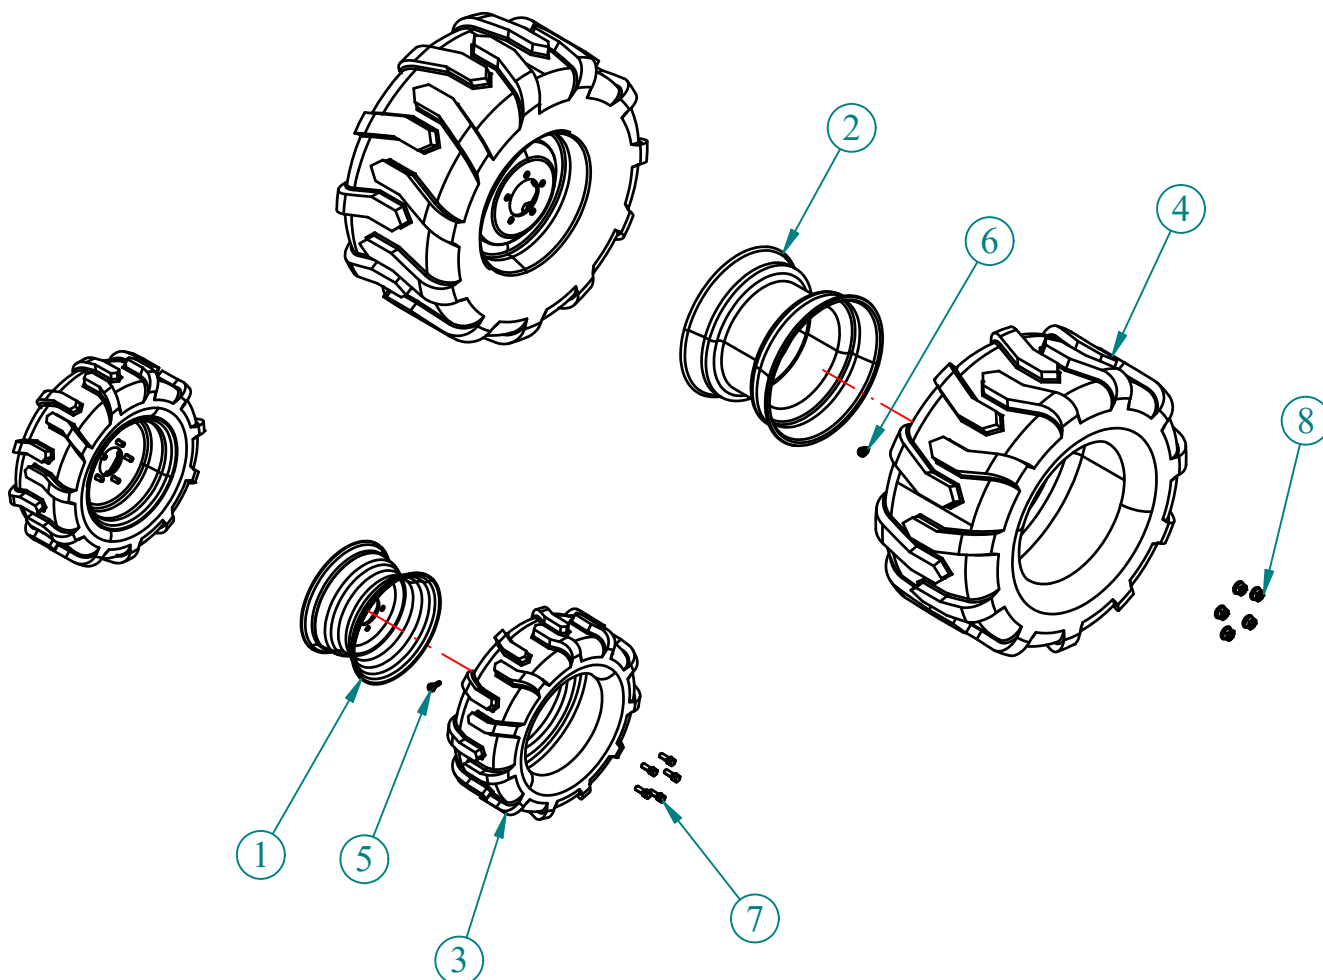 


FRONT & REAR WHEEL ASSY (FLOTATION)

MODEL :- HST

ASSEMBLY NO. :-11305632

Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11402116	WHEEL RIM - 7.00 X 12	2	
2	11402118	REAR TRACTOR WHEEL RIM - 16.5 X 12.00	2	
3	11402113	TYRE, 23x8.5-12 (FLOTATION)	2	
4	11404728	33x15.5-16.5 12PR BKT SKIDPOWER HD IND E TL	2	
5	11402309	VALVE TR 414	2	
6	11402287	VALVE TR 618A	2	
7	11501144	HEX BOLT 1/2" UNF 20 TPI [10.9]	10	
8	11202778	NUT FLANGE HEADED, REAR WHEEL	10	

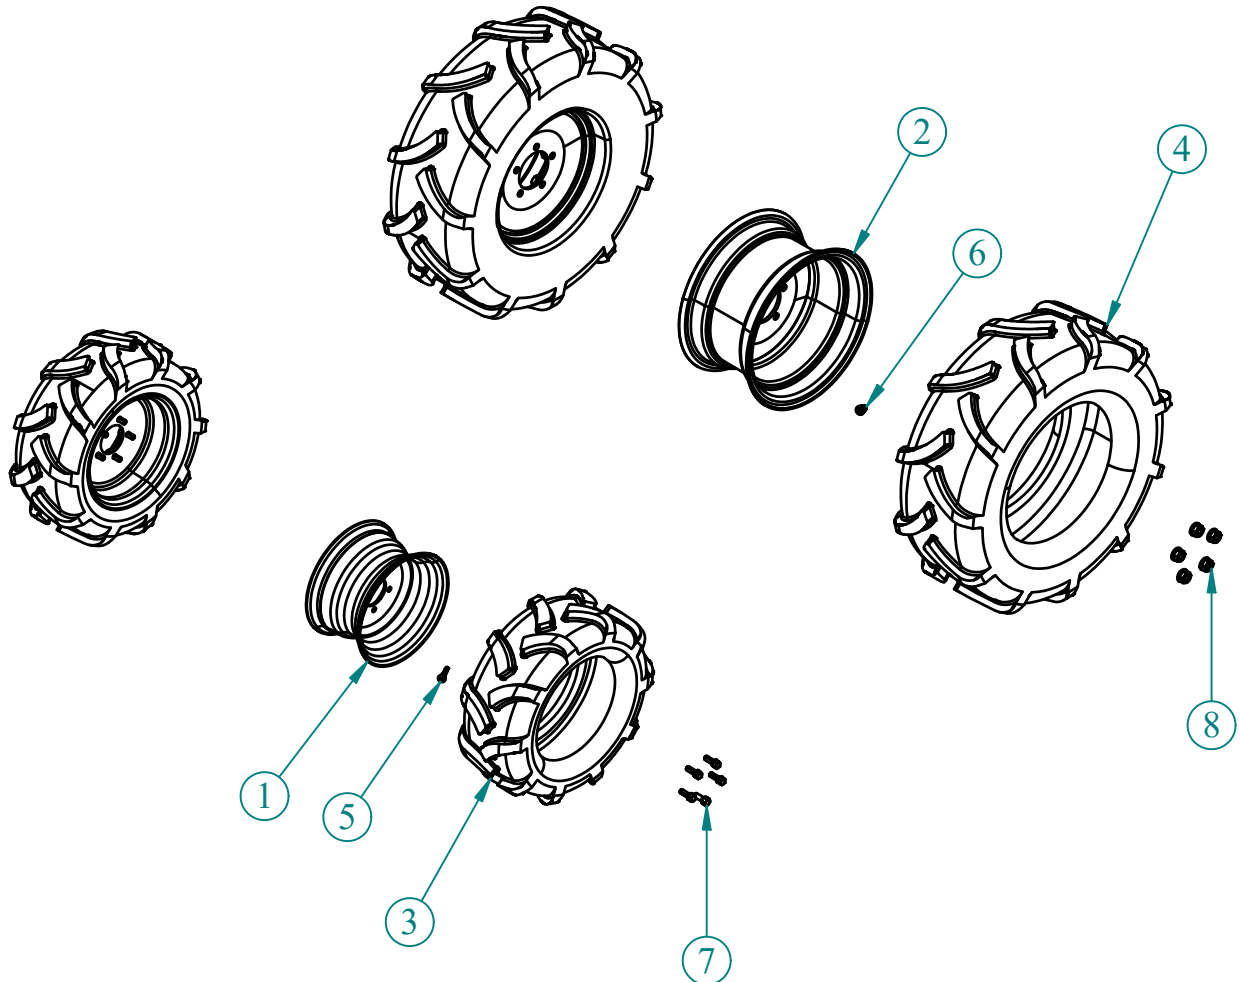 


FRONT & REAR WHEEL ASSY (GARDEN GALAXY PRO)

MODEL :- HST

ASSEMBLY NO. :-11305633

Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11402116	WHEEL RIM - 7.00 X 12	2	
2	11404853	WHEEL RIM -W9x16	2	
3	11404867	TYRE 220/55R12 (GALAXY GARDEN PRO)	2	
4	11404866	TYRE 280/70R16 (GALAXY GARDEN PRO)	2	
5	11402309	VALVE TR 414	2	
6	11402287	VALVE TR 618A	2	
7	11501144	HEX BOLT 1/2" UNF 20 TPI [10.9]	10	
8	11202778	NUT FLANGE HEADED, REAR WHEEL	10	

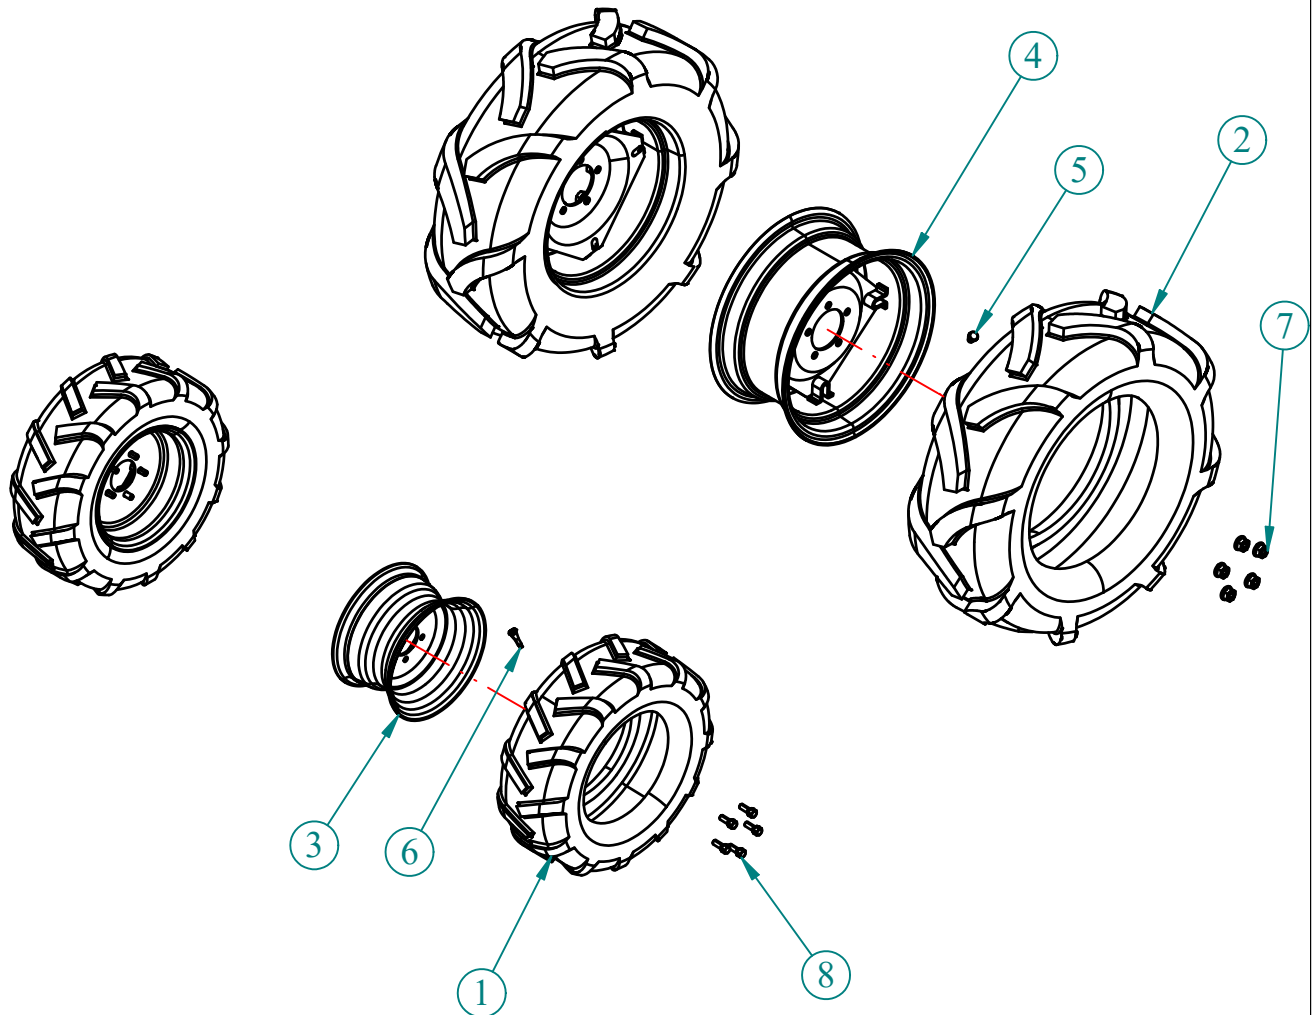 


FRONT & REAR WHEEL ASSY (WIDER F- AGRI)

MODEL :- HST

ASSEMBLY NO. :-11305634

Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11405088	23x8.50-12 6PR BKT TR315 TL (Agri Wider F)	2	
2	11404726	280/70 AGRIMAX RT765 E 114A8/B (Agri Wider)	2	
3	11402116	WHEEL RIM - 7.00 X 12	2	
4	11404707	WHEEL RIM -W9x18	2	
5	11402287	VALVE TR 618A	2	
6	11402309	VALVE TR 414	2	
7	11202778	NUT FLANGE HEADED, REAR WHEEL	10	
8	11501144	HEX BOLT 1/2" UNF 20 TPI [10.9]	10	

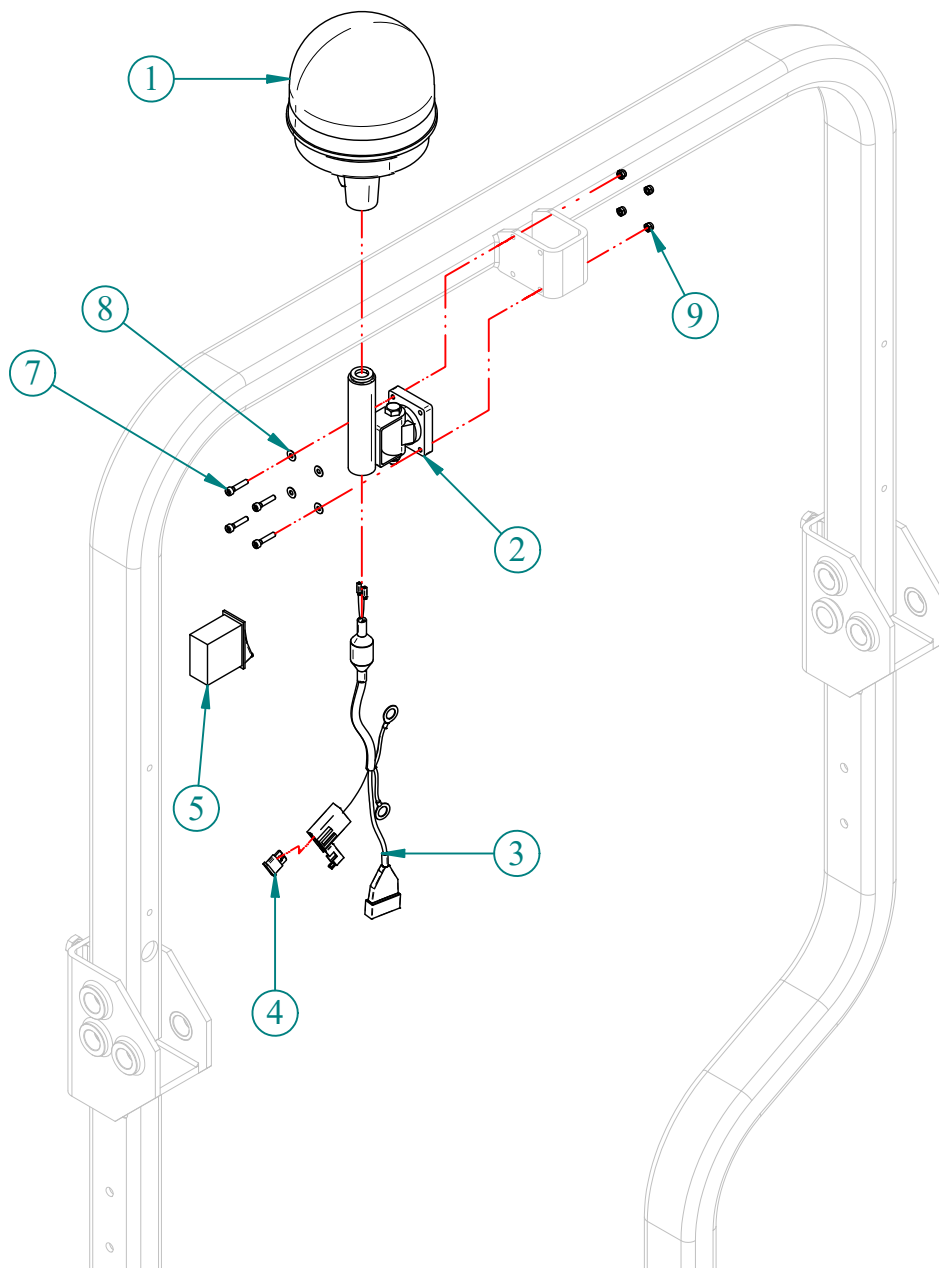 


BEACON LAMP ASSEMBLY

MODEL :- HST

ASSEMBLY NO. :-11306708

Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11402084	BEACON LAMP ASSEMBLY	1	
2	11403057	MOUNTING STAND ASSY. (BEACON LAMP)	1	
3	11403164	WIRING HARNESS ASSEMBLY	1	
4	11405800	FUSE 10A	1	
5	11406412	SWITCH -BEACON	1	
6	11408302	BEACON LAMP WIRING HARNESS (HST)	1	
7	11503159	ALLEN BOLT M4x20	4	
8	11503166	PLAIN WASHER Ø4 x Ø10 x 0.5	4	
9	11505137	NYLOCK HEX. NUT M4	4	


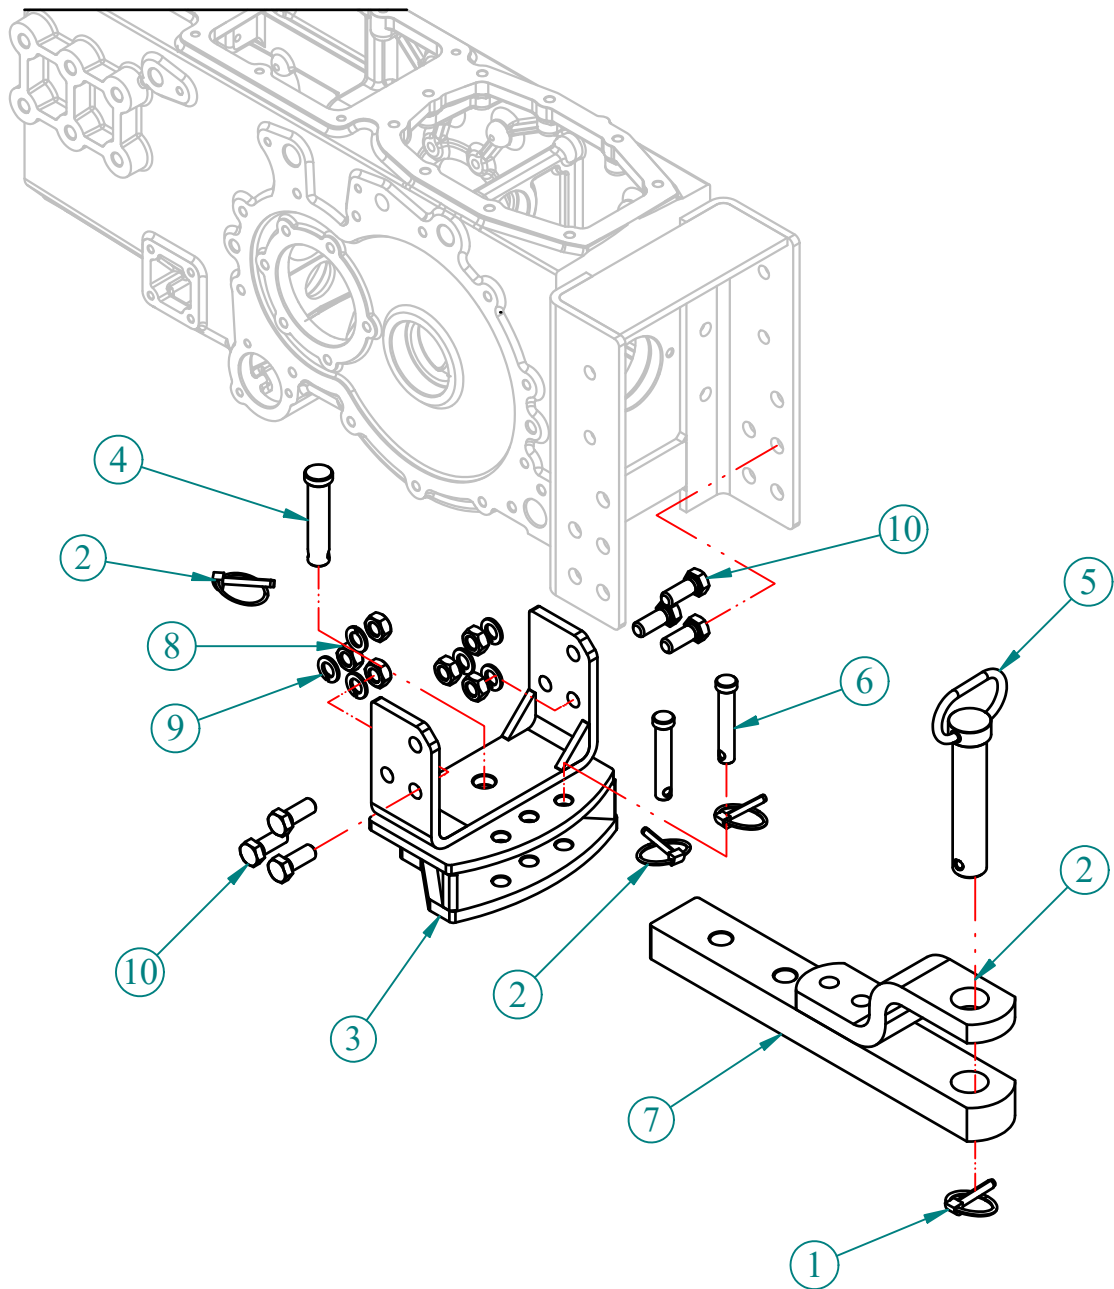 


SWING DRAWBAR ASSEMBLY


MODEL :- HST

ASSEMBLY NO. :-11306699

Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11200590	LINCH PIN	1	
2	11201300	LINCH PIN (SMALL)	3	
3	11206639	BRACKET TOW HOOK	1	
4	11206640	HITCH PIN TOW HOOK	1	
5	11206643	HITCH PIN REAR COUPLE	1	
6	11206644	HITCH PIN Ø14	2	
7	11207264	TOW HOOK	1	
8	11501822	NUT M14 X 1.5 P	6	
9	11501826	SPRING WASHER - 14mm	6	
10	11506838	HEX BOLT_ M14x35 (10.9)	6	

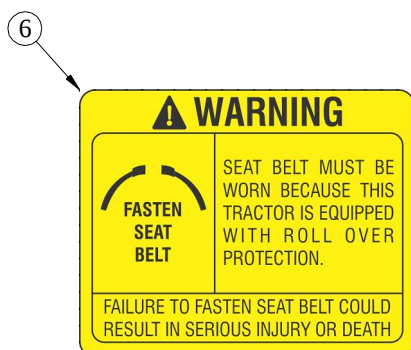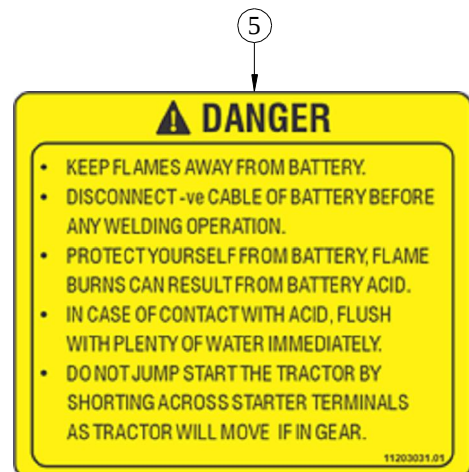  


8

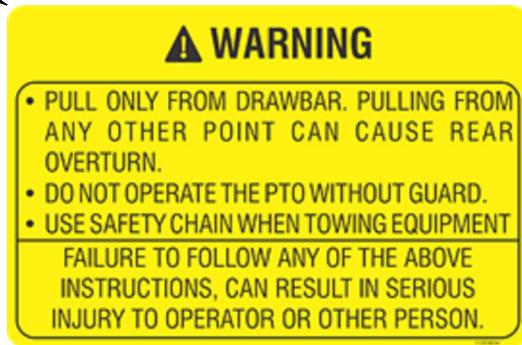 

9



 10

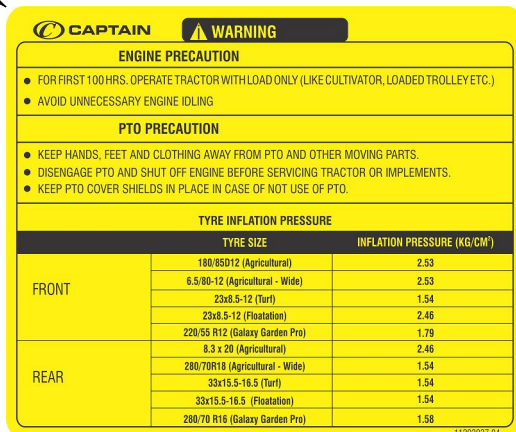

11



 
12




13




14

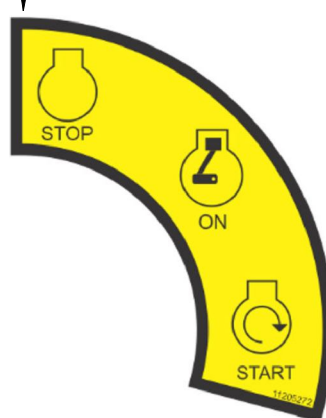


15

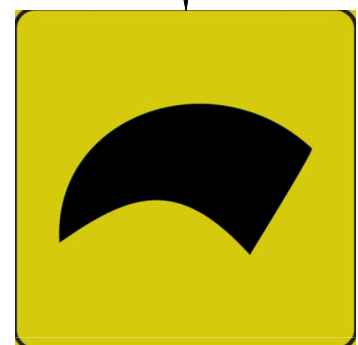 

16

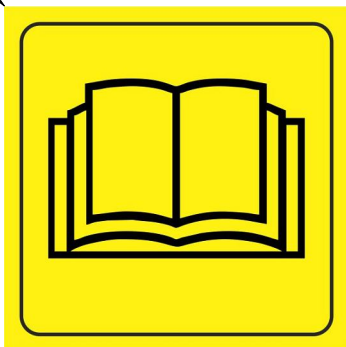 


17

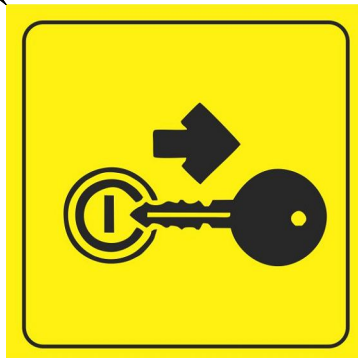 

18



 19

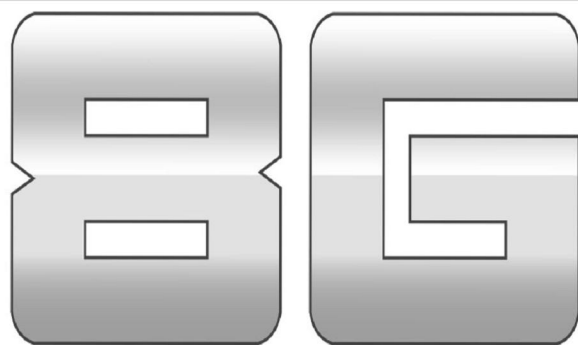

20



21



22

FINAL APPROVAL	
Product Code :	_____
Date :	Sign : _____
CAPTAIN TRACTORS PVT. LTD. T 1006105/00	


23

PRE DELIVERY INSPECTION	
Date :	Sign : _____

24



 25

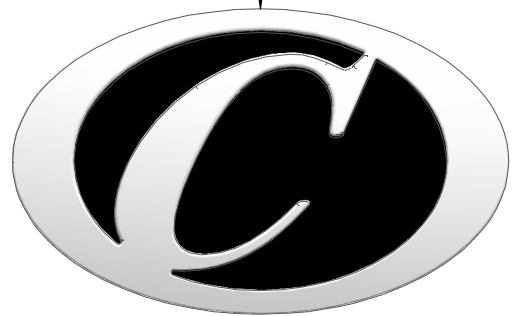

26



27

SERVICE INSTRUCTIONS

1. CLEAN THE PRIMARY FILTER ELEMENT AFTER EVERY 250 HRS OF OPERATION OR IMMEDIATELY WHEN THE RED BAND APPEARS ON THE SERVICE INDICATOR.
2. NEVER REMOVE THE SECONDARY ELEMENT FOR CLEANING. ONLY REMOVE WHEN REPLACEMENT OF IT IS REQUIRED.
3. REPLACE PRIMARY & SECONDARY ELEMENT UPON 3RD CLEANING REQUIREMENT OF THE PRIMARY ELEMENT OR AT 750 HOURS (WHICHEVER OCCURS EARLIER).
4. GENTLY PULL FILTER ELEMENT BACKWARDS TO REMOVE FILTER OUT FROM HOUSING.

CAUTION:

 
 
 
 
5. CLEAN PRIMARY ELEMENT ONLY BY TAPPING VERTICALLY ONLY ON CLEAN FLOOR. DON'T TAP DIAGONALLY/AT AN INCLINED ANGLE.
6. SECONDARY ELEMENT SHOULD NOT BE CLEANED OR REMOVED DURING CLEANING OF PRIMARY ELEMENT.
7. USE CLEAN CLOTH TO WIPE SEALING AREAS OF FILTER ELEMENT WITHOUT REMOVING SECONDARY ELEMENT.
8. ENSURE PROPER SEATING OF FILTER INTO HOUSING BEFORE LATCHING THE COVER. DO NOT USE LATCHES ON THE COVER TO FORCE THE FILTER INTO AIR CLEANER WHICH COULD CAUSE DAMAGE TO HOUSING AND WILL VOID THE WARRANTY.
9. THE VACUATOR VALVE SHOULD ALWAYS BE IN PERFECTLY DOWNWARD DIRECTION.

WARNING

- COOLING SYSTEM REMAINS UNDER PRESSURE.
- DO NOT REMOVE RADIATOR CAP WHEN SYSTEM IS HOT.
- ALWAYS TURN THE CAP SLOWLY AND ALLOW PRESSURE TO ESCAPE BEFORE REMOVING THE CAP COMPLETELY.
- WHEN OPERATING BELOW 0°C, USE SUITABLE ANTIFREEZE WITH WATER.


112030300

28

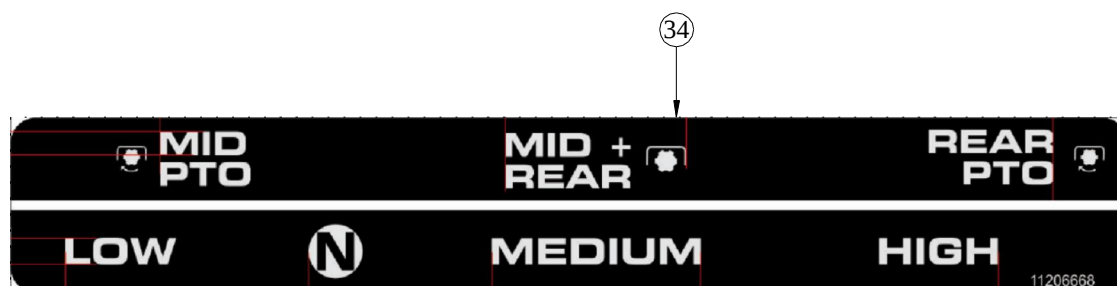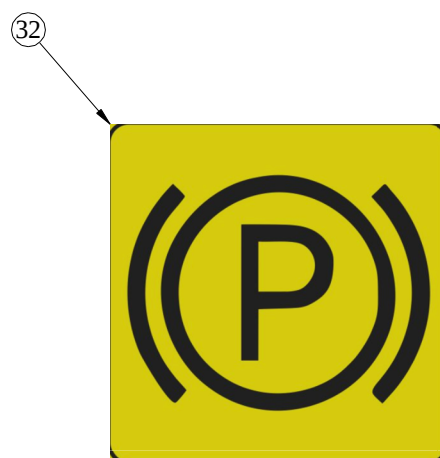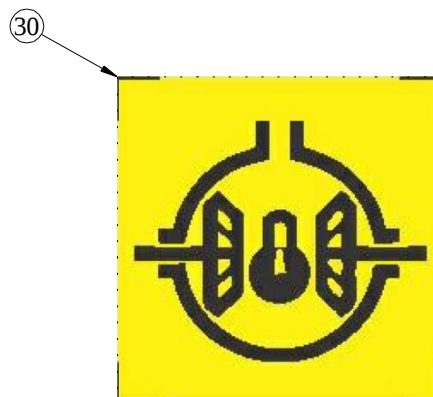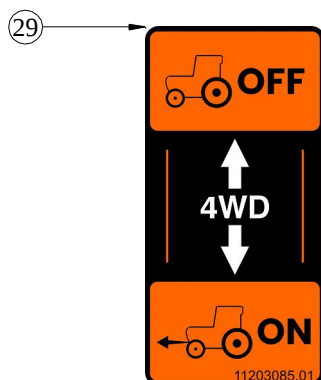



35

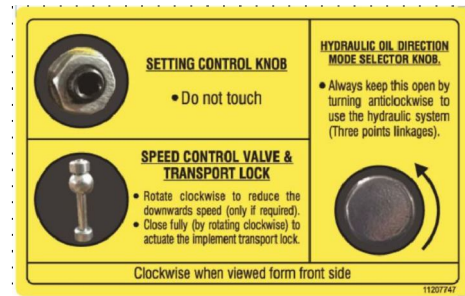 

37

HYDROSTATIC TRANSMISSION

36


38



DECALS & STICKERS

MODEL :- HST
ASSEMBLY NO. :- 11306707

SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11206666	DECALS "263 H"	2	
2	11202140	Decals 3D ""CAPTAIN""	2	
3	11202144	DECALS, "4X4"	2	
4	11203288	STICKER, OIB	1	
5	11203031	STICKER BATTERY (273)	1	
6	11203032	STICKER SEAT (273)	1	
7	11203033	STICKER WARNING (273)	1	
8	11203034	STICKER DRAWBAR (273)	1	
9	11203036	STICKER SAFETY INSTRUCTION (273)	1	
10	11203037	STICKER TYRE INFLATION PRESSURE (273)	1	
11	11203077	STICKER JACK POINT	3	
12	11204972	STICKER POSITION LEVER	1	
13	11203079	STICKER PTO SAFETY	1	
14	11205272	STICKER IGNITION	1	
15	11203083	STICKER HAND THROTTLE LEVER	1	
16	11203086	STICKER READ OPERATOR MANUAL	1	
17	11203087	STICKER BONNET LOCK	1	
18	11202768	STICKER, WARNING SIGNAL	1	
19	11205198	DECAL 8G	2	
20	11205398	THE EIGHT GENERATION (DOME) LABEL	2	
21	11208950	DECALS (STAGE -V)	2	
22	11205165	STICKER, FINAL APPROVAL	1	
23	11205164	STICKER, PRE DELIVERY INSPECTION	1	
24	11204826	DECALS DIFFENTIAL LOCK (STAGE -V)	1	
25	11203258	""3D ""C"" EMBLEM"	1	
26	11204827	DECALS MITSUBISHI (STAGE -V)	2	
27	11203018	INSTRUCTION STICKER DRY AIR CLEANER	1	
28	11203030	STICKER RADIATOR (273)	1	
29	11209280	STICKER 4WD-2WD	1	
30	11203287	STICKER DIFFERENTIAL LOCK (3+1)	1	
31	11203088	STICKER MOVING PART WARNING	1	
32	11203078	STICKER PARKING BRAKE	1	
33	11207742	DECAL REAR COUPLING	1	
34	11206668	STICKER, HML & PTO	1	
35	11208656	DECALS, PTO INTENTIONAL SWITCH	1	
36	11208455	DECALS HYDROSTATIC TRANSMISSION	2	
37	11207747	STICKER PRV INSTRUCTION	1	
38	11204878	STICKER - KEEP HEAD AWAY WHILE CLOSING THE BONNET	1	

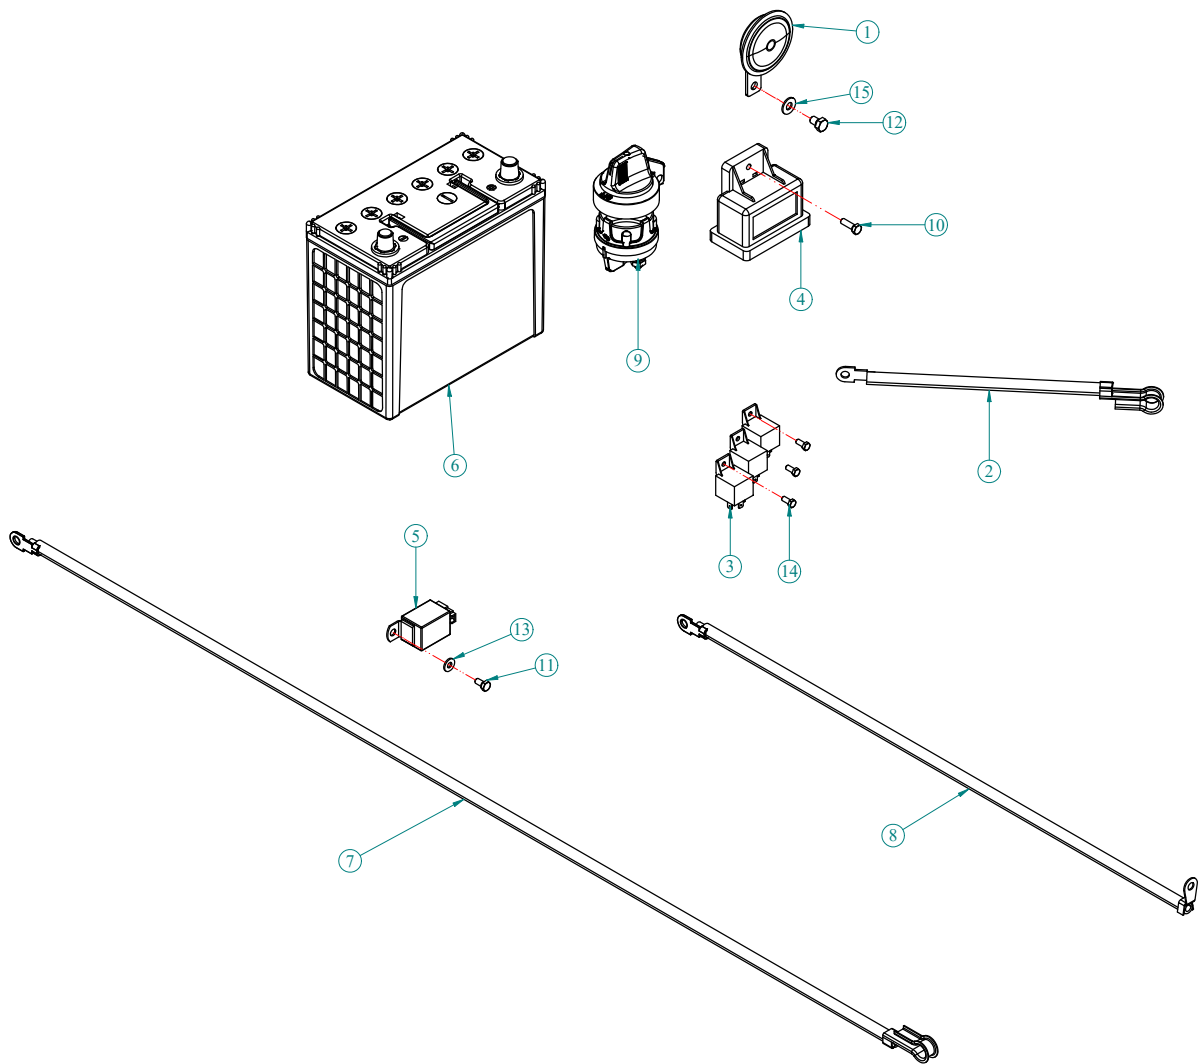 


ELECTRICAL COMPONENT 1

MODEL :- HST

ASSEMBLY NO. :- 11306711

SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11401992	HORN 12V	1	
2	11402775	BATTERY CABLE SMALL	1	
3	11404773	RELAY 70A	3	
4	11404993	GLOW DURATION UNIT	1	
5	11405124	ELECTRONIC FLASHER-LED	1	
6	11406456	BATTERY 55B24RS	1	
7	11407748	BATTERY CABLE 1350-L	1	
8	11407749	BATTERY CABLE 750-L	1	
9	11407750	Switch Battery cut-off (LF)	1	
10	11500426	HEX. BOLT M6x20 (F.T.)8.8	1	
11	11500484	HEX. BOLT M6 X 12 (F.T.)	1	
12	11500489	HEX BOLT M8 X 12 (F.T.)	1	
13	11501015	PLAIN WASHER Ø6.5xØ15x1.5	1	
14	11501034	HEX. BOLT M5x12 (F.T.) 8.8	3	
15	11501068	PLAIN WASHER Ø8.5XØ19X1.5	1	

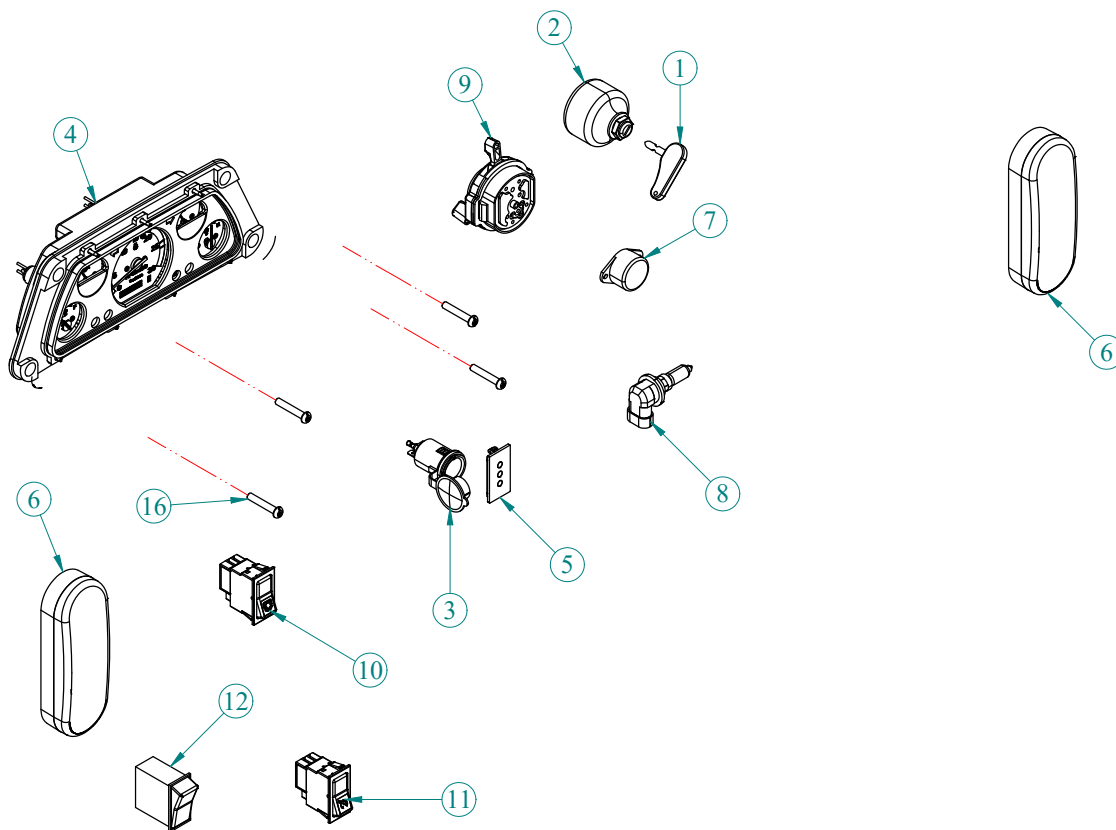 


ELECTRICAL COMPONENT 2

MODEL :- HST

ASSEMBLY NO. :- 11308342

SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11201991	KEY (MOULDED) STARTER SWITCH	1	
2	11401990	STARTER SWITCH ASSEMBLY	1	
3	11401995	MOBILE CHARGER SOCKET (12V PLUG)	1	
4	11402490	INSTRUMENT CLUSTER (273)	1	
5	11404730	LED INDICATOR	1	
6	11405080	FENDER LAMP ASSEMBLY - FRONT (LED)	2	
7	11405138	BUZZER	1	
8	11405372	BULB HB3 12V 60W	1	
9	11405408	PANEL MOUNTED COMBINATION SWITCH ASSEMBLY (L)	1	
10	11406410	SWITCH-PTO	1	
11	11406411	SWITCH-CRUISE CONTROL	1	
12	11406413	WORK LAMP SWITCH	1	
13	11406414	SWITCH-HAZARD WARNING	1	
14	11408303	ELECTRONIC CONTROL UNIT(ETS-TYPE)-HST	1	
15	11408655	PTO INTENTIONAL SWITCH	1	
16	11502176	SCREW M6 X 35	4	

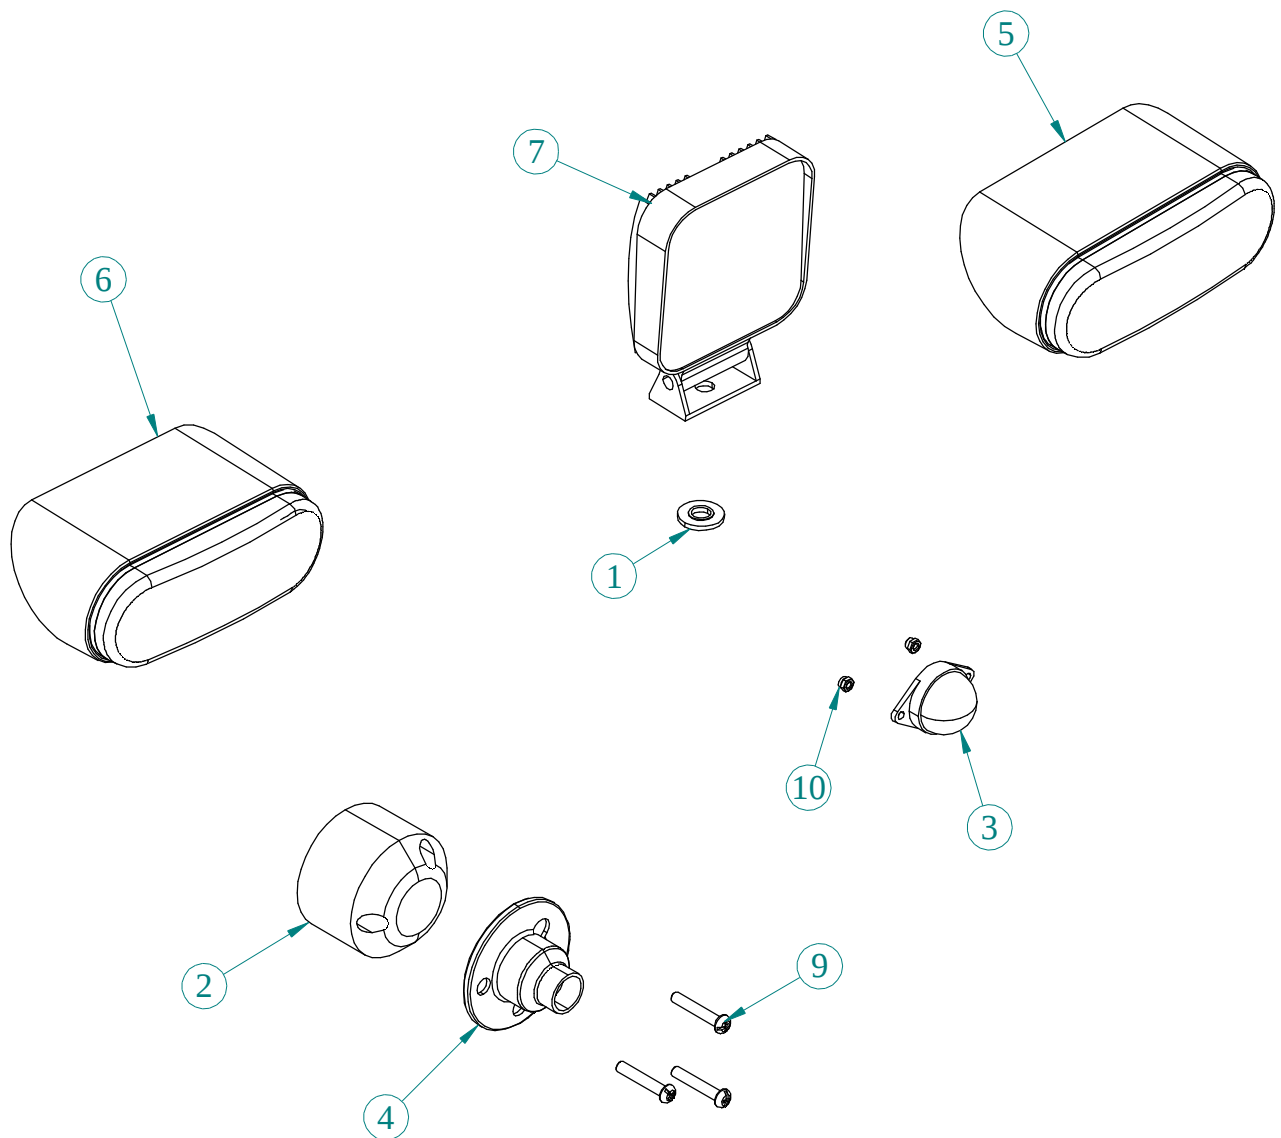 


ELECTRICAL COMPONENT 3

MODEL :- HST

ASSEMBLY NO. :- 11306705

SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11205509	SPECIAL WASHER PLOUGH LIGHT MOUNTING	1	
2	11400541	SEVEN PIN SOCKET	1	
3	11402085	LICENSE LAMP PLATE 12V-10W	1	
4	11404768	RUBBER COVER SEVEN PIN SOCKET	1	
5	11405081	FENDER LAMP ASSEMBLY-REAR LH (LED)	1	
6	11405082	FENDER LAMP ASSEMBLY-REAR RH (LED)	1	
7	11405204	LED PLOUGH LAMP ASSY.(12V)	1	
8	11406657	WIRING HARNESS ASSEMBLY	1	
9	11502176	SCREW M6 X 35	3	
10	11505137	NYLOCK HEX. NUT M4	2	

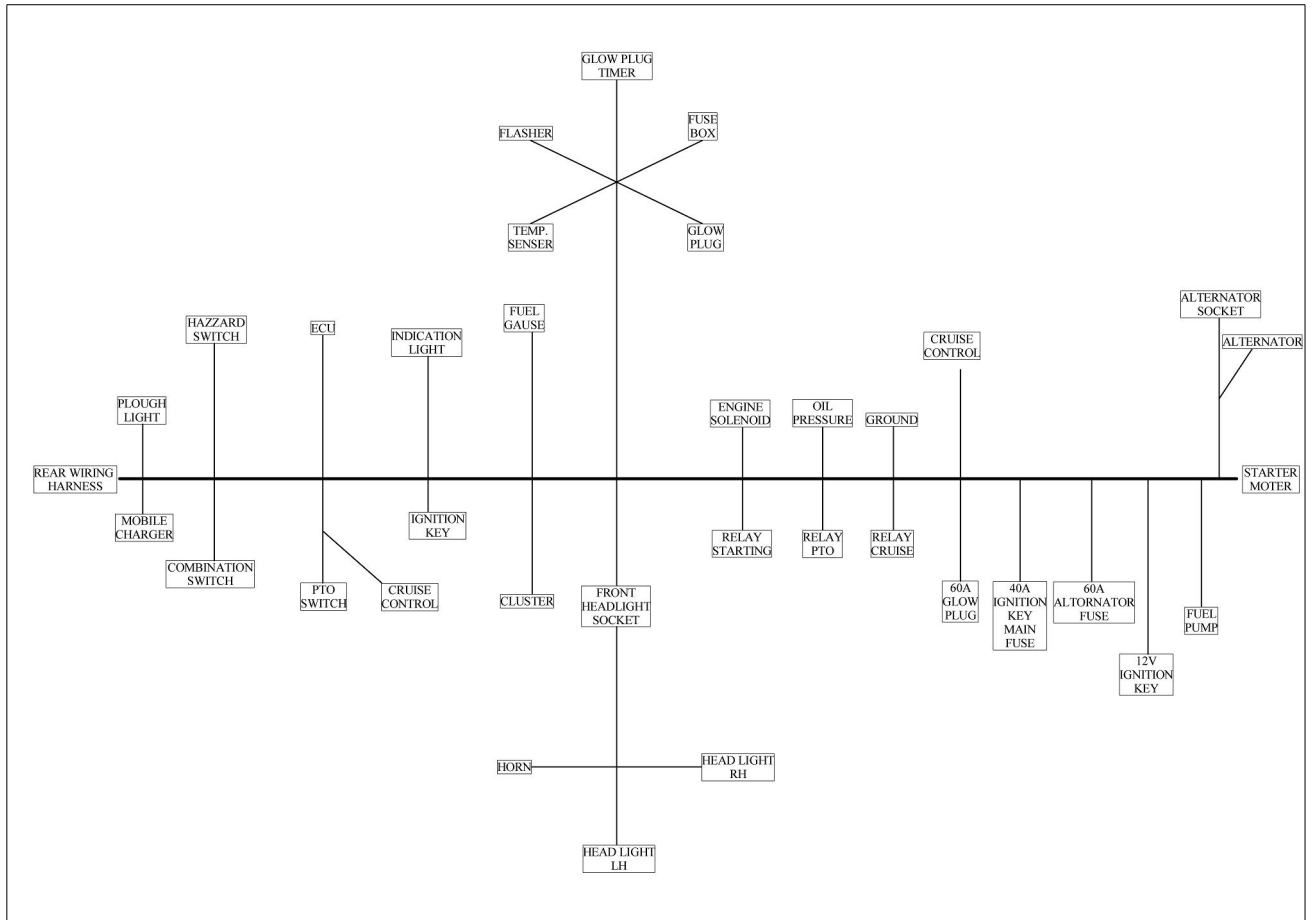 

8

